



OUTLAW[®]

S E R I E S

Installation Instructions

817740

2015-21 DODGE CHALLENGER
R/T SCAT PACK, SRT 392 & SRT HELLCAT
6.2L & 6.4L ENGINE
2017-20 5.7L ENGINE

OVERVIEW:

1. Take a moment to read and understand these instructions before installing your Flowmaster performance system.

NOTE: Please inventory all parts now before continuing and if necessary, report any missing items to our tech line. This will avoid potentially stranding your vehicle until any missing replacement parts arrive.

ITEM #	PART #	DESCRIPTION	QTY.
1	26522S	Scavenger Pipe	1
2	26526S	Left Tailpipe	1
3	26527S	Right Tailpipe	1
4	15430-253	Outlaw Muffler	2
N/A	PK799	Hardware Package includes:	1
5	MC234BS	2 $\frac{3}{4}$ " Stainless Band Clamp	2

ITEM #	PART #	DESCRIPTION	QTY.
6	MC300BS	3" Stainless Band Clamp	6
7	HW502	$\frac{7}{16}$ " Hanger Keepers	2
8	HW512	10-32 x $\frac{1}{2}$ " Standoff	6
9	HW514	10-32 x $\frac{3}{4}$ " Standoff	6
10	HW240	#10-32 x $\frac{3}{4}$ " Screw	6
11	HW241	#10-32 x $\frac{3}{8}$ " Screw	6
12	HW315	#10 Flat Washer	18
N/A	PK1051	5.7L Adapter Package includes:	1
13	TB933S	2 $\frac{1}{2}$ " - 3" Adapter	2
14	MC250BS	2 $\frac{1}{2}$ " Stainless Band Clamp	2

REMOVE STOCK EXHAUST SYSTEM:


2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.

WARNING:

Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

To ease preparation and installation of your new kit:

- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle and again as you install new parts.

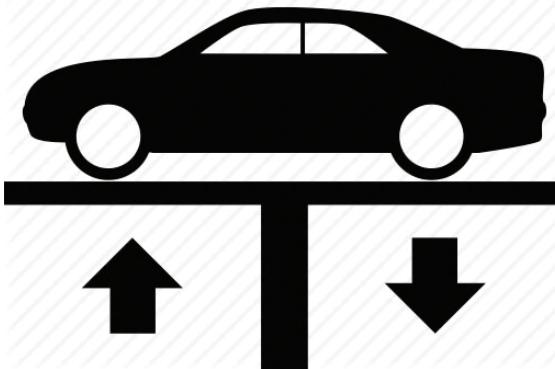


3. Unplug wires from exhaust valve actuators on side of each tailpipe. Remove two hangers (3 on SRT 392) from isolators and unclip grounding strap from right rear hanger. Loosen clamps behind catalytic converters, then with an assistant, carefully remove exhaust from vehicle.



4. Remove (x3) nuts securing actuator to mounts then remove actuator and spring from mount on each tailpipe.



5. To install this kit properly, use standoffs sized to your vehicles' actuator valve springs (pictured below).

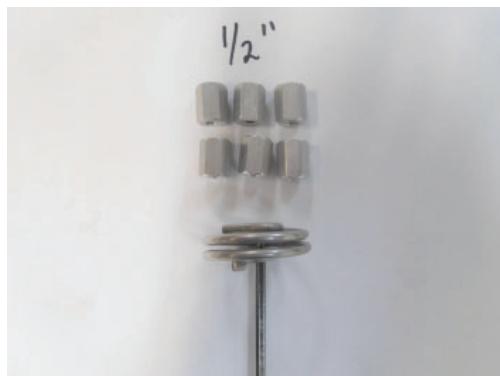

INSTALL FLOWMASTER EXHAUST SYSTEM:

6. Remove nuts from stock and Flowmaster clamps, apply anti-seize compound to bolts and re-install nuts.

NOTE: The image in this step is intended for illustrative purposes only and may or may not accurately reflect components included in your kit.




7. Complete step for all bracket holes in both tailpipes: hand-tighten **screw (11)** through tailpipe bracket, (x2) **flat washers (12)** and **standoff (8 or 9)**.



8. Complete step on both actuators and tailpipes: Place actuator on mount, with spring oriented between tabs then loosely attach it using (x3 ea.) **screw (10)** and **flat washer (12)**.




9. Complete step on both actuators and tailpipes: Ensure center arm of actuator spring sets between top and bottom mount tabs, then tighten (x3) screws securely.

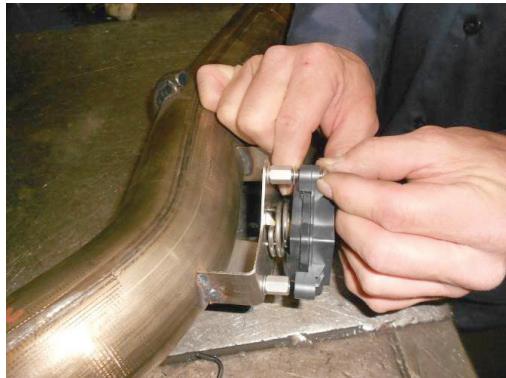

WARNING: Complete this step **ONLY** to adapt kit for 2017-20 model year vehicles with 5.7L engine. Otherwise, skip to step 11.


10. Trim off reduction end of **scavenger pipe (1)** then fit both **adapters (13)** onto it with two **clamps (6)**. Fasten assembly onto factory head pipes with two **clamps (14)** (offset outlet pipe oriented to passenger side).

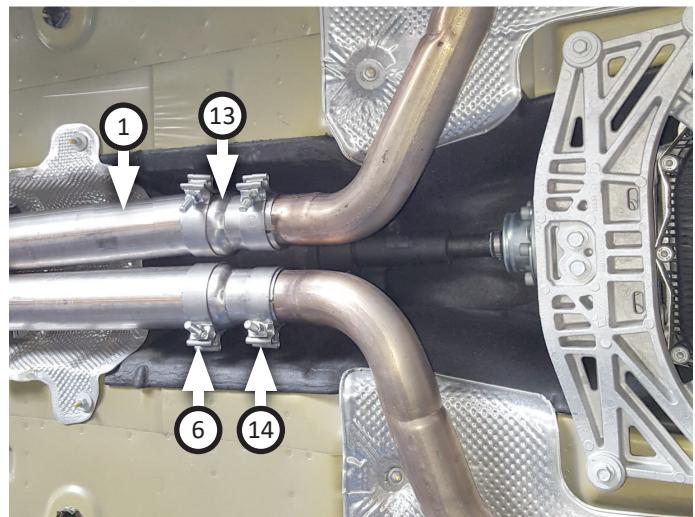

11. Place (x2) **clamps (5)** onto **scavenger pipe (1)** inlets then connect it to head pipes with offset outlet pipe oriented to passenger side). Level and center assembly in drive line tunnel then tighten clamps enough to hold parts.



12. Place (x2) **clamps (6)** onto both **muffler (4)** inlets then connect them to scavenger pipe, sliding them $1\frac{3}{4}$ " deep. Level mufflers and tighten clamps just enough to hold parts but still allow for adjustment.

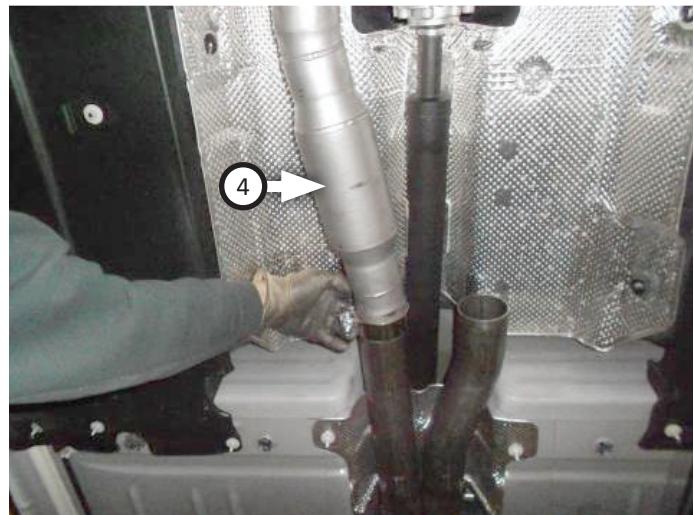

NOTE: Complete this step for **right (3)** tailpipe as well.

13. Place **clamp (6)** onto left muffler then connect **left tailpipe (2)** to it while inserting hangers into isolators. Adjust tailpipe so tip is level and centered in bumper cut-out then tighten clamp just enough to hold parts.

NOTE: The middle hanger on SRT 392 models will not be used and can be removed if desired.

14. Reconnect both actuators (disconnected step 3) on new Flowmaster tailpipes.
15. Adjust exhaust components for fit; maintaining $\frac{1}{2}$ " clearance and compensating for suspension, travel and vibration, then tighten all clamps. Reconnect grounding clip to rear hanger on right tailpipe then fit (x2) **hanger keepers (7)** onto each sideways hanger.



16. Recommended: Secure slip-fit connections with a 1-inch tack weld then spray high-temp paint over each weld to prevent rust and premature corrosion.

Congratulations, the installation of your FLOWMASTER performance exhaust system is now complete!





OUTLAW[®]

S E R I E S

Installation Diagram

817740
2015-21 DODGE CHALLENGER
R/T SCAT PACK, SRT 392 & SRT HELLCAT
6.2L & 6.4L ENGINE
2017-20 5.7L ENGINE

