

Diamond Tread Dually Mud Flap Set

Installation Instructions

D70764SET

Dodge Ram Dually
'03 - '13



Diagram 1

Parts List:

- 2 - Mud Flaps
- 2 - Diamond Plate Weights
- 10 - 1/4" x 1" Nylon Push Rivets
- 8 - Metal Rivets
- 8 - #10 Washers

**May include extra hardware.*

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Center the diamond plate weight between the square corners of the flap and on the inset side(not smooth) of the flap. The recommended weight position is shown in **Diagram #1 and #2**. Mark the mud flap where the four holes in mud flap and diamond plate are. Set the diamond plate to the side. Use a 1/4" drill bit to drill holes in the just marked spots on the mud flap.
3. Place the diamond tread back on to the mud flap and use (4) rivets and (4) #10 washers per mud flap to rivet the diamond plate to the flap. The rivets need to be inserted through the diamond plate first then the mud flap, place a (1) #10 washer on the backside of each rivet before compressing the it.
4. Place the mud flap at the desired height in the rear inner fender well with the two rounded corners on the top and the diamond plate facing the rear of the truck.
5. This step will require the use of a 1/4" drill bit. While referring to **Diagram #3**, hold a mud flap in place and drill (4) holes through the mud flap and plastic inner fender panel, in a square shape. Drill (1) more hole directly in the middles of the previous (4). Make sure the flap is in the desired position and level. Take into consideration when the truck is loaded down in rear, it may lower the rear of the it some, which can cause the flaps to contact the ground if placed too low. Sometimes the rubber flap will not drill clean hole, and will need to have the holes reamed with the drill bit to fit the rivets in.
6. Place (1) Plastic rivet into each of the (5) holes drilled through the mud flap and inner fender. Push the pin in the center of the rivet in all the way into the rivet, making sure it locks in.
7. Repeat the above steps for the opposite side mud flap installation.

Diamond Tread Dually Mud Flap Set

Installation Instructions

D70764SET

Dodge Ram Dually
'03 - '13

D70764SET Diamond Plate



Diagram 2

70764 Mud Flap Installed

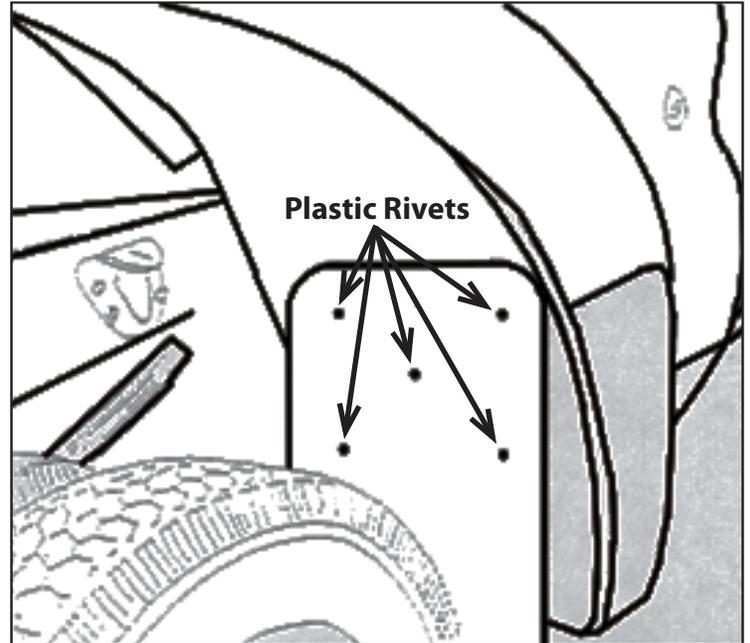


Diagram 3