

PUBLIC SAFETY DIVISION GO RHINO! PRODUCTS

PARTITION INSTALLATION INSTRUCTIONS

2011 Dodge Charger / Part Number 570420

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST

QTY PART DESCRIPTION

1	5700W Partition Assembly
1	57761 Driver B-Pillar Bracket
1	57762 Passenger B-Pillar Bracket
1	57711 Driver Lower Filler Panel
1	57712 Passenger Lower Filler Panel
1	57721 Driver Upper Filler Panel
1	57722 Passenger Upper Filler Panel

QTY PART DESCRIPTION

1	57772 Passenger Foot Bracket Assembly
1	57771 Driver Foot Bracket Assembly
6	1/4" X 3/4" Flange Head Socket Screw
2	3/8" Flat Washer
2	3/8" X 1" Carriage Bolt
2	3/8" Lock Washer
2	3/8" Hex Nut
4	1/4 x 1/2" Flange Head Socket Screw

INSTALLATION

READ THE INSTALLATION INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION

Step-1 Adjust the front seats to the forward position.

Step-2 Remove the rear seat cushion, unsnap the passenger side rear door seal molding and pull it to the side. Unsnap and remove the passenger side front cowl trim. **Photo's #1 & #2**




Step-3 Remove the rubber door seal trim from the B-pillar area. **Photo #3**

Step-4 Remove the interior B-pillar trim.


Use a flat tool and carefully pry upward on the headliner to expose the Torx screw. Remove the Torx screw and pull outward on the upper half to unsnap the two clips. **Photo's #4 & #5**



Step-5 Pull the B-pillar trim to the side and remove the lower Torx bolt securing the seat belt retractor bracket to the B-pillar. Position the passenger side B-pillar bracket between the retractor bracket and the B-pillar. Align the brackets with the threaded hole in the B-pillar, reinstall and tighten the Torx bolt. **Photo's #6 & #7**

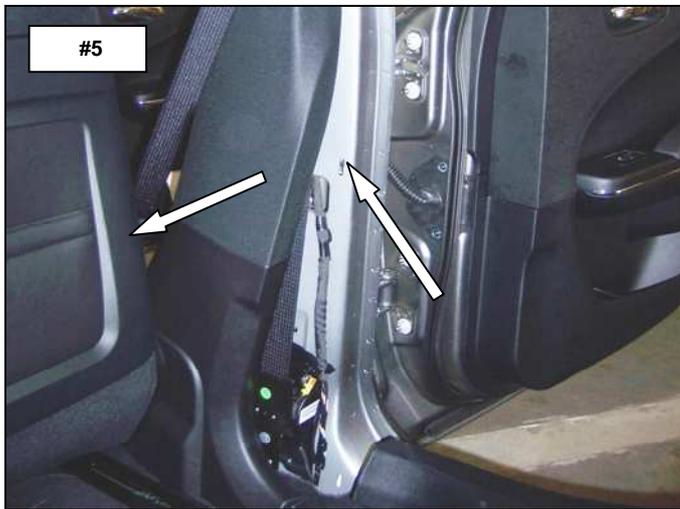

Step-6 Reinstall the B-pillar trim, rubber door seal trim, rear door seal molding and the front cowl trim. **Photo #8**

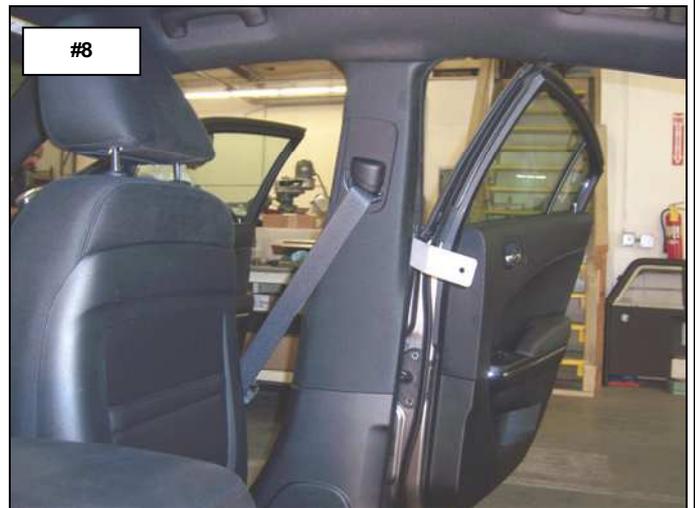


Step-7 Remove the seat track mounting bolt, slide the passenger side foot bracket under the seat track and reinstall the factory bolt. Leave the bolt loose for final adjustment. **Photo's #9 & #10**

Repeat the above steps to install the driver side B-pillar bracket and foot bracket.



Step-8 With assistance move the partition into the vehicle through the rear door. Lean the partition back, align the partition legs with the foot brackets then slide the partition legs over the foot bracket stub tube. **Photo #11**

Step-9 Pivot the partition forward on the foot brackets and align the center slotted hole in the partition mounting tabs with the B-pillar brackets. Attach the mounting tabs to the B-pillar brackets using (1) 3/8" x 1" carriage bolt, (1) 3/8" flat washer, (1) 3/8" lock washer and (1) 3/8" hex nut. Tighten the nuts and bolts. **Photo #12**

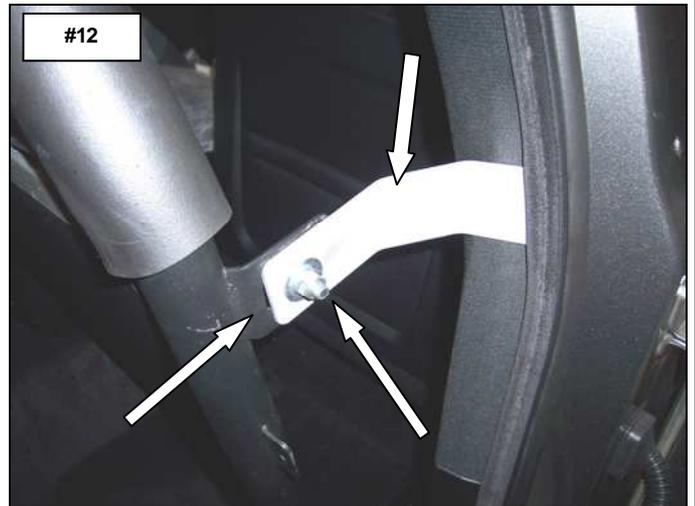

Step-10 Tighten the passenger and driver side foot bracket nuts and bolts and the seat track bolts.

Step-11 Attach the passenger side lower filler panel to the mounting tabs using (2) 1/4" x 1/2" flange head screws. **Photo's #13 & #14**



Step-12 Attach the passenger side upper filler panel to the mounting tab and to the lower filler panel using (3) ¼" x ¾" flange head screws.
Photo's #15 & #16

Repeat the above steps to install the driver side upper and lower filler panel.



**FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**