




VOLKSWAGON ATLAS CROSS SPORT 20-26
WEATHERBEATER™ FLOOR LINERS
CARGO LINER
INSTALLATION SHEET

NOTE: It is important that all the areas where the accessory mounts to the vehicle are clean and free of debris before installation.

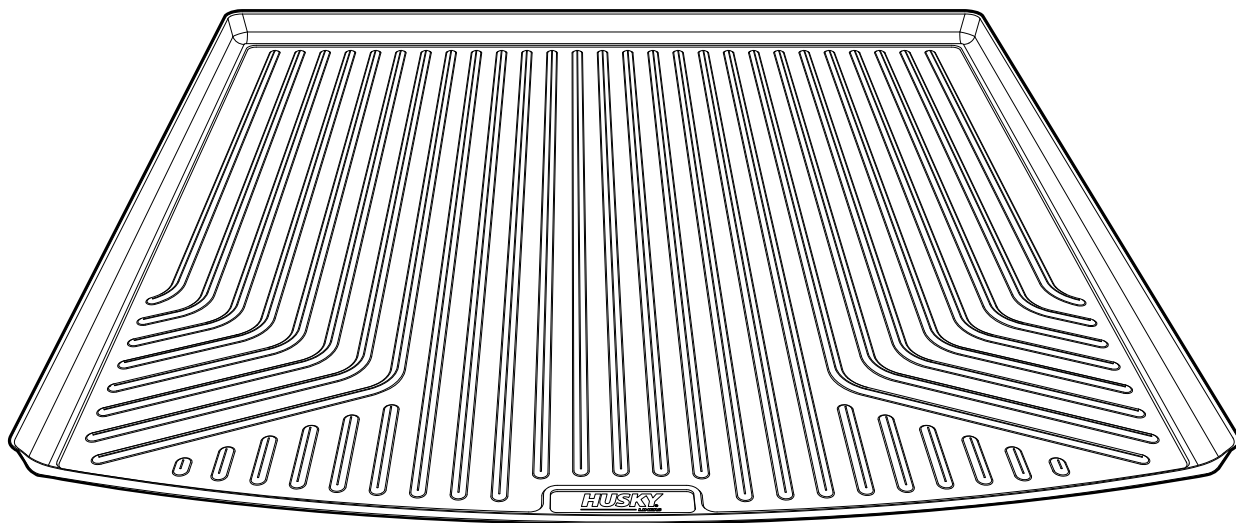

PARTS INCLUDED IN THE BOX

PART	DESCRIPTION	QTY	EXAMPLE
A	Cargo liner	1	

INSTALLATION STEPS

1 Remove any cargo factory floor mats before installation.


1. Open the rear lift gate and clear the cargo area.
2. Remove any existing cargo mats from the vehicle.

IMPORTANT: Do not remove the factory-installed carpeting.

2 Position the cargo liner.

1. Place the cargo liner (A) into position, as shown.

NOTE: Upon removal from the box, your liner may not lay flat. Please refer to the “Troubleshooting” section.

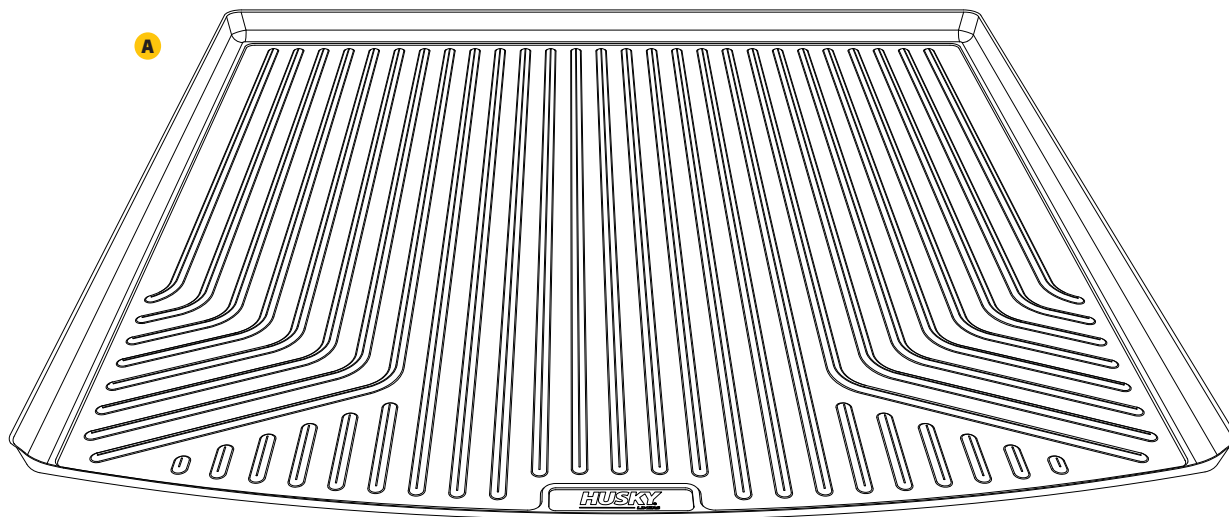

TROUBLESHOOTING

Thank you for selecting a Weatherbeater™ Floor Liner from Husky Liners. Your new liner is custom molded to fit your specific vehicle. The liner is made to take the place of your factory floor mats.

Upon removal from the box, your liner may not completely unroll and lay flat. This is normal and only temporary. Place the liner on the floor or in the trunk of your vehicle with a weighted object in each corner. After about 15 minutes, your liner will remain flat. In colder climates, this “relaxing” may take longer therefore moving the liner to a heated area will accelerate the process.

CARE AND MAINTENANCE

Your floor liners are made from a lightweight, tough engineering resin built to last. To clean them, wipe with a damp cloth or sponge. For heavier soiling, a mild household cleaner or glass cleaner works well. Avoid silicone-based protectants — they can make the surface slippery.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.

LIFETIME WARRANTY

View the Husky Liners Lifetime Warranty at huskyliners.com/warranty-policies.

**LIFETIME
WARRANTY**

