



HUSKY SELECT™ FLOOR LINERS

PT #810028

USE AND INSTALLATION INSTRUCTIONS FOR YOUR FRONT FLOOR LINERS

Thank you for selecting a Husky Select™ Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your specific vehicle. The liners are made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.*** However, *do not remove the factory-installed carpeting.* Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE THE INSTALLATION OF YOUR FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION AND REMOVE ANY EXISTING FLOOR MATS. INCLUDED IN YOUR PACKAGING ARE SCREW-IN RETAINING POSTS FOR THE DRIVER AND PASSENGER SIDE LINERS. SEE INSTALLATION DETAILS ON THE NEXT PAGE.



HUSKY SELECT™ FLOOR LINERS

PT #810028

HUSKY FLOOR LINER RETAINING CLIP INSTALLATION INSTRUCTIONS

YOUR NEW LINER SET INCLUDES OUR FLOOR LINER SCREW-IN RETAINING POST SYSTEM. THIS RETAINING POST SYSTEM GIVES MOVEMENT RESTRAINT WHILE KEEPING SPILLS AND DEBRIS TRAPPED INSIDE THE LINERS. TO INSTALL THE HUSKY® LINER RETAINING POSTS SIMPLY FOLLOW THE INSTRUCTIONS BELOW:

- 1) Pre-fit your new Husky Select floor liner in your vehicle (Image 1).
- 2) Insert the screw-in carpet retention screw into the bottom of the Husky Select liner (Image 2).
- 3) Press down on the liner to pre-mark the carpet screw into the carpet (Image 3).
- 4) Screw the carpet screw into the carpet with a flat blade screwdriver (Image 4).
- 5) Press the Husky Select liner over the top of the carpet screw post (Image 3).



Image 1.



Image 2.



Image 3.



Image 4.



HUSKY SELECT™ FLOOR LINERS


PT #810028

USE AND INSTALLATION INSTRUCTIONS FOR YOUR 2ND SEAT FLOOR LINER

Thank you for selecting a Husky Select™ Floor Liner from Husky Liners. Your new second seat liner is custom molded to fit your specific vehicle. The liner is made to take the place of your factory floor mat(s). **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

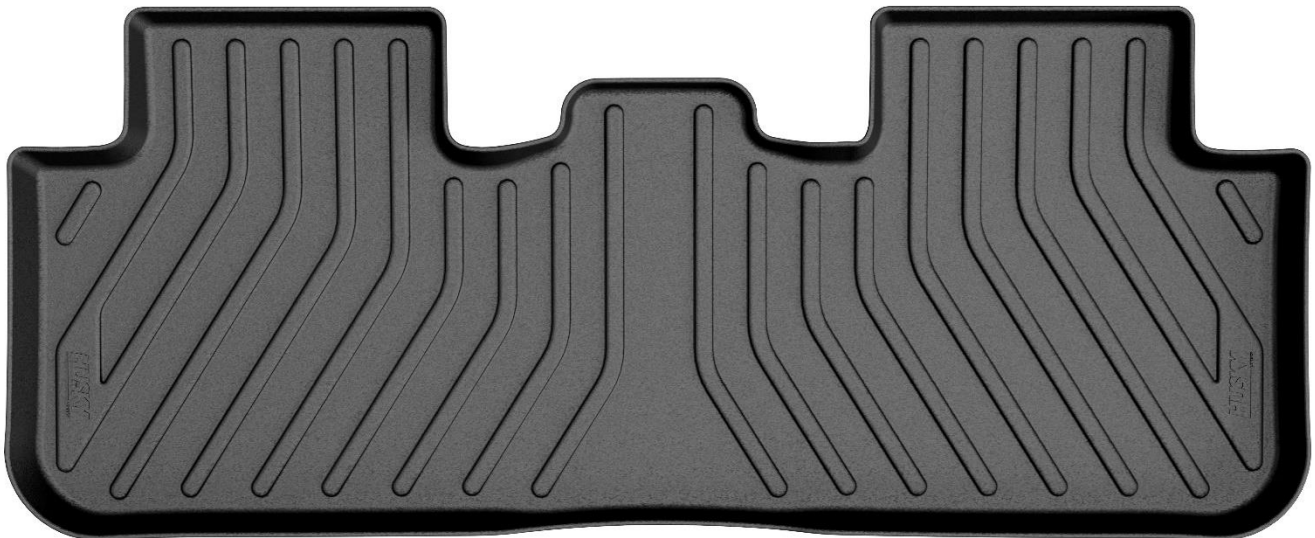

TO EASE THE INSTALLATION OF YOUR SECOND SEAT LINER, MOVE YOUR FRONT ROW SEATS COMPLETELY FORWARD AND REMOVE ANY EXISTING FLOOR MATS. INSTALL YOUR NEW LINER, POSITIONING IT IN THE VEHICLE AS SHOWN ABOVE. LASTLY, REPOSITION YOUR FRONT ROW SEATS AS DESIRED.

View the Husky Liners Lifetime Warranty at [huskyliners.com/warranty-policies](https://www.huskyliners.com/warranty-policies)

810028
11_24_2025



HUSKY SELECT™ FLOOR LINERS

PT #810028

USE AND INSTALLATION INSTRUCTIONS FOR YOUR REAR CARGO LINER

Thank you for selecting a Husky Select™ Rear Cargo Liner from Husky Liners. Your new rear cargo liner is custom molded to fit your specific vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the cargo area of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area and letting it lay face-down in a flat position will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Do not use Armor All®, Son-of-a-Gun® or similar items as these products make the liner slick.





HUSKY SELECT™ FLOOR LINERS

PT #810028

USE AND INSTALLATION INSTRUCTIONS FOR YOUR REAR CARGO WELL LINER

Thank you for selecting a Husky Select™ Rear Cargo Well Liner from Husky Liners. Your new rear cargo well liner is custom molded to fit your specific vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the cargo area of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area and letting it lay face-down in a flat position will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Do not use Armor All®, Son-of-a-Gun® or similar items as these products make the liner slick.





HUSKY SELECT™ FLOOR LINERS

PT #810028

USE AND INSTALLATION INSTRUCTIONS FOR YOUR FRONT CARGO LINER

Thank you for selecting a Husky Select™ Front Cargo Liner from Husky Liners. Your new front cargo liner is custom molded to fit your specific vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the cargo area of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area and letting it lay face-down in a flat position will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Do not use Armor All®, Son-of-a-Gun® or similar items as these products make the liner slick.

