




Components and Hardware

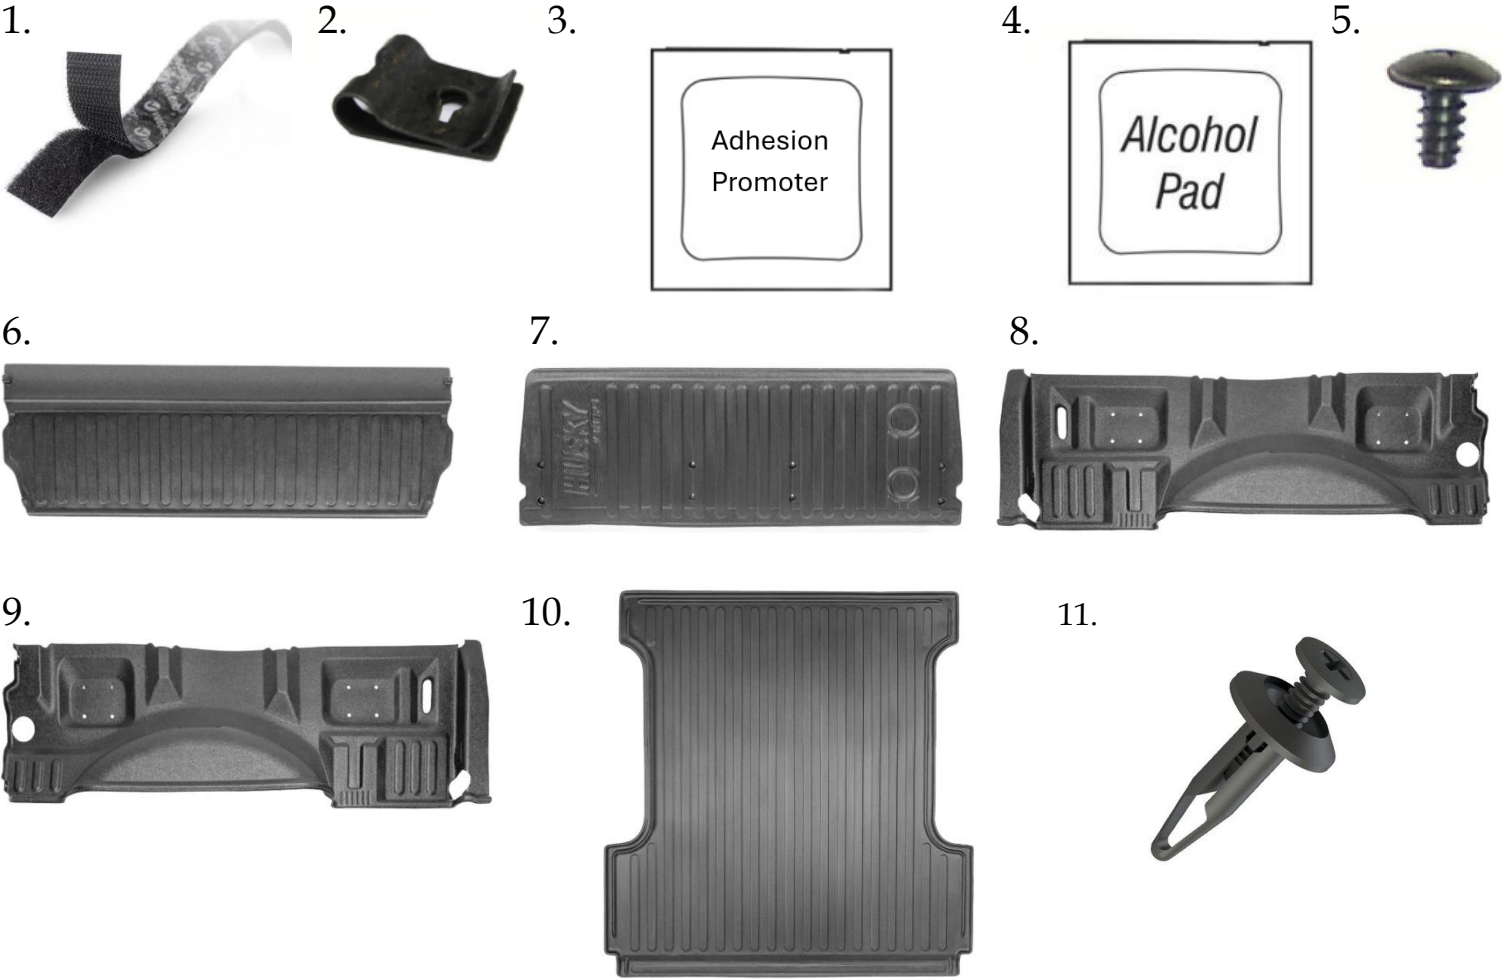

Components and Hardware:

1.	Hook and Loop Strip	(1)
2.	U Clip	(4)
3.	Adhesion Promoter Pad	(2)
4.	Alcohol Pad	(2)
5.	Screw	(4)
6.	Bulkhead.....	(1)
7.	Tailgate.....	(1)
8.	Driver Side Panel.....	(1)
9.	Passenger Side Panel.....	(1)
10.	Floor.....	(1)
11.	Scrivet	(4)

Tools for Installation:

- Phillips Screwdriver
- Torx/Phillips Screwdriver (tailgate)

Freedom Bed Liner

Preparation Before Installation:


- Wash and dry the bed of your vehicle to remove any debris and/or dirt from the installation area.

Freedom Bed Liner

Installation Procedure:

1


Lay the floor part (Item 10) upside down to install the hook and loop strip (Item 1). The red area is centered up on the floor part. Use an alcohol pad (Item 4) to clean this area, allow it to dry and then apply promoter to this area using the adhesion promoter pad (Item 3). When the promoter is dry, peel the plastic protector off of one of the loop and hook strips and apply to the floor. Press down firmly to ensure it has adhered to the bed.

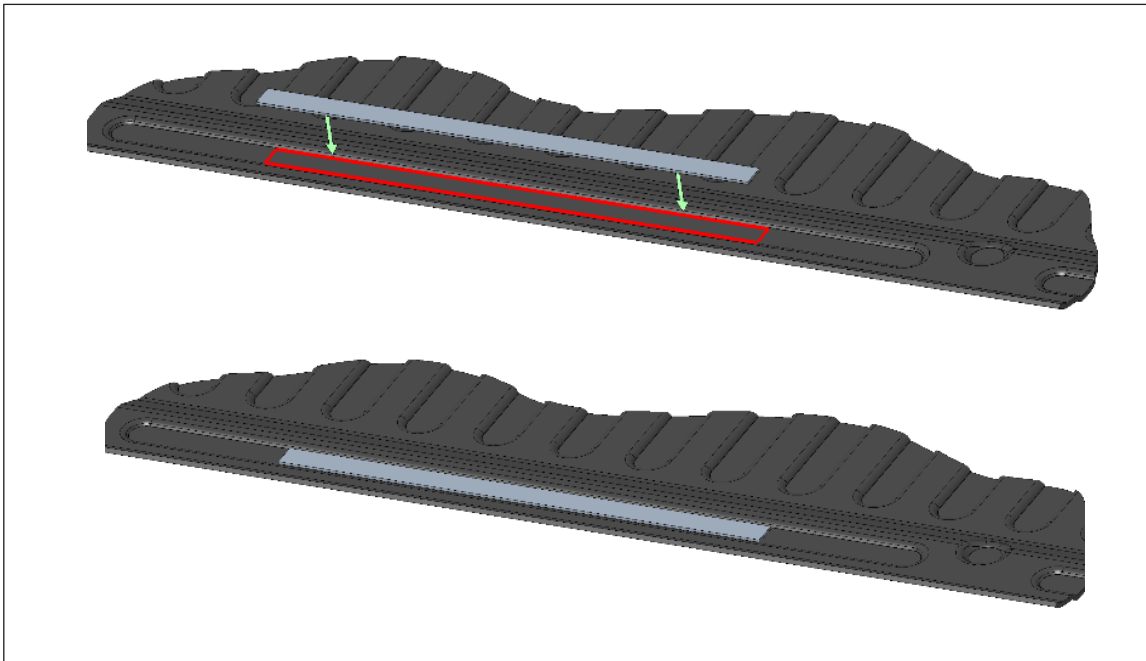

Place the floor part (Item 10) in the bed of the vehicle.




Install one u-clip (Item 2) in each corner over each hole. Ensure correct orientation of the u-clip on the part. See Fig. 1.

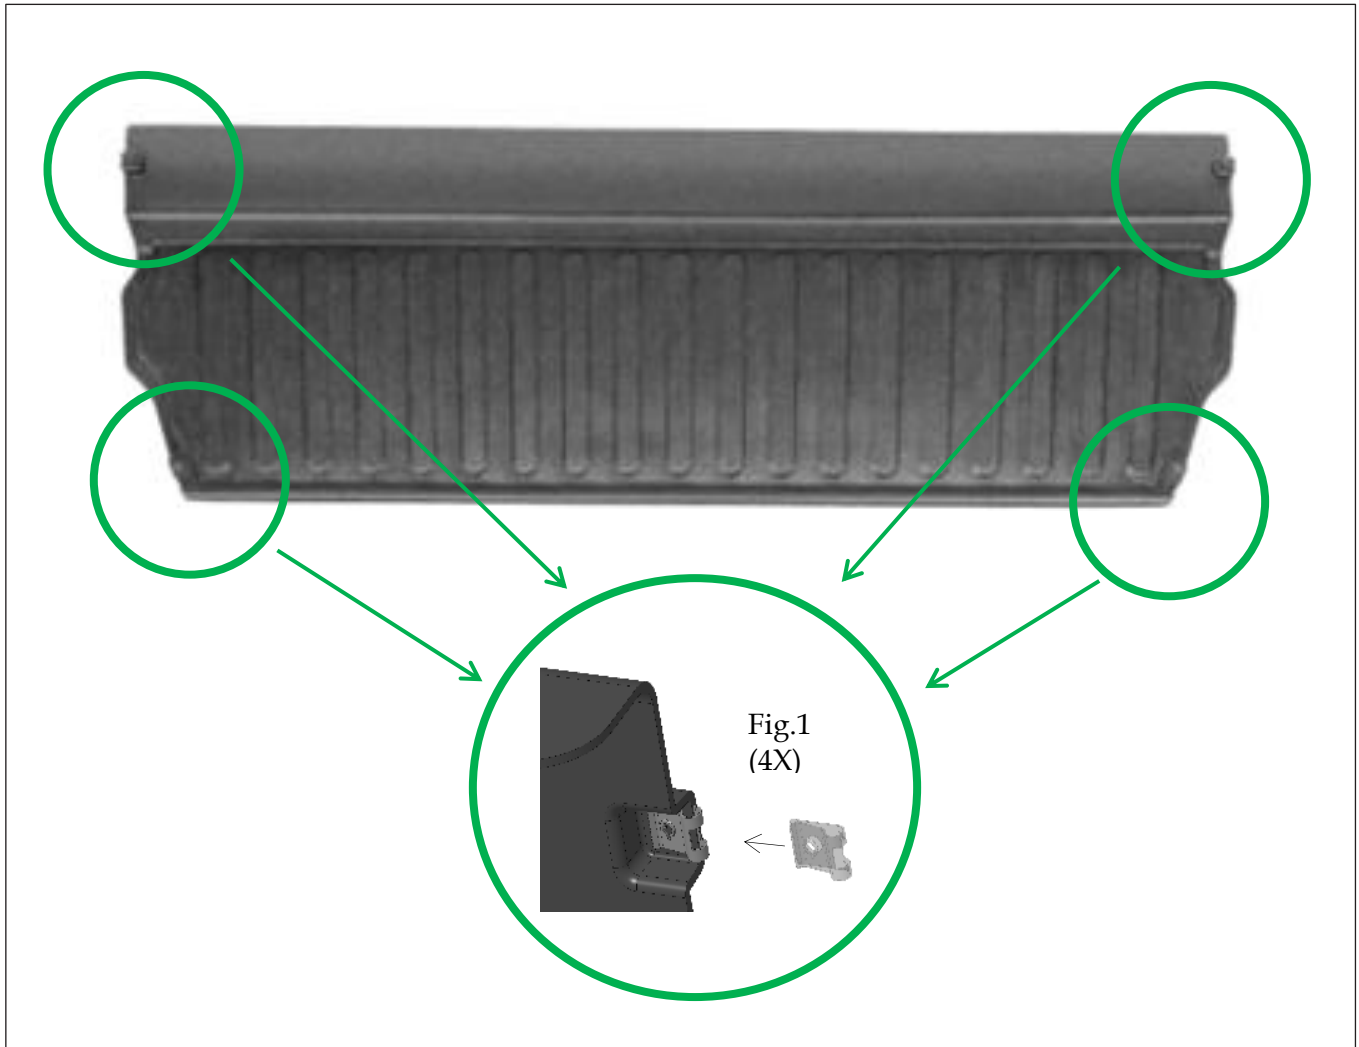

4

Place the bulkhead part (Item 6) as shown below. Ensure the bottom of the bulkhead part is captured by the rib on the floor part (Item 10). The arrows below highlight the rib.

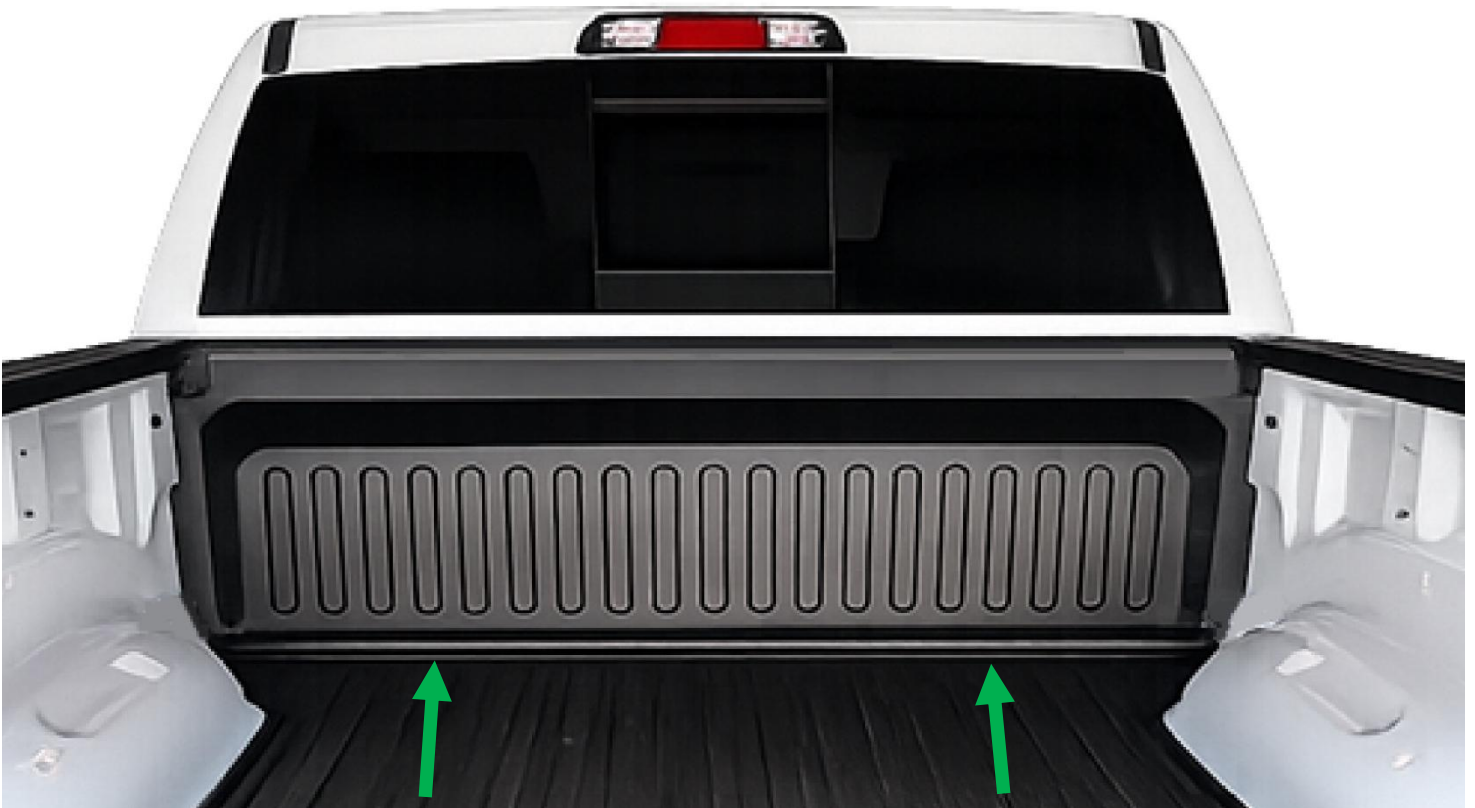

5

Install the driver's side panel part (Item 8). To install, with the part at an angle, slide the top of the part up under the driver side top rail of the bed. With the top of the driver side panel (Item 8) still tucked up under the top bed rail, press the bottom of the driver side panel up and over the floor part (Item 10) highlighted with green arrows.

Repeat to install the passenger side panel (Item 9).




6

After the floor, bulkhead and the side panels have been assembled into their proper places, the sides panels and bulkhead can be screwed together with the supplied screws (Item 5).

Line up the u-clips in the bulkhead with the holes in the driver's side panel. Using a Phillips screwdriver tighten the screw into the u-clips.

Repeat step 6 for the remaining 3 locations.

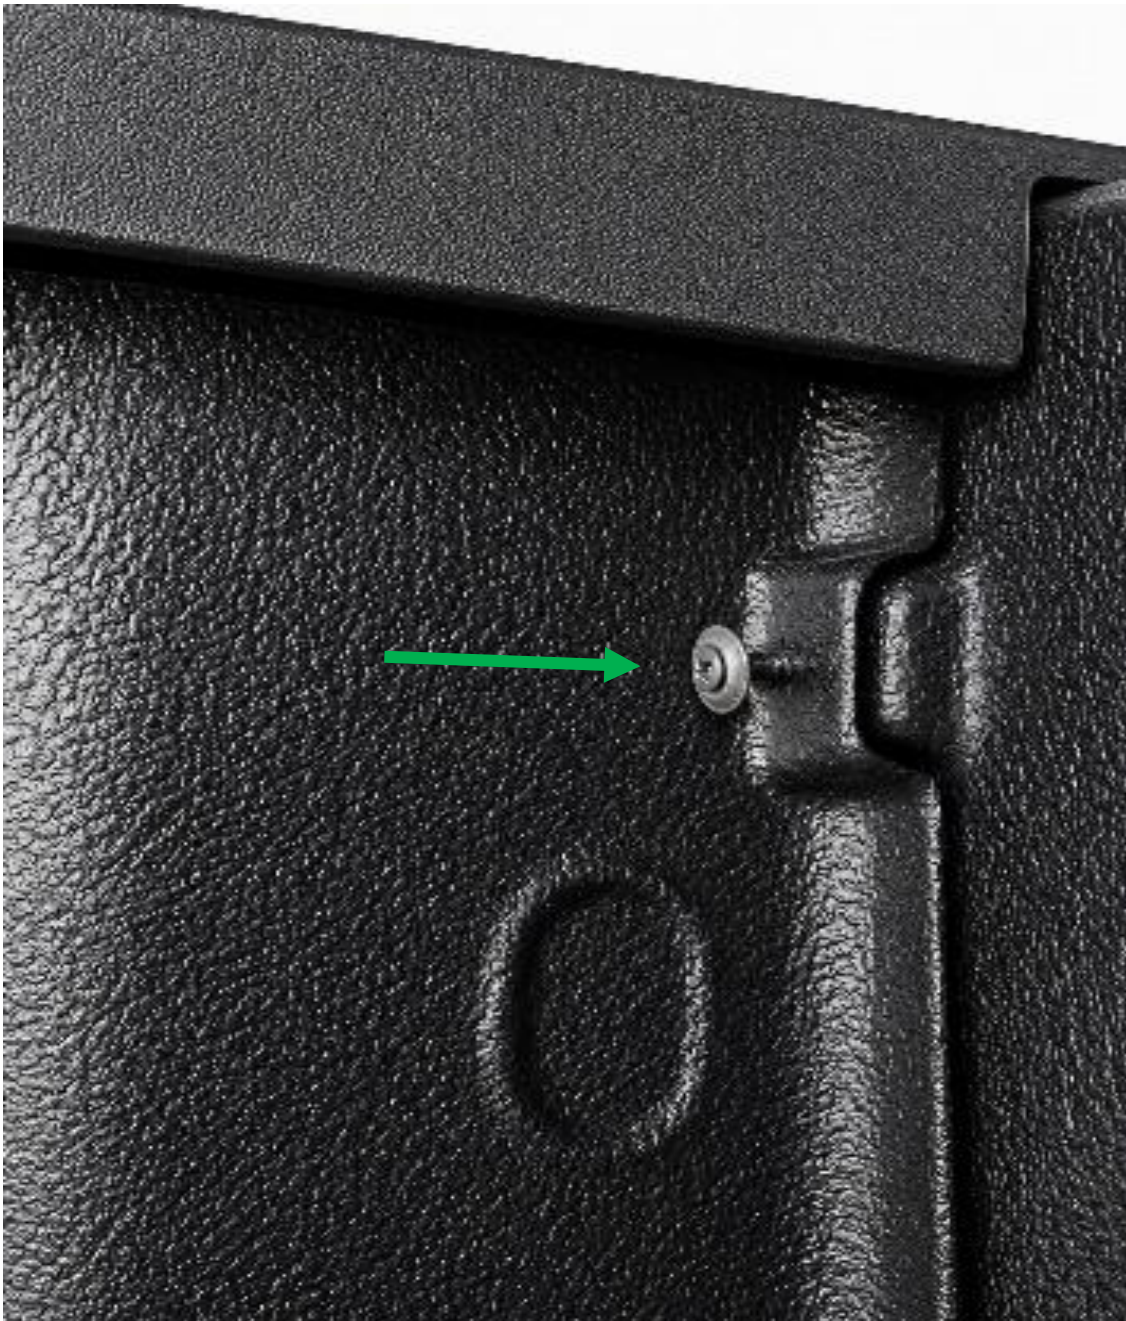


7

Place the tailgate part (Item 7) in position on the vehicle's tailgate and take note of which holes in the tailgate part match up to screws in the tailgate. Remove the screws from the tailgate that match the holes in the tailgate part using a screwdriver. Reinstall the removed screws through the holes in the tailgate part and back into the vehicle's tailgate. Tighten the screws, securing the tailgate part to the vehicle's tailgate. Note the number of screws varies by application. Do not use drill driver or electric screwdriver as these may strip out Torx/phillips heads.



8

Slightly lift the middle of the floor part (Item 10) at the rear and take note of the location of the hook and loop strip. Use the alcohol pad (Item 4) and wipe the area of the vehicle bed directly under the hook and loop strip attached the floor part (approximated by the green boxed area). Allow that area to dry. Peel the plastic strip off the adhesive on the hook and loop strip. Carefully position the floor part back down onto the vehicle bed and press down firmly to ensure the strip has adhered to the bed.

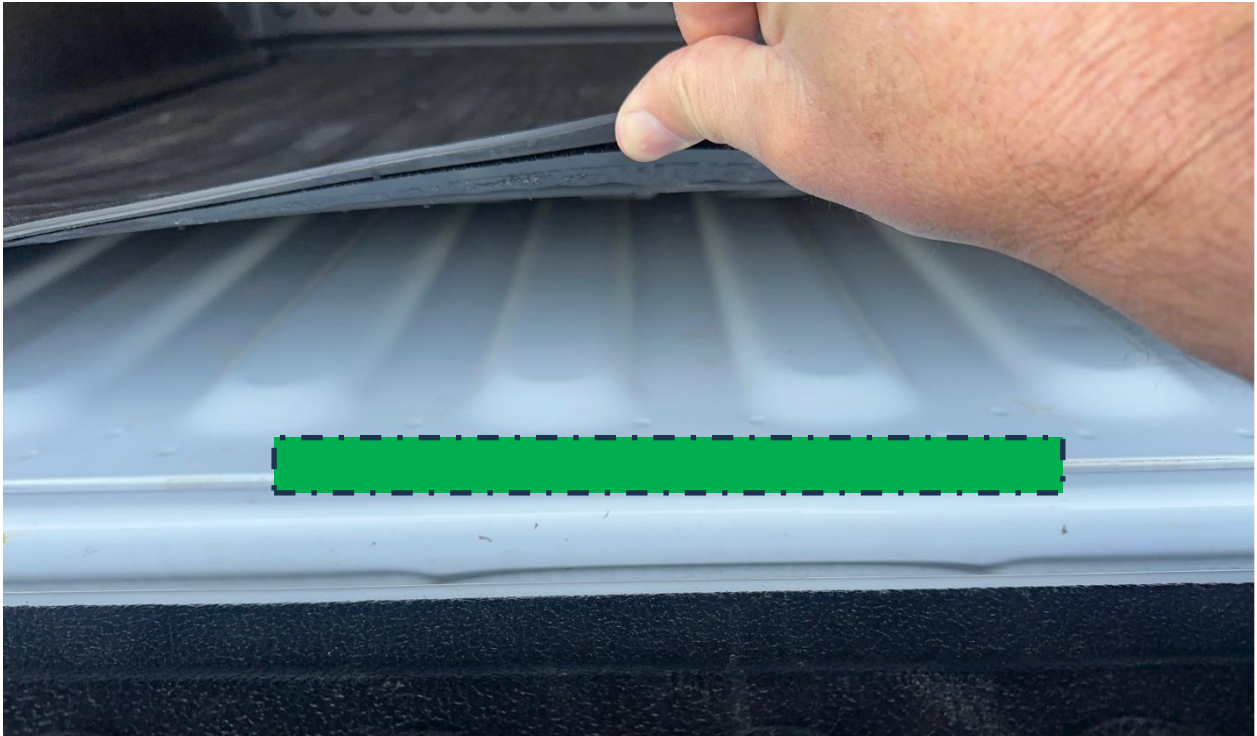

Ram 5.8', Ram 6.5' and Silverado/Sierra 5.7' beds have additional securement points located on the bed sides near the tailgates (see images below). Your installation kit includes scrivetts (Item 11) that are inserted in the existing upper holes in the bedsides. To install, pull back the side panels at the bed sides, push the scrivet in place, replace side panels and install included screw through the side panel into the scrivet.



Truck beds often have multiple options. Your Freedom Liner may require trimming to access optional equipment. To guide potential trims, molded in trim grooves are added to areas that cover optional features. To trim your Freedom Liner, we suggest using a utility knife or rotary tool like a Dremel. Below is an example of a trimmable area.



Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.

Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



Email: customerservice@huskyliners.com

Website: www.huskyliners.com

Phone: 800-344-8759