

## Montana Soft Top, TJ

### NOTICE

Ensure windows are kept clean to avoid scratching. **DO NOT** wash windows with brush. Wash with clean, watered-down cloth or sponge and mild detergent. **DO NOT** clean windows while dry. Use caution while cleaning in low temperatures as windows become more susceptible to scratching and cracking. **DO NOT** roll up windows in low temperatures as this causes windows to stiffen and crack. Windows should be clean when rolled up.

1. Remove tailgate bar from rear window and set aside for later use. Remove side and rear windows by releasing plastic window strips that retain top above front doors.



2. Release windshield latches on front header. **DO NOT** lower top at this point. Pull down and out on corners to release top from belt rail. Repeat for opposite side.



## Montana Soft Top, TJ

3. Unfasten hook and loop flap around middle bow.



4. Release soft top snaps from rear bow and allow bow to drop on tailgate.



5. Lower soft top onto tailgate. Remove screws that fasten soft top fabric to corners of windshield header and set aside for later use.



## Montana Soft Top, TJ

6. Flip top fabric into rear of vehicle so fabric lays bottom side up. Remove screws that fasten soft top fabric to windshield header and set aside for later use. Remove soft top fabric.

### NOTICE

For 1997 models with slip-on plastic extrusion on door surround, remove extrusion before installing soft top.



7. Lay new soft top fabric in rear of vehicle with bottom side up. Ensure plastic strip on fabric is facing up and aligned with front edge of windshield header. Locate round hole that marks center of plastic strip and install first screw to ensure fabric is centered on header. Install remaining screws removed in step 6.



8. Wrap fabric over header and drape it over tailgate. Raise header slightly and work pockets in fabric over corners of header. Install screws removed in step 5 in corners of header.



## Montana Soft Top, TJ


9. Raise soft top assembly and snap fabric to rear bow.



10. Ensure center bow is centered in hook and loop flap but DO NOT fasten at this time. Pull down and insert rear corners of soft top into belt rail. Secure header to windshield frame at this point.



11. Wrap and fasten hook and loop strips around center bow.

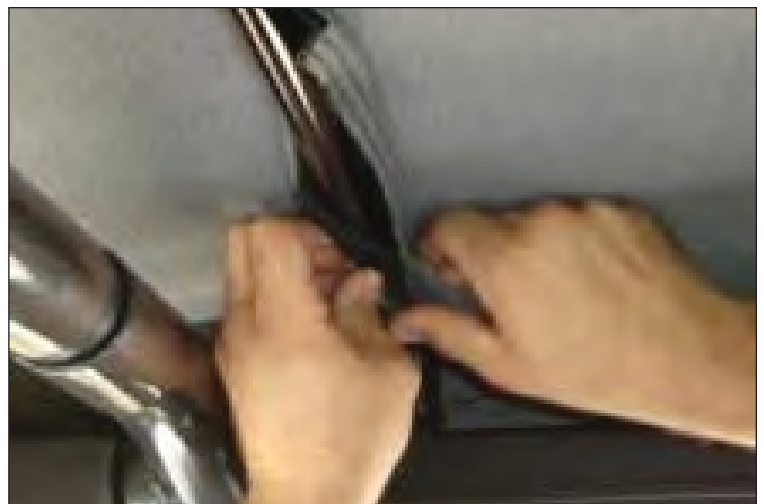



## Montana Soft Top, TJ

12. Locate side windows and orient them with zipper slider 10" to 12" along top.



13. Roll plastic lip of window into front door surround. Repeat for opposite side.



14. Locate plastic strips on each side of top and insert into door surrounds above door opening.



## Montana Soft Top, TJ

15. Fully close zipper on side windows to lower rear corner of panel.



16. Start at rear of vehicle and roll plastic lip along belt rail. Fasten hook and loop strips that connect rear of side window to soft top.



17. Install tailgate bar in receiver on each side of tailgate opening and insert rear window into "C" channel of tailgate bar.



## Montana Soft Top, TJ

18. Start zipper of rear window. Hold up window and finish zipping rear window to top. Ensure tailgate bar is centered and securely fastened. Tuck flaps on rear window under soft top fabric.

### NOTICE

Allow top to remain closed for several days with temperatures above 72 degrees Fahrenheit to allow top to stretch and set to frame.

