

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Montana Soft Top, 2 Door JK, 2007 - 2009

NOTICE

Ensure windows are kept clean to avoid scratching. **DO NOT** wash windows with brush. Wash with clean, watered-down cloth or sponge and mild detergent. **DO NOT** clean windows while dry. Use caution while cleaning in low temperatures as windows become more susceptible to scratching and cracking. **DO NOT** roll up windows in low temperatures as this causes windows to stiffen and crack. Windows should be clean when rolled up.

1. Remove tailgate bar from rear window and set aside for later use. Remove side and rear windows by releasing plastic window strips that retain top above front doors.



2. Release windshield latches on front header. DO NOT lower top at this point. Pull down and out on corners to release top from belt rail. Repeat for opposite side.






460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Montana Soft Top, 2 Door JK, 2007 - 2009

3. Remove both sets of phillips head screws on rear bow and set aside for later use. DO NOT use power tools.

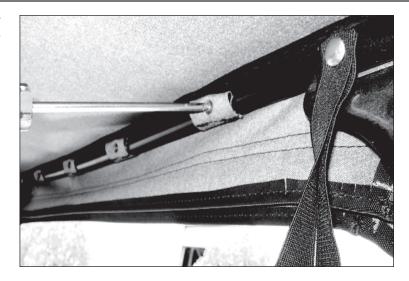

4. Unfasten hook and loop retainer that secures top to bow above roll bar and lower soft top.




5. Remove screws that fasten soft top fabric to bottom corners of header and set aside for later use.




Montana Soft Top, 2 Door JK, 2007 - 2009

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

6. Raise top and bow assembly in upright position and lock header to windshield. Carefully drape soft top fabric over windshield and remove all screws from top side of header. Remove top of header and soft top fabric.

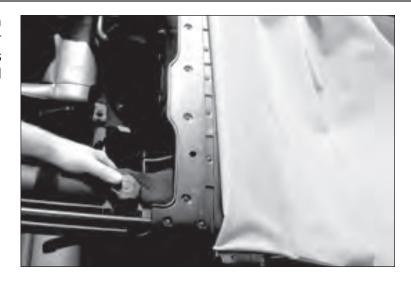

7. Place new soft top fabric on header with bottom side facing upward. With fabric draped over windshield, locate and align center notch on fabric and header. If necessary, use tape to hold fabric in place. Reattach top portion of header using screws removed in step 6.

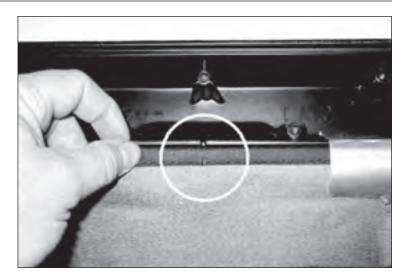


8. Drape new fabric over back of vehicle and lower frame assembly. Wrap fabric around corners of header assembly. Ensure fabric is tucked between lip of header as shown. Reattach plastic tab to header using screws removed in step 5.



460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Montana Soft Top, 2 Door JK, 2007 - 2009

9. Raise top and bow assembly in upright position and lock header to windshield. With top loosely over bow assembly, reattach fabric to bows using screws removed in step 3. Fabric on rear bow wraps under bow from back to front of vehicle. Fabric on middle bow wraps over bow from front to back of vehicle.

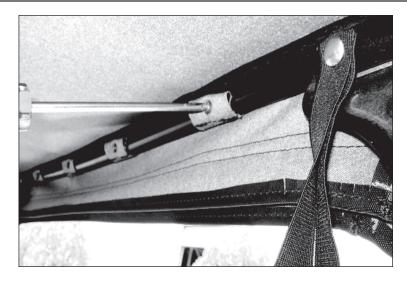

10. Reattach hook and loop retainer around front bow above center roll bar.



11. Insert rear corners of soft top into belt rail.



Montana Soft Top, 2 Door JK, 2007 - 2009

12. Insert tailgate bar into new rear window and install rear and side windows. Secure top above doors by inserting plastic retainer strips in door surrounds.



Allow top to remain closed for several days with temperatures above 72 degrees Fahrenheit to allow top to stretch and set to frame.

