


Components and Hardware: HWKT-00008X

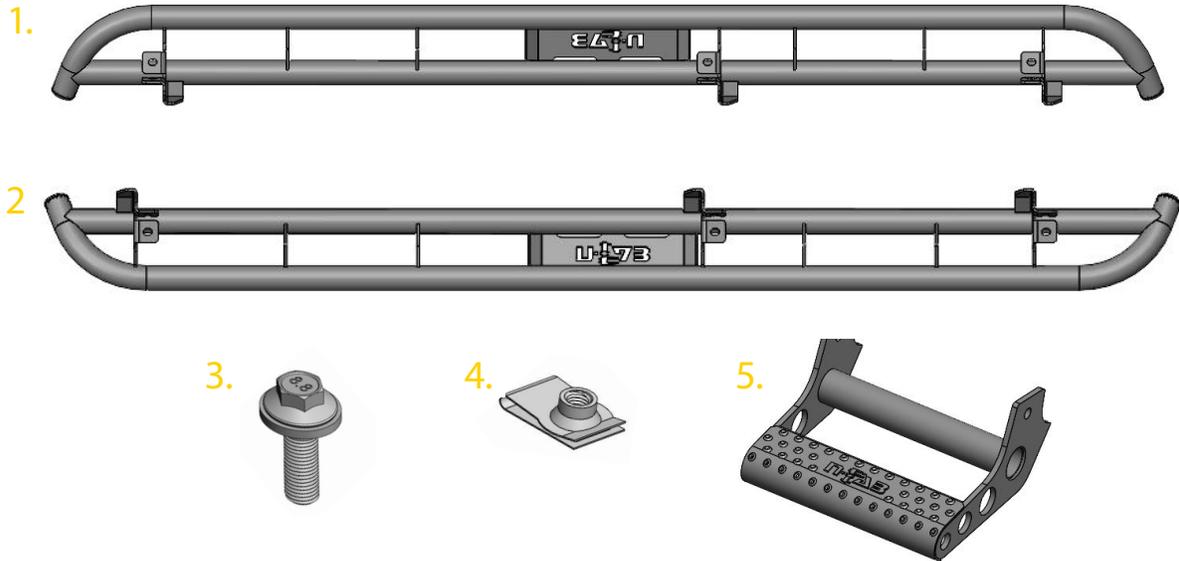

(Included only with prt# G154RKRCCS4)

Components and Hardware:

1. Driver side rail.....(1)
2. Passenger side rail.....(1)
3. M8-1.25x30mm flanged bolt w/ washer.....(12)
4. M8-1.25 threaded barrel clip.....(12)
5. Detachable step (Only ncluded w/ prt# G154RKRCCS4).....(4)

Tools for Installation:

- 12mm socket
- Socket wrench
- 3/4" wrench (For detachable steps)



DESERT BORN, ROAD READY.™

PART# G154RKRC/G154RKRCSS4
15-22 COLORADO/CANYON

RKR RAIL /STEP SYSTEM
INST-02304

INSTALL

Step 1. Remove the rubber plugs located on the rocker panel at each factory mounting location.



Step 2. Insert one (#4) 8mm barrel clip into each mounting hole by sliding the clip from the large hole and lining up the threaded part with the smaller hole. Make sure the flat side of the clip faces toward the outside of the body.

Step 3. Carefully raise nerf step assembly up into position
Aligning brackets with the x3 mounting locations and
Loosely secure with the supplied (#3)x6 M8x30mm hex bolt.

Step 4. After final adjustments, tighten all hardware to
(20 ft/lbs).



Detachable step Install

(Purchase with prt# **G154RKRCSS4**)

Step 1. Attach the step to the mounts located in between the RKR rails using the supplied 1/2" x 1" flanged hex bolts and 1/2" flanged hex nuts.

NOTE: The step will mount to the left of the bracket opposite of the weld.

Step 2. Tighten hardware to 65 (ft/lbs).

