



## INSTALLATION INSTRUCTIONS



### PART NO.

- 3155B
- 3155MB\*

### PRODUCT DESCRIPTION:

- 2003-2025 Chevy Express Van
- 2003-2007 GMC Savanna

### PRODUCT SAFETY & LEGAL DISCLAIMER

- **IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.**
- Review the product package and contents prior to beginning the installation. Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.
- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.
- **INSTALLER:** Once installation is complete, please return this guide along with other documentation included in this product back to the consumer for future reference. The manufacturer/distributors of this product do not guarantee this particular version will be available at a later date.

© 2016 Go Rhino Products. All rights reserved

[www.gorhino.com](http://www.gorhino.com) 589 W. Apollo St., Brea, CA 92821 P: 888 427 4466



# INSTALLATION INSTRUCTIONS

## INJURY HAZARD

Please complete a shop and tool inspection prior to beginning the installation.

- Always make sure you have a clean, dry and well lit work area.
- Always remove jewelry, loose fitting clothing and wear protective gloves and eye protection.
- Always use extreme caution when jacking or raising a vehicle for work. Set the emergency brake and use tire/wheel blocks and jack stands. Refer to the vehicle manufacturer hand book. Utilize the vehicle manufacturers designated lifting points.
- Always use appropriate and adequate care in lifting parts during disassembly and installation. Seek help in lifting heavy or large items into place. Utilize jacks and or lifting devices when available.
- Always insure products are secure during disassembly and installation.
- Always wear eye protection and take steps to protect any exposed skin during the installations. Drilling, cutting and grinding plastic and metal may create flying particles that can cause injury.
- Always use extreme caution when drilling, cutting and or grinding on a vehicle. Thoroughly inspect the area to be drilled, on both sides of material, prior to modification and relocate any objects that may become damaged.
- Always assemble and tighten all fasteners per the installation instructions.
- Always route electrical cables carefully. Avoid moving parts, parts that may become hot and rough or sharp edges.
- Always insulate and protect all exposed wiring and electrical connections.

## MAINTENANCE AND CARE

- Always perform regular inspections and maintenance on mounts and related fasteners.
- Periodically check and tighten all fasteners.
- Stripped, fractured, or bent fasteners must be replaced.
- After washing the vehicle make sure to fully dry all surfaces.
- In areas with cold temperatures make sure to wash the product often to remove harmful materials used on road ways.
- Never use abrasive cleaners or polish compounds. Clean with a gentle soap and water. If you use wax use a non-abrasive automotive wax such as pure carnauba wax.

## WARNING

Some products have been designed to work together with factory rear sensor systems, factory forward facing sensor systems and factory air bags.

- Installation of some of these products may alter the factory sensor system performance.
- Factory sensors may read shackles or hooks protruding from the fairlead and or tow hooks.
- All sensor testing is completed by Go Rhino Products and or third party testing labs on modified vehicles.
- Sensor sensitivity, factory sensor housing, orientation, and operating conditions are all variables that will influence functionality of the sensors.
- Installation of some product may effect the factory air bag systems.
- Some products allow the use of third party products such as winches, shackles, hooks, etc. Follow the respective manufacturers operating instructions for use with our products.
- Make sure to fully understand the product, it's intended use and operation prior to use.
- Above all... be safe!



## INSTALLATION INSTRUCTIONS

### PARTS INCLUDED IN THIS LIST:

HARDWARE	QTY	DESCRIPTION	PART	QTY	DESCRIPTION
1	4	5/16"X1" HEX BOLT	1	2	31551 LOWER BRACKET
2	4	5/16" U-NUT	2	1	31552D DRIVER UPPER BRACKET
3	4	5/16"X1 BUTTON HEAD BOLT	3	1	31552P PASSENGER UPPER BRACKET
4	4	5/16' LOCK NUT	4	2	3155 SIDE PLATE
5	4	5/16" FLAT WASHER	5	1	ST3155B 35 3/4" BOTTOM STEP PLATE
6	4	5/16" LOCK WASHER	6	1	TT3006 35 3/4" TOP TUBE
7	14	3/8"X 1 1/4" HEX BOLT	7	1	CP3006 35 3/4" CENTER PLATE
8	8	3/8" HEX NUT	8	1	3156WP PASSENGER BRUSH GUARD*
9	10	3/8" FLAT WASHER	9	1	3156WD DRIVER BRUSH GUARD*
10	14	3/8" LOCK WASHER	10	1	C7P PASSENGER HEAD LIGHT PROTECTOR*
11	2	1/2" X 1 1/2" HEX BOLT	11	1	C7D DRIVER HEAD LIGHT PROTECTOR*
12	2	1/2" LOCK WASHER	12	1	P200 Plug Kit
13	2	1/2" HEX NUT	Items marked with * are for models with brush guards		
14	2	NYLON FLANGE WASHER			
15	2	1/4"X 3/4" BUTTON HEAD BOLT*			
16	2	1/4" SOCKET SCREWS			

Go Rhino recommends you, the installer, read this installation instruction manual from front to back before installing the product. You may also [click here](#) to view an installation video or visit <http://www.gorhino.com/Installation-Videos>.


ESTIMATED TIME FOR INSTALLATION:

1.5-2 Hours

If you need installation service for your new product, call the authorized distributor from whom you purchased the product or an authorized installation service company which can be found by calling toll free 1-888-427-4466

# GORHINO®

## ASSEMBLY INSTRUCTIONS

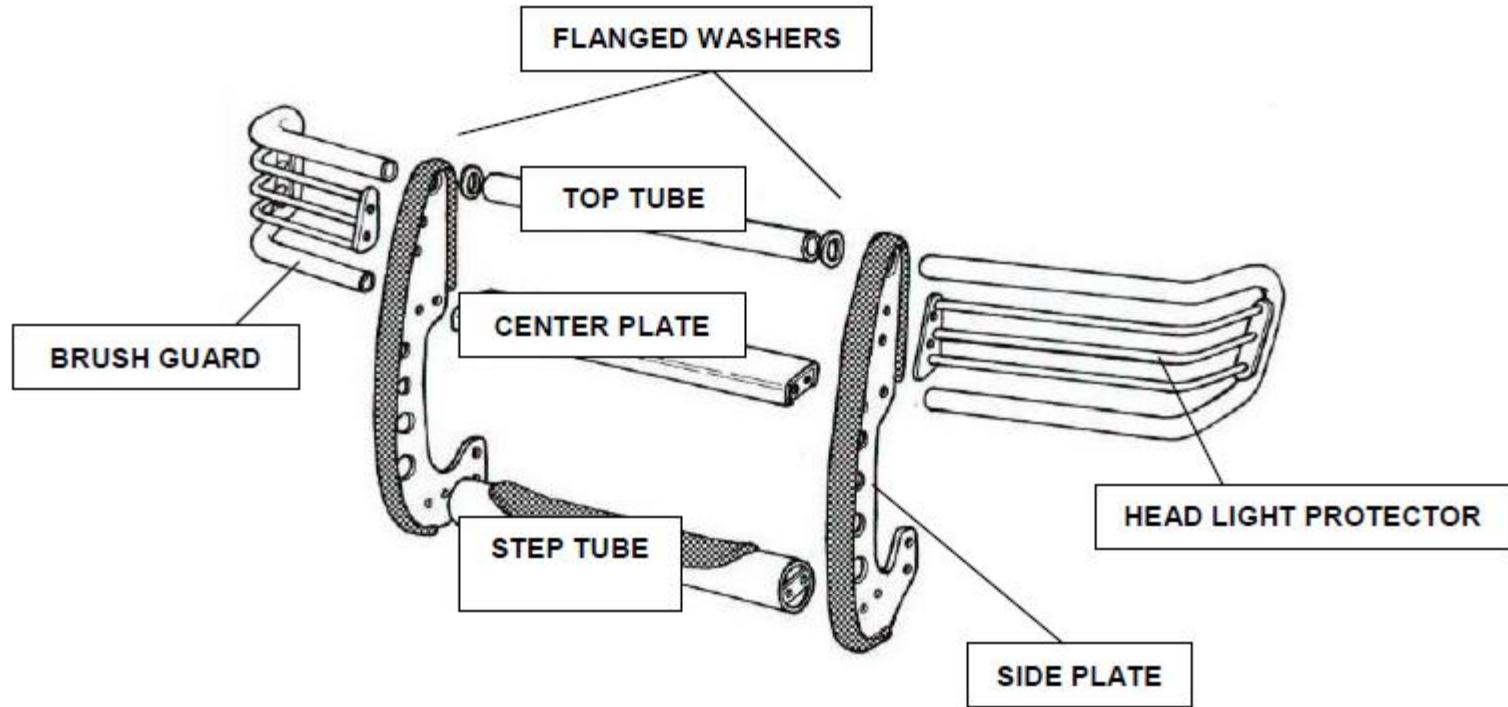

**STEP-1** BEGIN THE GRILLE AND BRUSH GUARD ASSEMBLY BY LAYING THE COMPONENTS OUT ON A PROTECTIVE SURFACE.

**STEP-2** POSITION THE GRILLE GUARD SIDE PLATES WITH THE FRONT EDGE DOWN AND THE BOTTOM STEP TUBE BETWEEN THE SIDE PLATES.

**STEP-3** LOOSELY ATTACH THE BOTTOM STEP TUBE TO THE GRILLE GUARD SIDE PLATES USING (4) 3/8" X 1 1/4" HEX BOLTS AND (4) 3/8" LOCK WASHERS.

**STEP-4** INSERT THE FLANGE WASHERS IN THE SIDE PLATES. POSITION THE TOP TUBE BETWEEN THE GRILLE GUARD SIDE PLATES, AND SLIDE THE BRUSH GUARDS THROUGH THE SIDE PLATES, FLANGED WASHERS AND INTO THE TOP TUBE.

**STEP-5** POSITION THE CENTER PLATE BETWEEN THE GRILLE GUARD SIDE PLATES, WITH THE **SLOTTED HOLES** IN THE CENTER PLATE DOWN.

**STEP-6** INSERT ONE PER SIDE, 3/8" X 1 1/4" HEX BOLT THROUGH THE HOLE IN THE SIDE PLATE AND SLOTTED HOLES IN THE CENTER PLATE WITH THE **THREADS EXTENDING INWARD** AND INSTALL FLAT WASHERS, LOCK WASHER AND HEX NUTS. DO NOT TIGHTEN.


**STEP-7** INSTALL LOCK AND FLAT WASHERS ON (2) 3/8" X 1 1/4" HEX BOLTS, AND INSERT THE BOLTS (ONE PER SIDE) THROUGH THE ROUND HOLES IN THE CENTER AND SIDE PLATE WITH THE **THREADS EXTENDING OUTWARD**. ATTACH THE BRUSH GUARDS TO THE SIDE PLATES USING THESE BOLTS. \*\*\* **Models with brush guards only**\*\*\*

**STEP-8** ALIGN THE GRILLE AND BRUSH GUARD ASSEMBLY AND TIGHTEN ALL NUTS AND BOLTS. NOTE: SECURE THE TOP TUBE USING THE 1/4" SOCKET SCREWS. \*\*\* **Models with brush guards only**\*\*\*


**STEP-9** ATTACH THE HEAD LIGHT PROTECTORS TO THE BRUSH GUARDS USING THE 1/4" X 3/4" BUTTON HEAD BOLTS AND TO THE SIDE PLATES USING THE 5/16" X 1" BUTTON HEAD BOLTS AND LOCK NUTS. \*\*\* **Models with brush guards only**\*\*\*

# GORHINO®

## INSTALLATION INSTRUCTIONS

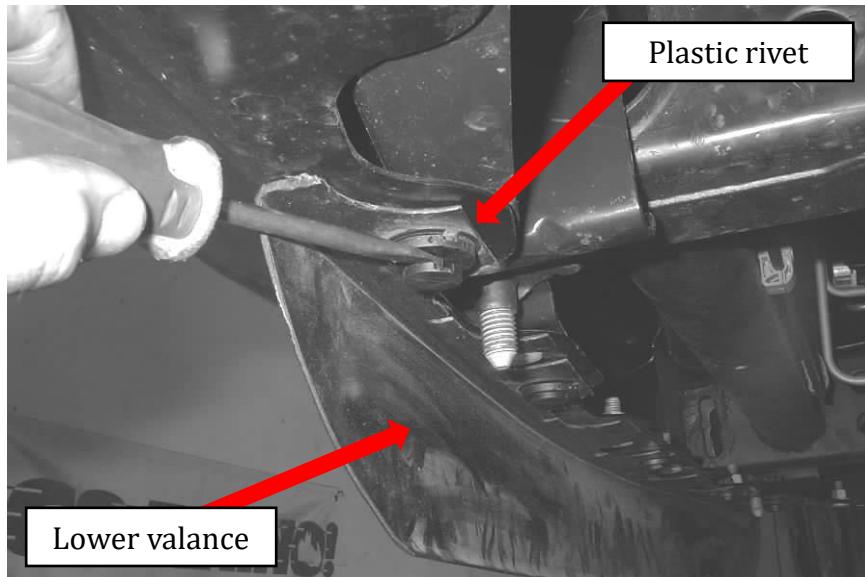

**STEP-1 REMOVE THE PLASTIC RIVETS, AND BUMPER VALANCE FROM THE BOTTOM OF THE BUMPER**

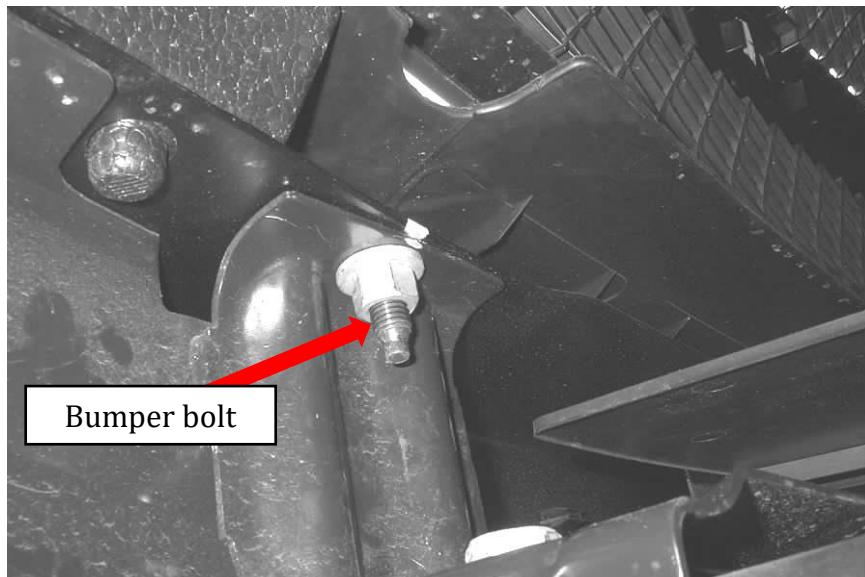

**STEP-2 BEGINNING WITH THE DRIVER SIDE, REMOVE THE NUT AND UPPER BUMPER BOLT. THE BOLT IS LOCATED ON THE BACK EDGE AT THE TOP OF THE BUMPER. THIS LOCATION WILL SERVE AS THE UPPER BRACKET MOUNTING POINT.**


# GORHINO®

## INSTALLATION INSTRUCTIONS



**STEP-3** POSITION 31552D UPPER BRACKET BETWEEN THE GRILLE AND THE BUMPER.


**STEP-4** ATTACH THE UPPER BRACKET TO THE BUMPER USING THE  $\frac{1}{2}$ " X 1 1/2" HEX BOLT, LOCK WASHER AND HEX NUT AS SHOWN. REPEAT STEPS 2, 3, AND 4 TO INSTALL THE PASSENGER SIDE BRACKET.

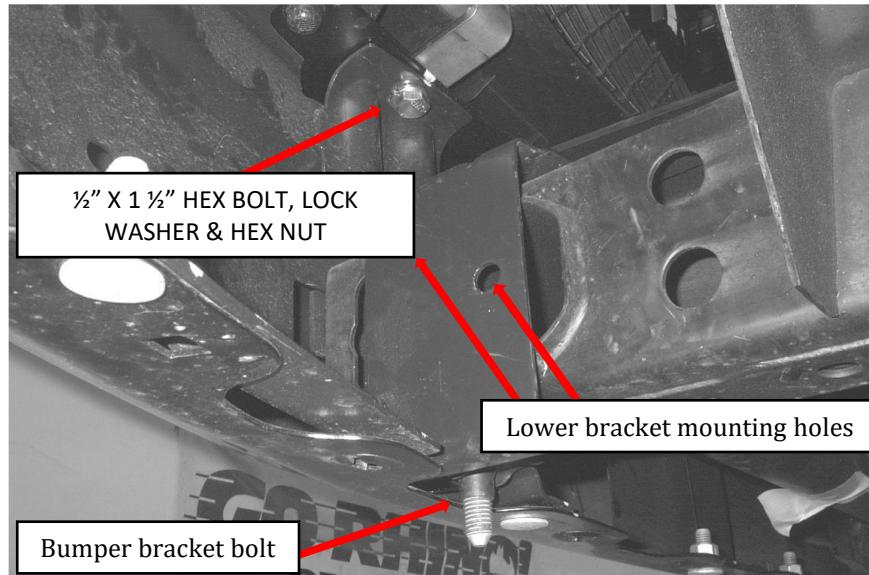


**STEP-5** LOCATE THE HOLES IN THE BUMPER BRACKET. THESE HOLES WILL SERVE AS THE LOWER BRACKET MOUNTING POINTS.

# GORHINO®

## INSTALLATION INSTRUCTIONS

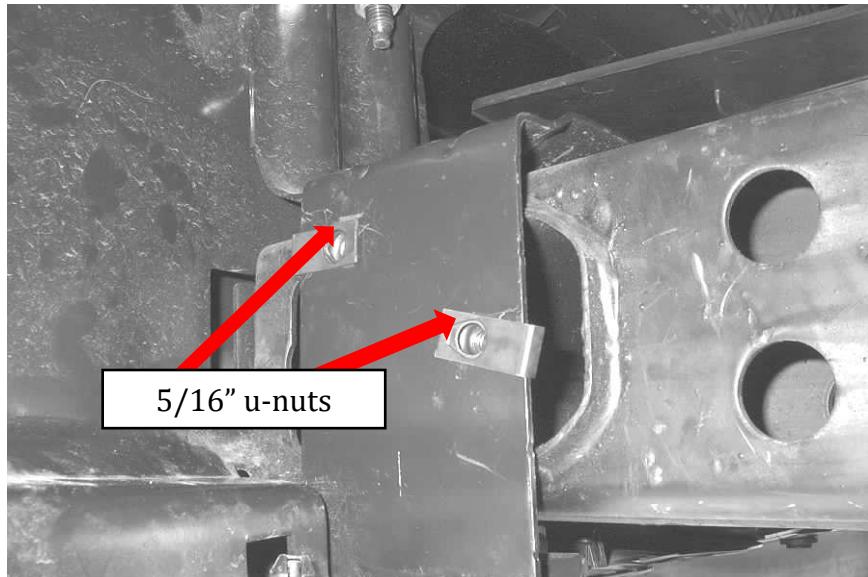


**STEP-6** INSTALL THE 5/16" U-NUTS ON THE BUMPER BRACKET AS SHOWN. NOTE: IT MAY BE NECESSARY TO LOOSEN THE BUMPER BRACKET BOLTS, AND SLIGHTLY PRY THE BUMPER BRACKET AWAY FROM THE FRAME TO INSTALL THE FRONT U-NUT.

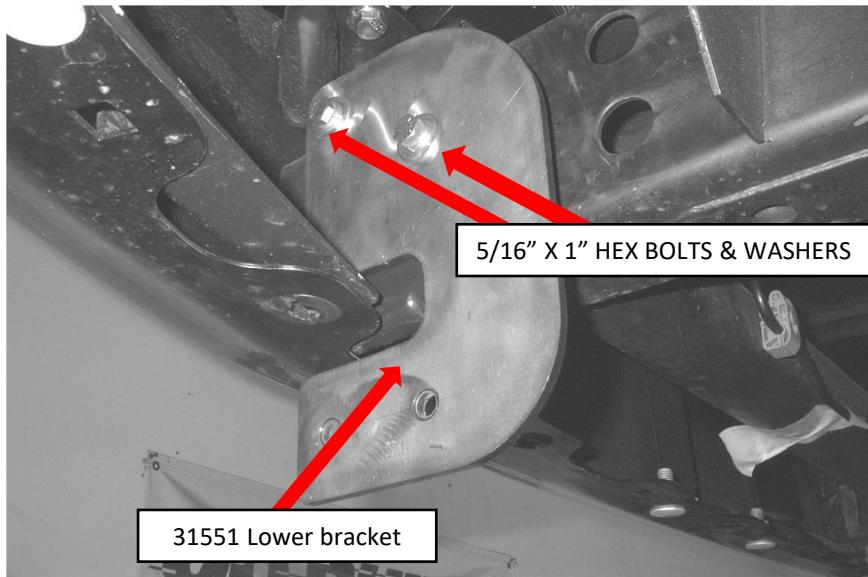


**STEP-7** LOOSELY ATTACH ONE OF THE 31551 LOWER BRACKETS TO THE BUMPER BRACKET USING 5/16" X 1" HEX BOLTS, FLAT WASHERS AND LOCK WASHERS. REPEAT STEPS 5, 6, AND 7 TO INSTALL THE PASSENGER SIDE.

# GORHINO®

## INSTALLATION INSTRUCTIONS

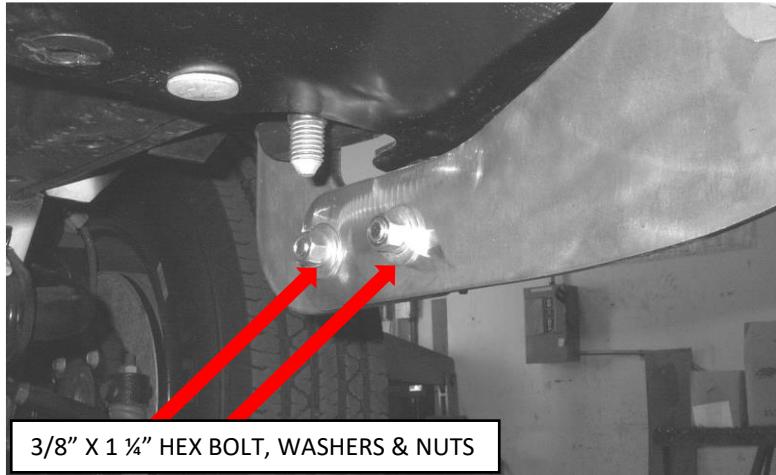

**STEP-8** ATTACH THE GRILLE GUARD ASSEMBLY TO THE LOWER BRACKETS, USING THE 3/8" X 1 1/4" HEX BOLTS, LOCK WASHERS, FLAT WASHERS AND HEX NUTS.

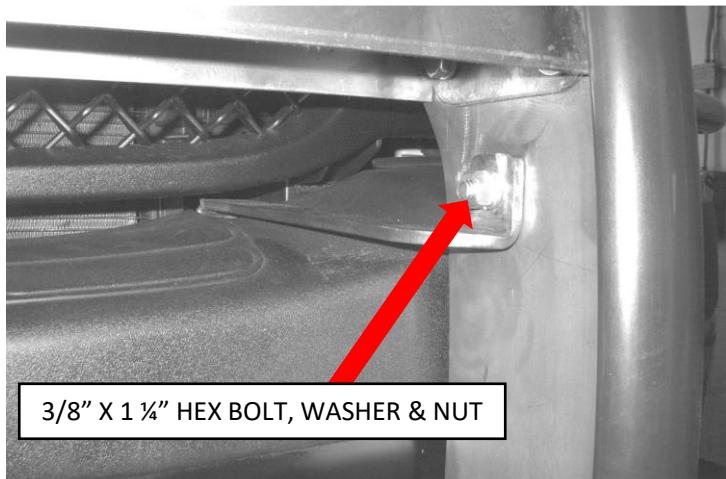

**STEP-8** ATTACH THE GRILLE GUARD ASSEMBLY TO THE UPPER BRACKETS USING THE 3/8 X 1" HEX BOLTS, LOCK WASHERS, FLAT WASHERS AND HEX NUTS.

**STEP-9** ALIGN THE GRILLE GUARD ASSEMBLY WITH THE FRONT OF THE VEHICLE AND TIGHTEN ALL MOUNTING NUTS AND BOLTS.

**STEP-10** NOTCH THE LOWER BUMPER VALANCE TO CLEAR THE LOWER BRACKETS, AND REATTACH USING THE FACTORY RIVETS.



Installed



## INSTALLATION INSTRUCTIONS

### LIMITED WARRANTY

Go Rhino warrants to Buyer that for a period of five (5) years from the date of shipment of the product(s) ("Warranty Period") for black finishes and chrome finishes, that such products will materially conform to the specifications set forth in Go Rhino's specifications in effect as of the date of shipment(s) and will be free from material defects in material workmanship.

Go Rhino warrants to Buyer that for the life of the product(s) from the date of shipment of the product(s) ("Warranty Period") for polished stainless steel finished products purchased after April 2004, that such products will materially conform to the specifications set forth in Go Rhino's specifications in effect as of the date of shipment and will be free from material defects in material workmanship.

Warranty claims must be accompanied with the original invoice and photos of the product. It is the customer's responsibility to clean regularly and protect finish with regular applications of a nonabrasive polish that is compatible with the product's finish.

This warranty covers the cost of the product only and does not include the cost of removal, installation, third party modifications or shipping of the product. In no event shall Go Rhino be liable to buyer or any third party for any damage or harm caused by the product or use thereof, regardless of whether such damages were foreseeable and whether or not Go Rhino has been advised of the possibility of such damages, notwithstanding the failure of any agreed or other remedy of its essential purpose. This warranty is void if the product shows signs of alteration, misuse, mishandling, improper care, neglect, improper application and/or damage due to improper installation.

With respect to any such product(s) during the limited warranty period, Go Rhino shall, in its sole discretion, either: (i) provide a one-time repair or replacement of such products (or the defective part) or (ii) credit or refund the price of such products at the pro rata contract rate provided that, if Go Rhino so requests, Buyer shall, at Go Rhino's expense, return such product(s) to Go Rhino. The remedies shall be the Buyer's sole and exclusive remedy and Go Rhino's entire liability for any breach of the limited warrant(ies).

Go Rhino disclaims all other warranties except to the extent that any such warranty cannot be validly disclaimed under applicable law.

#### Finish Limited Warranty:

Limited lifetime on stainless steel products (after April 2004)

5 year warranty on black powder coat products

5 year warranty on chrome products

This warranty does not cover exposed welds

Finish warranty covers peeling, flaking, or cracking. Washing all finishes regularly with car wash soap and rinsing well with water is the best method for maintaining the finish on your products. You must also protect the finish with nonabrasive automotive wax on a regular basis. The use of any compound which contains abrasives becomes a self-defeating exercise as the compound scratches the finish and opens it to corrosion. The use of harsh chemicals used to remove bugs and tar may also cause the finish to fail and should be avoided.

If you are unsatisfied with your purchase please contact the establishment you purchased the product from.

If you need to place a warranty claim or need assistance, the Go Rhino customer service team will answer any questions you may have. Please contact the Go Rhino customer service team at 1-888-427-4466 during normal business hours Monday thru Friday 7 am to 5 pm PST. You may also email [warranty@gorhino.com](mailto:warranty@gorhino.com). In order to better serve you please provide a copy of the original invoice / receipt, a photo of the issue you are experiencing and a photo of the vehicle the product is installed on.

All warranty returns must have an approved RGA number. The RGA number must be clearly marked on the exterior of the return package. All approved warranty returns must be shipped to Go Rhino Products, 1002 Carriers Drive, Laredo, Texas 78045.

### PRODUCT REGISTRATION

Please remember to register your new purchase. You may register your product at [www.gorhino.com](http://www.gorhino.com). Registering your product may help speed any future warranty or customer service inquiries.

**Thank you again for purchasing from Go Rhino Products**

Please take a few minutes to view additional products for your vehicle and more at GORHINO.com  
These installation instructions are available on the Go Rhino web site along with installation videos for  
many of our products.

[www.gorhino.com](http://www.gorhino.com)

[www.bigcountryauto.com](http://www.bigcountryauto.com)

[www.gorhinopd.com](http://www.gorhinopd.com)