



n-fab.com

mfabinc f t

I-SHEET NUMBER: INST-00108
 PART NUMBER: PRF1981CC-TX, PRF2172B-TX
 PRODUCT: ALUMINUM HOOP STEP
 APPLICATION: FORD RANGER CREW CAB
 FORD BRONCO 4 DR



PREDATOR PRO



HARDWARE DESCRIPTION		
HWKT-04239X		QTY
FHLB 04240X	M10 X 25mm HEX BOLT FLANGE	12

PARTS INCLUDED	QTY
DRIVER SIDE	1
PASSENGER SIDE	1


Step 1. Identify the Driver side rail.

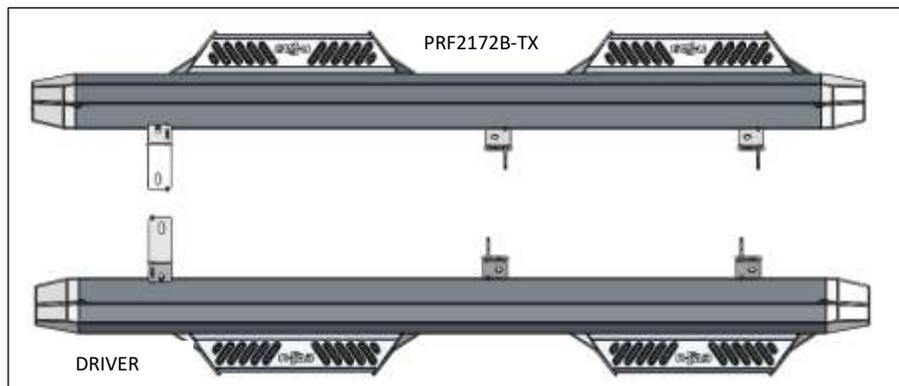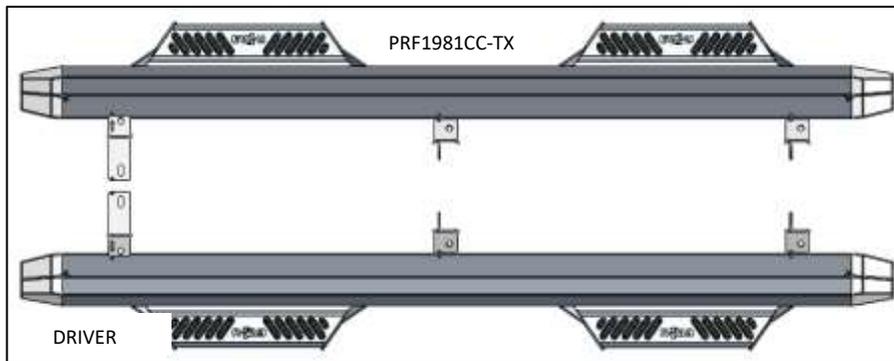

STEP 2: Remove any factory running boards or hardware and discard.
STEP 3: Clean/tap the three factory threaded mounting locations.



STEP 4: Carefully place step into place and loosely fasten using the supplied M10X25mm hardware.

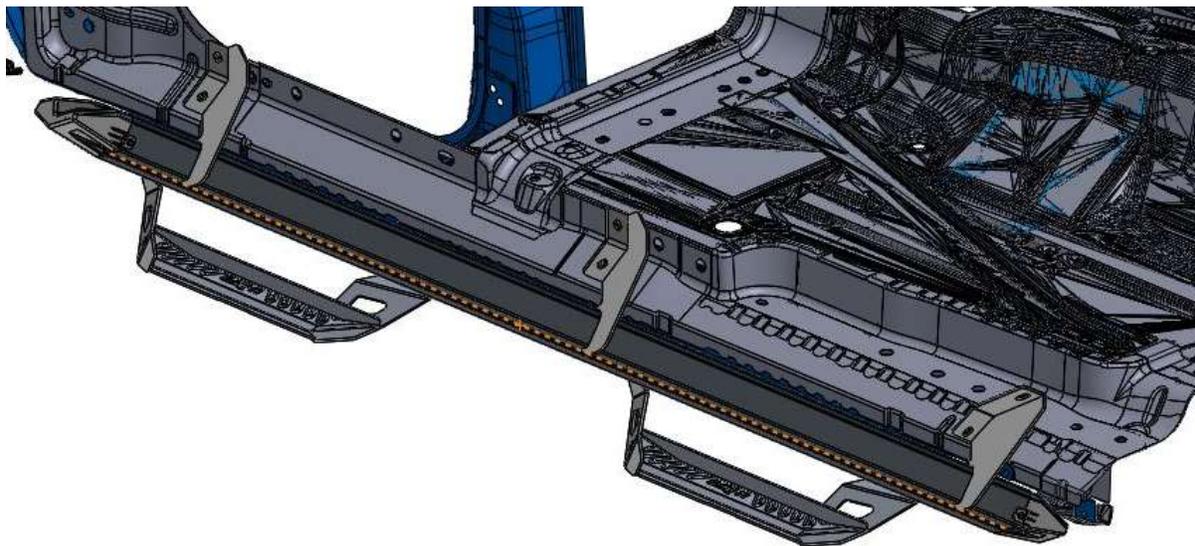

Step 5: Next, tighten the three lower bolts first following with the three upper bolts.
Step 6: Repeat steps 2-5 with passenger side.
Step 7: Your install is now complete.