



92-532

2019 CHEVY SILVERADO 1500

ENDEAVOUR & PATRIOT BOARD INSTALLATION SHEET

(866) 476-6276 / (866)IRONCROSS
www.ironcrossautomotive.com
IRON CROSS AUTOMOTIVE INC. 2009

QTY.	PARTS LIST	QTY.	PARTS LIST
16	8mm Bolt X 25mm	8	E-Clips
16	5/16 Flat Washers	4	Driver side bracket
16	5/16" Lock Washers	4	Passanger side bracket
16	5/16 x 3/4" Hex Bolts		
16	5/16 Flange Nuts		

MAINTENANCE AND CARE

Only use mild soap for regular cleaning. For heavy build up, a solution of ammonia and water can be used. Never use an abrasive material, i.e. steel wool, for cleaning purposes. Use terry cloth towels wiping in the direction of the tube at all times.

STEP 1 Remove contents from box and check for missing or damaged parts. Verify all parts are present, making sure to read and understand instructions before beginning installation.

- STEP 2**
- 1) Locate factory threaded holes on rocker panel and pinch weld that line up with bracket slots.
 - 2) Remove black plastic plugs.
 - 3) Install bracket using 8mm bolt and 5/16 flat washers and lock washers.
 - 4) thread a 8mm x 25mm hex bolt and 5/16" flat washer through top bracket slot into threaded hole.



DRIVER SIDE BRACKET



PASSANGER SIDE BRACKET

BEND IN BRACKET SHOULD FACE REAR OF TRUCK.

MOUNTING BOARD TO BRACKET

FIG 4a

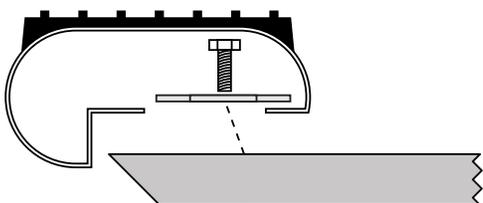


FIG 4b TOP VIEW



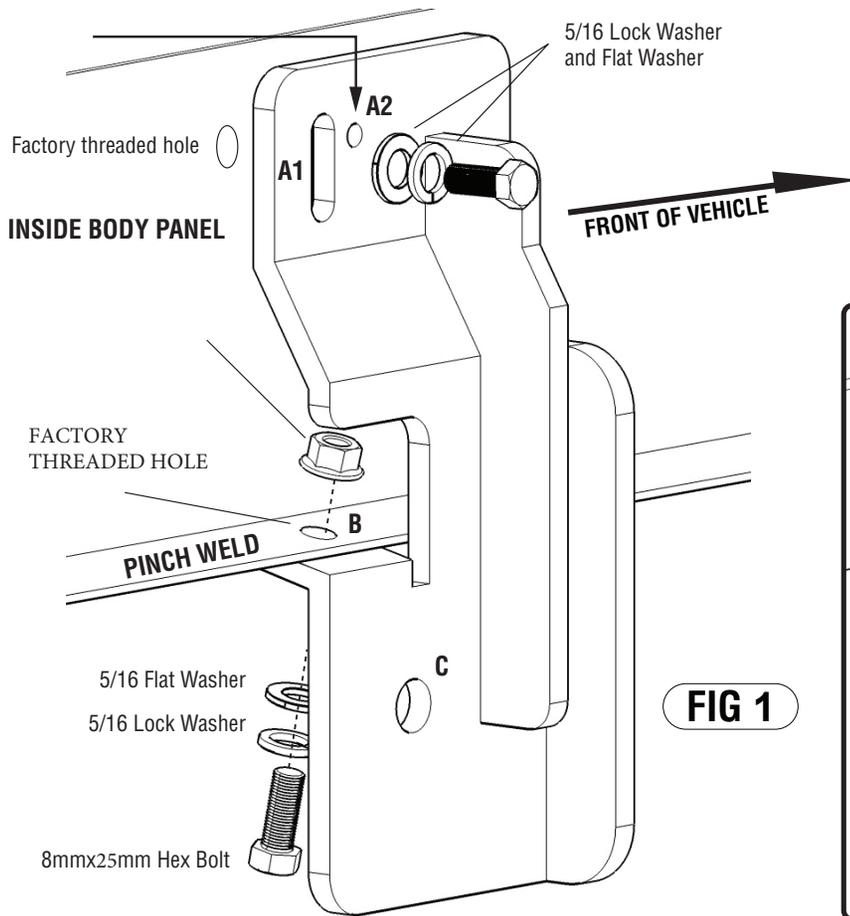


FIG 1

FIG 2

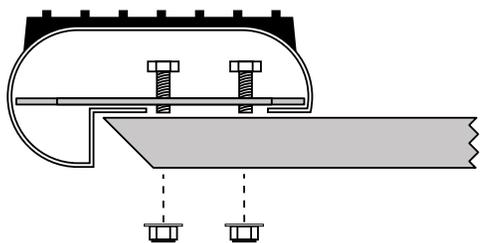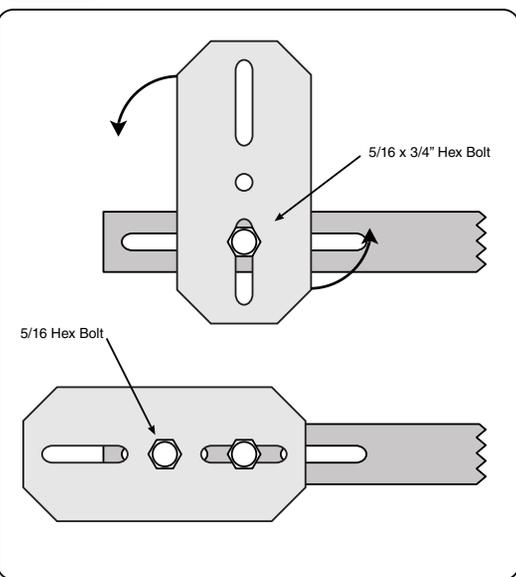