




I-SHEET PART NUMBER: INST-00226  
 PART NUMBER: **D194RKRC**,  
**D194RKRCSS4**, **D194RKRQC**,  
**D194RKRQCS4**  
 PRODUCT: RKR RAIL  
 APPLICATION: 19-26 RAM 1500 CC, QC



HARDWARE DESCRIPTION		QTY.
<b>HWKT-00031X</b>		
FLNT-00696X	M8-1.25 HX FLANGED NUT	18
FDRW-00736X	M8 FENDER WASHER	18

PARTS INCLUDED: D194RKRC D194RKRQC		QTY
Driver side Rail		1
Passenger side Rail		1
PARTS INCLUDED: D194RKRCSS4 D194RKRQCS4		QTY
Driver side Rail		1
Passenger side Rail		1
Detachable steps (1 Pair)		2

**Step 1:** Locate the driver side step rail.

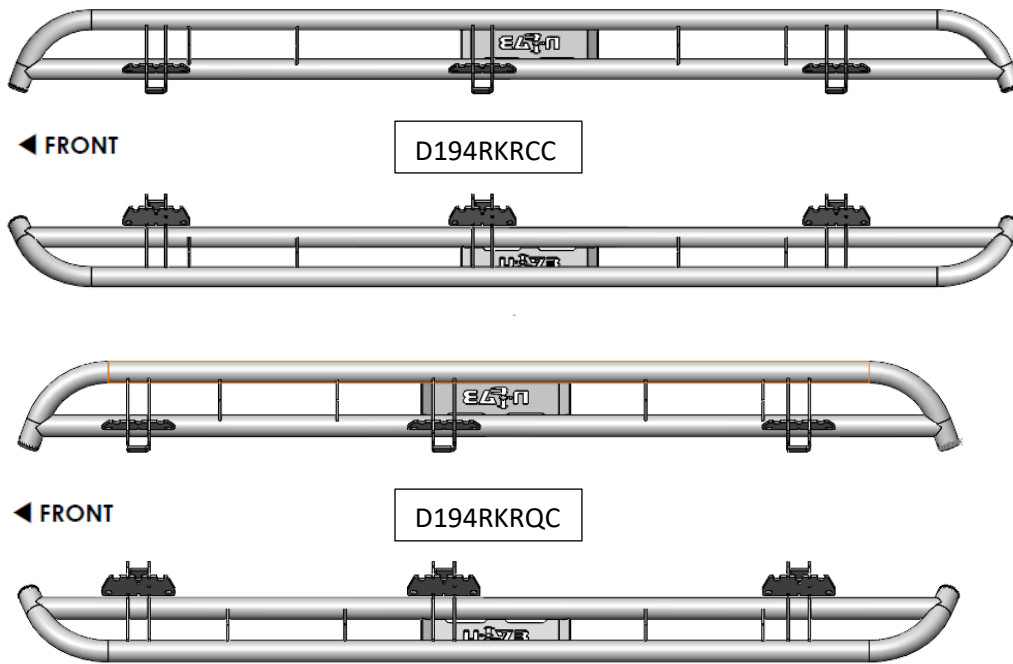

**Step 2:** Starting with the driver side, remove any steps and old hardware from the vehicle.



**Step 3:** On the inside rocker panel there will be three-attachment point consisting of three 8mm studs coming out from the panel. These studs may be covered in paint and will need to be cleaned before the installation.



**Step 4:** Carefully install the Predator Pro step to the three factory attachment points using the provided M8 flanged hex nuts. Leave finger tight for now.





I-SHEET PART NUMBER: INST-00226  
PART NUMBER: **D194RKRCC,**  
**D194RKRCCS4, D194RKRQC,**  
**D194RKRQCS4**  
PRODUCT: RKR RAIL  
APPLICATION: **19-26 RAM 1500 CC,QC**

**Step 5:** Next, adjust the RAILS up snug and parallel with the cab of the vehicle and tighten all rocker panel brackets to 30 ft/Lbs. **DO NOT USE POWER TOOLS.**



## Detachable step Install Instructions.

(If purchased prt# **D194RKRCCS4, D194RKRQCS4** or Detachable step prt#**JPTS32**)

**Step 1:** Attach the step to the mounts located in between the RKR rails using the supplied 1/2" x 1" flanged hex bolts and 1/2" flanged hex nuts. **NOTE: The step will mount to the left of the bracket opposite of the weld.**

