

INSTALLATION INSTRUCTIONS

37058 (1 – 2 – 3 – 4 – 8 – 9)
04 - 06 Nissan Titan Extended Cab.

Parts List :

QTY

- (1) Sidebar set (Left & Right)
- (2) Front mounting bracket (left & right)
- (2) Rear mounting bracket (left & right)
- (2) Auxiliary mounting bracket (left & right)

(1) Hardware kit including :

- (4) 1/2 x 2" Hex head bolt
- (2) 3/8 x 1 1/2" Carriage bolt
- (4) 1/2" Flat washer
- (4) 1/2" Lock washer
- (4) 3/8 x 1 1/4" hex head bolt
- (6) 3/8" Flat washers
- (6) 3/8" Lock washers
- (6) 3/8" hex nut

Tools Required :

- | | |
|-------------|-------------|
| 3/4" Socket | Ratchet |
| 3/4" Wrench | 14mm Socket |


Approximated installation time: 30 min.

Instructions :


1. Read and understand instructions completely before beginning installation.
2. Sidebar set consist of a driver and passenger side. The rear step is the closest to the bent. Be sure to determinate the correct side before installation.
3. Locate front body mount and remove existing bolts to secure front mounting bracket. Picture 1.
4. To install auxiliary mounting bracket, locate existing hole in the frame then pass thru a 3/8 x 1 1/2" Carriage and secure auxiliary mounting bracket with 3/8" flat & lock washers and hex nut. Picture 2.
5. To install rear mounting bracket, locate rear body mount and remove existing bolts, place rear mounting bracket and secure using the previously removed bolts and 3/8 x 1 1/4" hex head bolts, flat & lock washers and hex nuts. Picture 3.
6. Place the sidebar up to the mounting brackets and bolt to the front mounting bracket and auxiliary mounting bracket using a 1/2 x 2" hex head bolt, flat and lock washer. Bolt to the rear mounting bracket using 1/2 x 2" hex head bolt with corresponding washers. Leave loose.
7. Make any final adjustments to the alignment of the sidebar and tighten all bolts. Repeat for the opposite side.
8. You may need to periodically re-tighten the bolts.

Assembly Diagram :


Picture 1

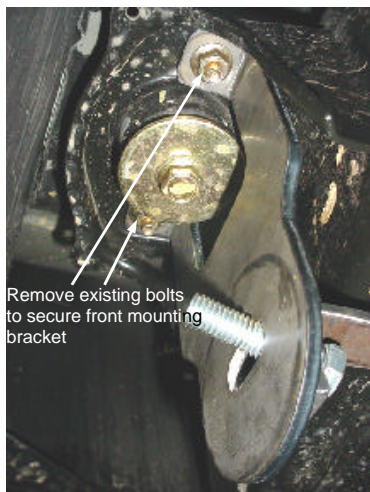

Picture 2

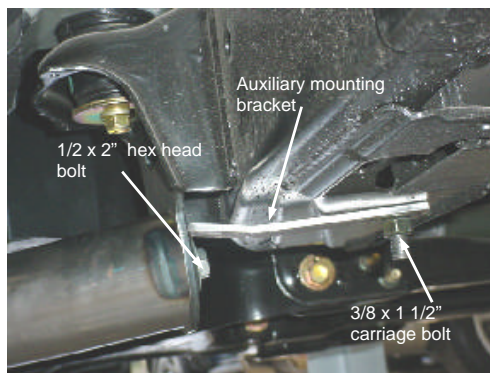

Picture 3

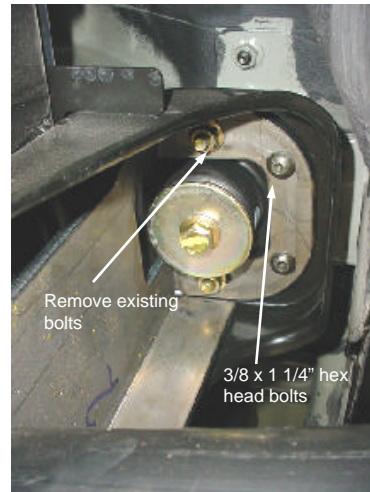

Revised 29/06/06

3:\Usuarios\Diseno\Instructivos.pdf\37\37058-ing.pdf

1 of 2

FODI7.003.E