INSTALLATION INSTRUCTIONS

Dakar Sport 52064(1-4) / Dakar 52064(1BB-4BB) / Rhino Charger BB52064(1B-4PS) F-150 / F-250 & LOBO 97-02 (HERITAGE) 97-06 (2 & 4 X 4)

Parts List:

QTY

(1) Hardware kit including:

(4) 1/2" x 5" hex head bolt

(2) spacer washers 1/2"

1. Bull Bar / Dakar Sport

Set of brackets

(6) 1/2" flat washers

(4) 1/2" lock nuts

(2) 1/2" x 2" hex head bolt

(2) 1/2" lock washers

Tools requiered:

3/4" Wrench Ratchet 3/4" Socket. 15 mm Socket

Instructions: Aproximated installation time: 30 min.

- Read and understand instructions completely before beginning installation.
- Locate the lateral slot (side to side) from chassis side. See image 1.
- 3. Place the bracket without tighten, just to see where is going to be and where is going to cut the vehicle defense. Cut on bull bar / Dakar sport tube direction. Note: Only if the vehicle hasn't tow hooks.
- 4. If the vehicle has tow hooks, take them off. Note: The tow hooks won't be used. In 4x4 version keep the front bolt removed from the tow hooks.
- Place the main bracket, put a 1/2" x 5" bolt throw the existents slots on chassis and bracket, hold them with a flat washer and a 1/2" lock nut. Hand - tighten. See image 2. Note: In 4x4 versions use the bolt removed from tow hooks, See image
- 6. Install your Bull bar / Dakar sport over the main brackets with 1/2" x 2 and their flat and lock washers, See image 3. Hand tighten.
- Make any adjustment to the alignment oof your Bull bar / Dakar sport and tighten all the hardware.
- Remember to check the hardware periodically.

Assembly Diagram:



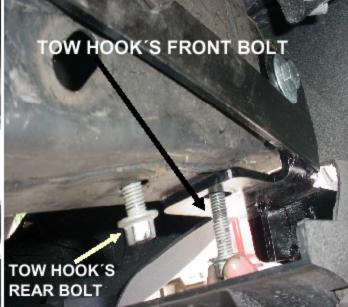


IMAGE 1

MODEL SHOWN

IMAGE 2

MODEL SHOWN

PASSENGER SIDE

PASSENGER SIDE IMAGES.

Cleaning and care instructions:

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 09-06-06

G:\Usuarios\Diseño\Instructivos PDF\Inst.52064.Pdf

FODI7.003.I 1 of 2

INSTALLATION INSTRUCTIONS

Dakar Sport 52064(1-4) / Dakar 52064(1BB-4BB) / Rhino Charger BB52064(1B-4PS) F-150 / F-250 & LOBO 97-02 (HERITAGE) 97-06 (2 & 4 X 4)

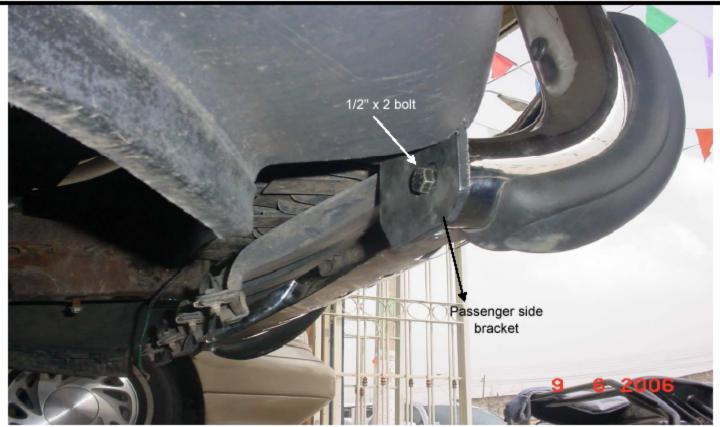


IMAGE 3



PRODUCT INSTALLED

Cleaning and care instructions:

Diseño: Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scracht the finish and cause corrosion.

Revised 09-06-06

G:\Usuarios\Diseño\Instructivos PDF\Inst.52064.Pdf

2 of 2 FODI7.003.I