


Parts List				
Item	Qty.	Code	Description	Max. Torque
1	1 Set	5211880AA	Main bracket.	-
<b>1</b>		<b>KTE-52188</b>	<b>HARDWARE KIT INCLUDES:</b>	<b>-</b>
2	2 Pc	-	1/2 x 2" Hex head bolt Zinc plate	75 Lb.Ft
3	2 Pc	-	1/2" Flat washer Zinc plate	-
4	2 Pc	-	1/2" Lock washer Zinc plate	-
5	2 Pc	-	1/2 x 4" Hex head bolt Zinc black	75 Lb.Ft
6	8 Pc	-	1/2" Flat washer Zinc black	-
7	2 Pc	-	1/2 x 1 1/2" Hex head bolt Zinc black	75 Lb.Ft
8	4 Pc	-	1/2" Lock nut Zinc black	75 Lb.Ft


Required Tools (Not included)	
Qty.	Description
1	rench
1	17mm Socket & Wrench
1	Ratchet
1	Extension to ratchet

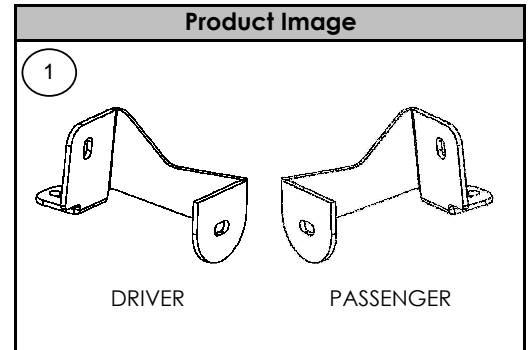


**Instructions**

1. Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
2. To maintain and care this product, keep it clean and do not use abrasive cleaners or polish waxes. We recommend to use only automotive wax such as pure carnauba to avoid scratches and rust.
3. Installation time is 25 min. ( around ).
4. Locate the bolts that are under the chassis and remove, as shown in **PICTURE 1**.
5. Position the bracket into the chassis and secure it with the bolt removed. Insert the 1/2 "x 4" hex head bolt in the upper bracket skylight through the chassis, 1/2" flat washer and 1/2" lock nut. Leave loose, as shown in **PICTURE 2**.

**PICTURE 1.**

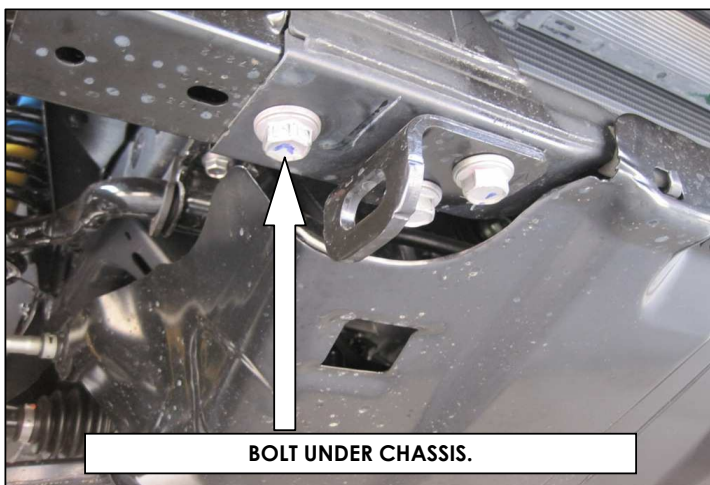


**PICTURE 2.**

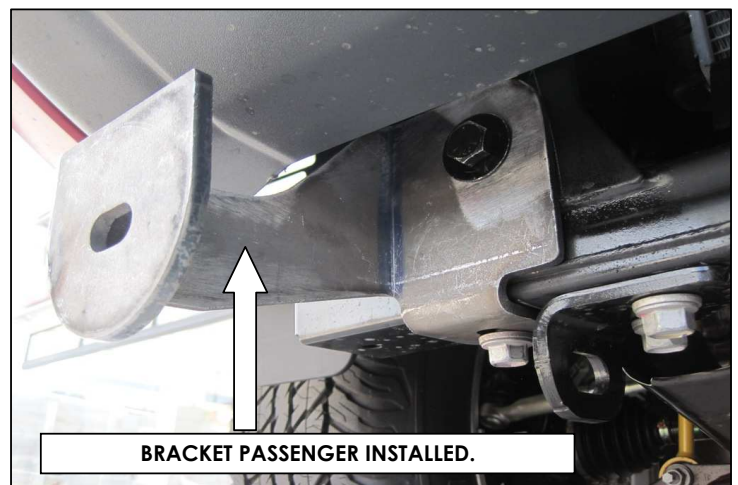

6. Already installed the brackets, position the Dakar / Rhino Charger / Bunker in brackets with 1/2" x 1 1/2" hex head bolt, 1/2" flat washer and 1/2" lock washer, as shown in **PICTURE 3**.

**PICTURE 3.**

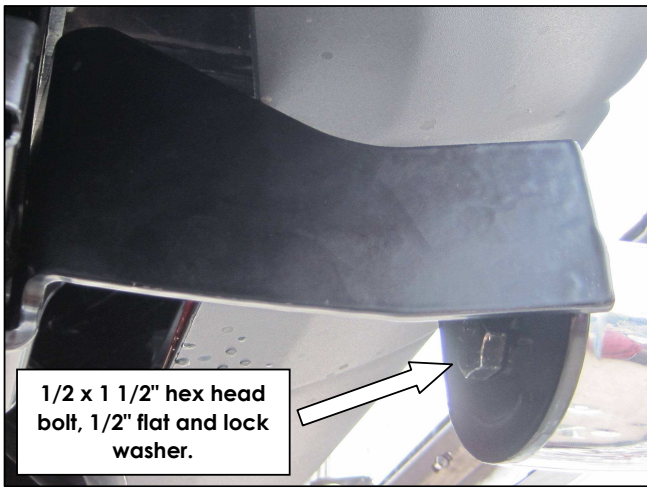

**PICTURE 4.**



**DAKAR / RHINO CHARGER / BUNKER INSTALLED.**

7. Make any adjustments to the alignment of the Dakar / Rhino Charger / Bunker and tighten all bolts.
8. Remember to re-tighten the bolts periodically.