

**GO RHINO! PRODUCTS ROAD DEFENDER 5000 SERIES**  
INSTALLATION INSTRUCTIONS 2006 CHEVY IMPALA PART NO. 5081W


**PARTS LIST**

**QTY PARTS DESCRIPTION**


2	7/16" x 1" HEX BOLTS
2	7/16" LOCK WASHERS
2	7/16" FLAT WASHERS
2	7/16" HEX NUTS
6	3/8" x 1 1/4" HEX BOLTS
6	3/8" LOCK WASHERS

**QTY PARTS DESCRIPTION**


6	3/8" FLAT WASHERS
6	3/8" HEX NUTS
1	500502P PASSENGER SIDE BRACKET
1	500502D DRIVER SIDE BRACKET
1	5081WD DRIVER SIDE BRUSH GUARD
1	5081WP PASSENGER SIDE BRUSH GUARD

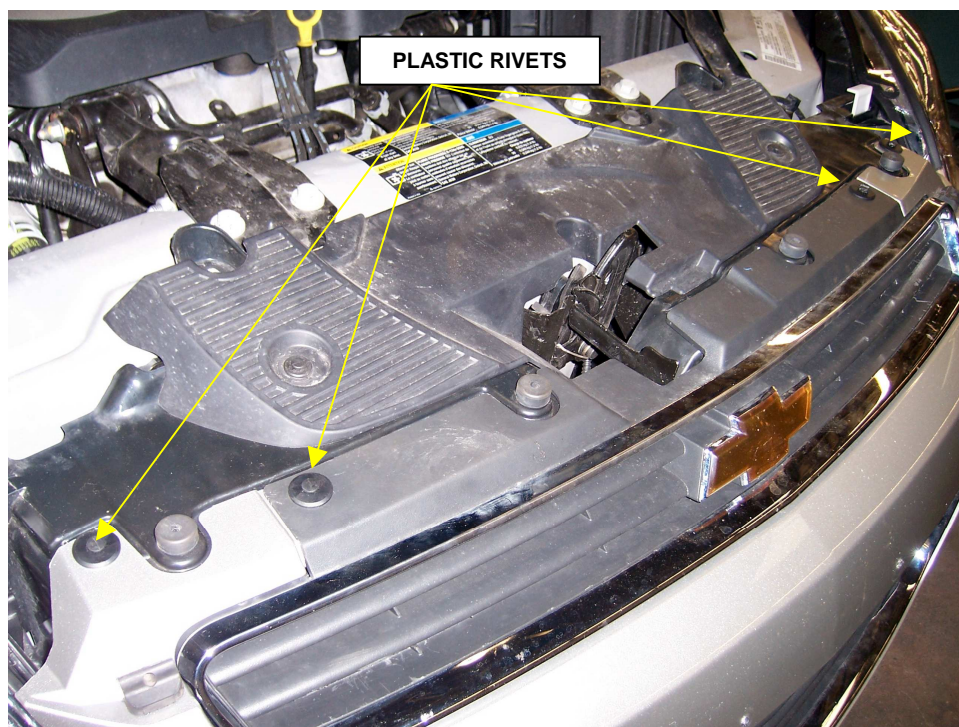


**STEP 1.** BEGINNING WITH THE PASSENGER SIDE, OPEN THE HOOD AND REMOVE THE FOUR (TWO PER SIDE) PLASTIC RIVETS SECURING THE BUMPER FASCIA.

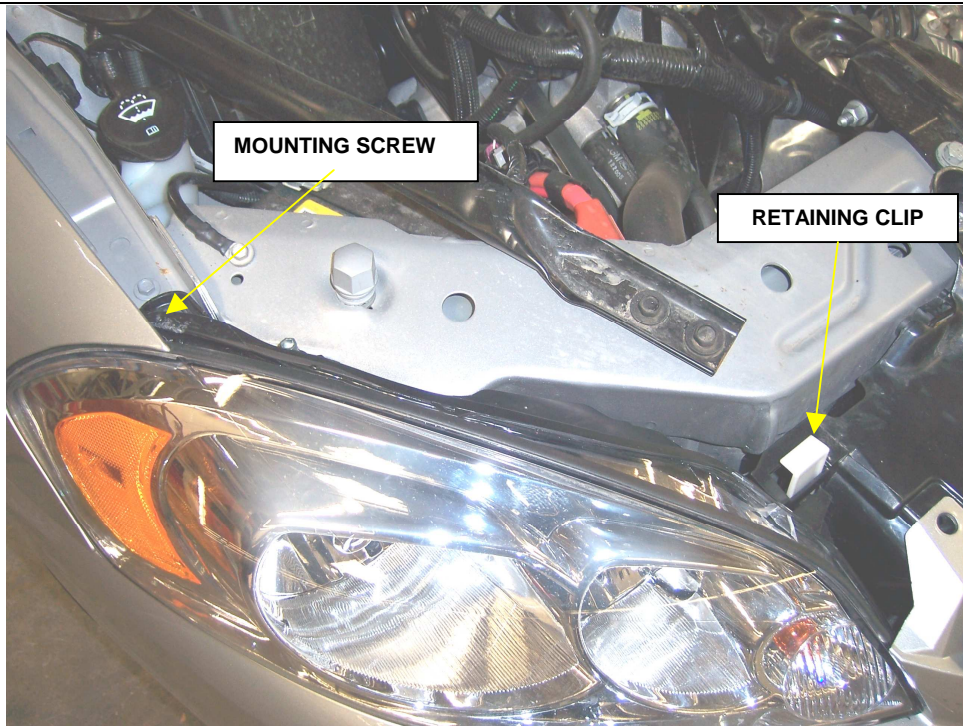

**STEP 2.** LOCATE AND REMOVE THE RETAINING CLIP AND SCREW SECURING THE HEAD LIGHT ASSEMBLY. REMOVE THE HEAD LIGHT ASSEMBLY AND SET ASIDE.

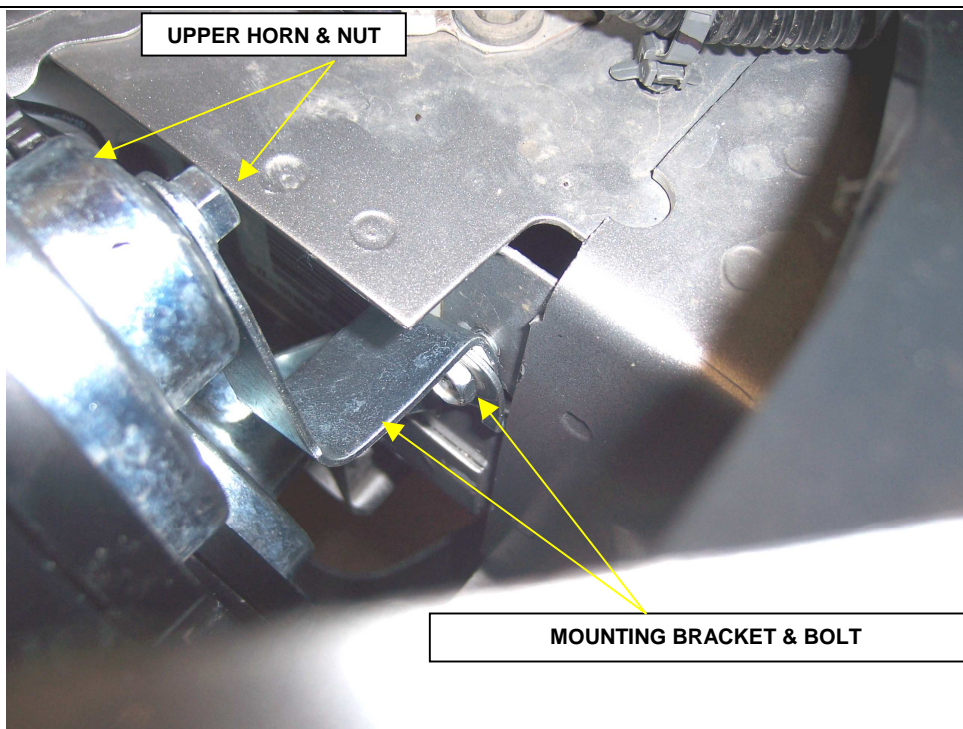


**STEP 3.** REMOVE THE NUT AND UPPER HORN FROM THE MOUNTING BRACKET. REMOVE THE BOLT MOUNTING BRACKET AND LOWER HORN FROM THE BODY AND SET ASIDE.

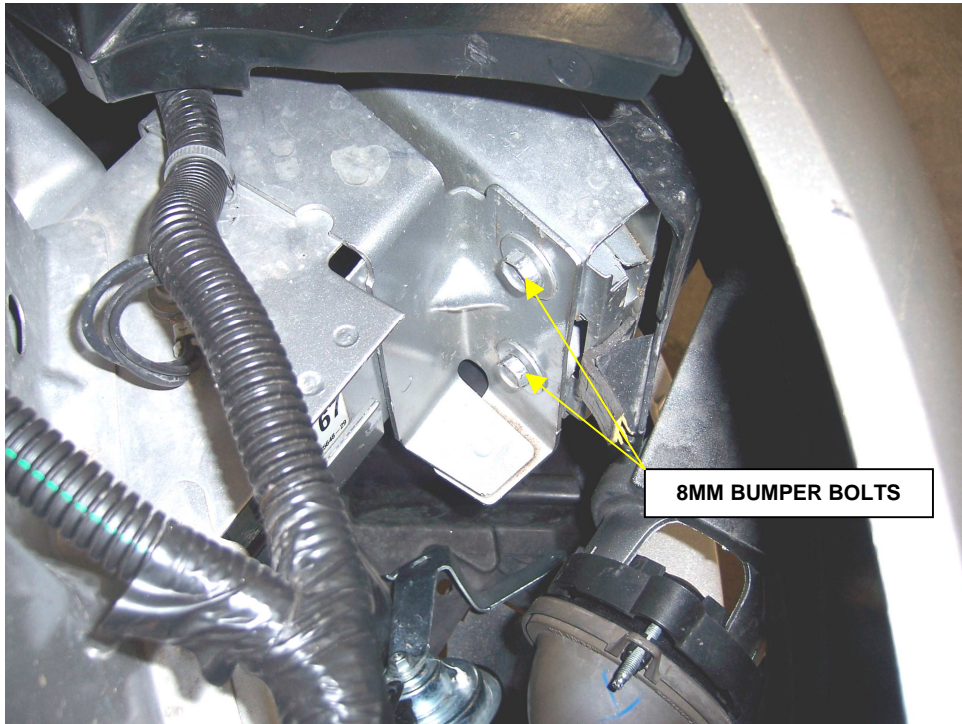


**STEP 4.** REMOVE THE (2) 8MM BOLTS SECURING THE BUMPER TO FRAME FLANGE.

**STEP 5.** REMOVE THE 3/8" NUTS AND BOLTS SECURING THE CENTER PLATE TO THE PUSH BUMPER SIDE PLATES.

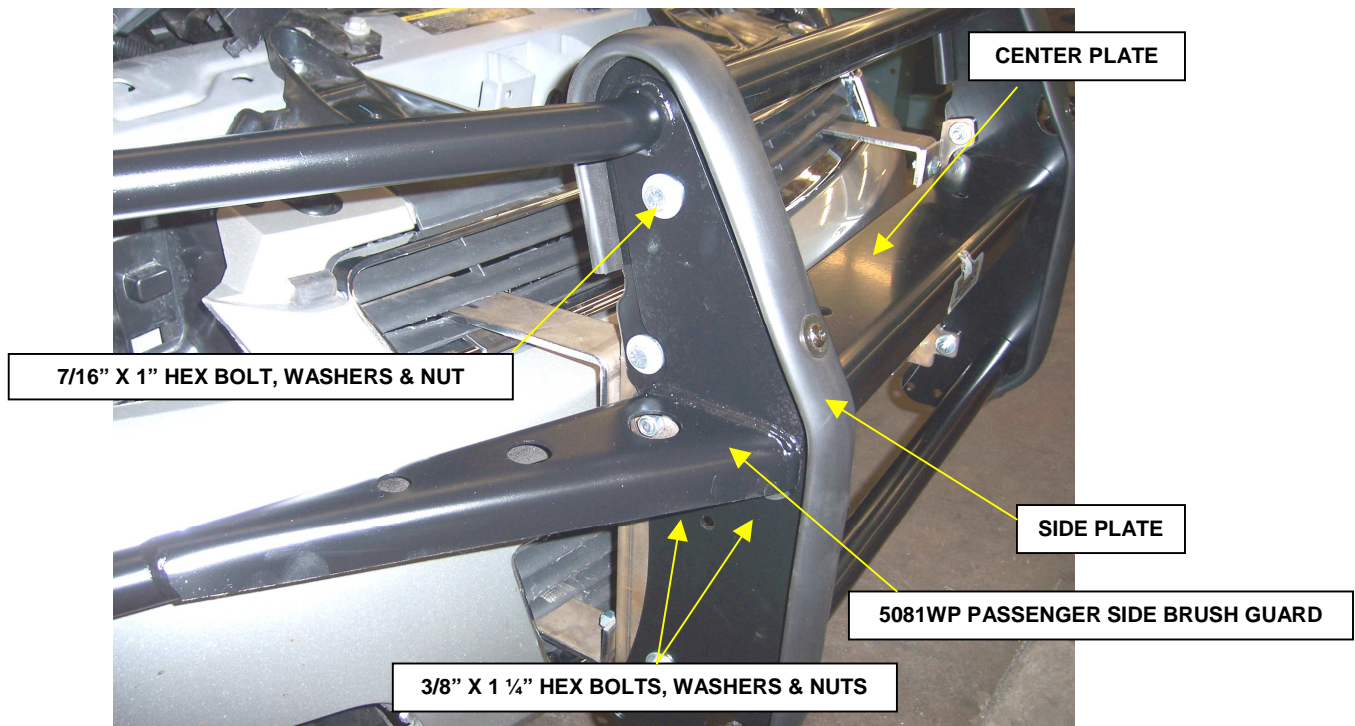

**STEP 6.** LOOSELY ATTACH THE PASSENGER SIDE BRUSH GUARD, TO THE PUSH BUMPER SIDE PLATE, USING THE 3/8" AND 7/16" FASTENERS AS SHOWN.

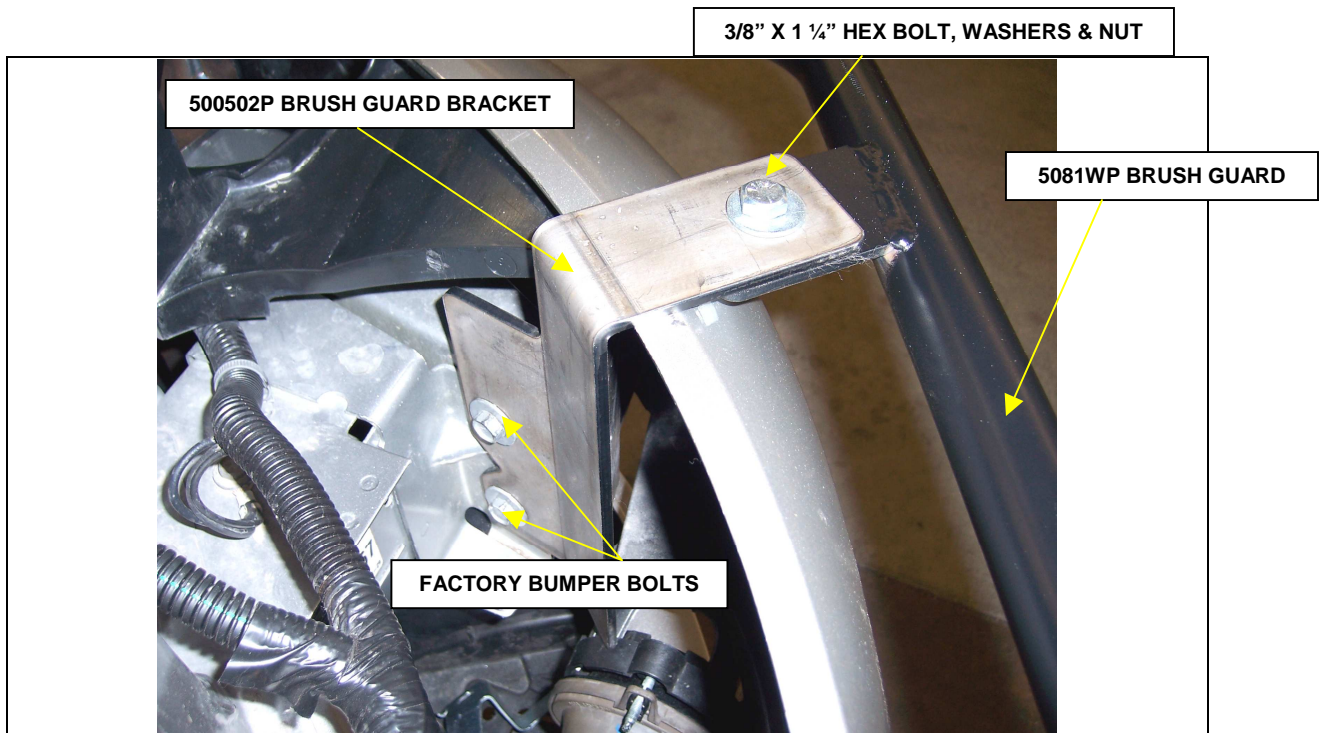


**STEP 7.** LOOSELY ATTACH 500502P MOUNTING BRACKET TO THE BUMPER USING THE FACTORY BUMPER BOLTS, AND TO THE BRUSH GUARD TAB USING THE 3/8" FASTENERS.

**NOTE:** IT MAY BE NECESSARY TO LOOSEN THE PUSH BUMPER AND MOUNTING BRACKET FASTENERS TO ALIGN THE COMPONENTS.

**REPEAT THE ABOVE INSTALLATION STEPS TO INSTALL DRIVER SIDE BRUSH GUARD.**

**STEP 8.** ALIGN THE BUSH BUMPER AND BRUSH GUARD ASSEMBLY WITH THE FRONT OF THE VEHICLE, AND TIGHTEN ALL NUTS AND BOLTS.

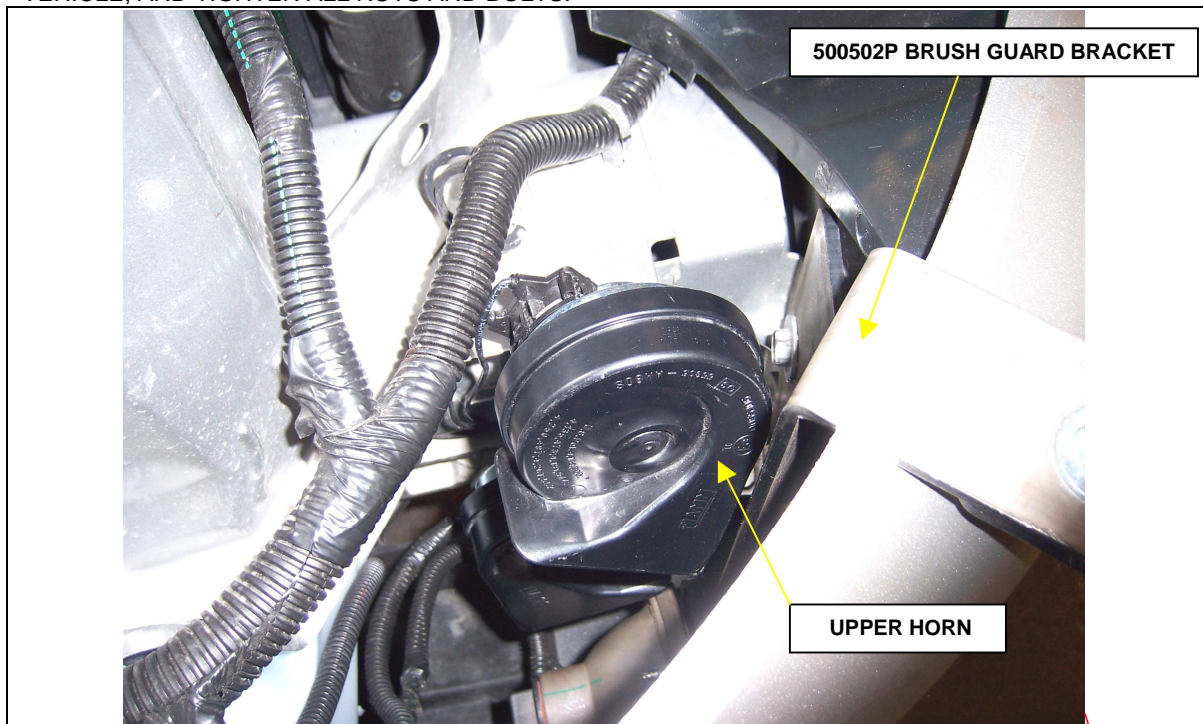

**STEP 9.** REATTACH THE MOUNTING BRACKET AND HORNS. **NOTE:** TO ALLOW FOR CLEARANCE BETWEEN THE UPPER HORN AND BRUSH GUARD BRACKET, BEND THE TOP OF THE HORN BRACKET SLIGHTLY TOWARD THE CENTER OF THE VEHICLE, AND ROTATE THE UPPER HORN AS SHOWN.



**STEP 10. REINSTALL THE HEAD LIGHTS, AND BUMPER FASCIA.**