

ROAD DEFENDER SERIES

HD WRAPAROUND INSTALLATION INSTRUCTIONS

PART NO. 5162WHD 2007-2010 CHEVY 1500 AVALANCHE, TAHOE & SUBURBAN 2/4WD

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST

<u>QTY</u>	<u>PART DESCRIPTION</u>	<u>QTY</u>	<u>PART DESCRIPTION</u>
2	51614 5/16" BOLT TAB	4	1/2" X 1 1/2" HEX BOLT
2	5/16" FLAT WASHER	4	1/2" FLAT WASHER
2	5/16" LOCK WASHER	4	1/2" LOCK WASHER
2	5/16" HEX NUT	4	1/2" HEX NUT
4	3/8" X 1 1/4" HEX BOLT	1	51621 DRIVER SIDE WRAPAROUND
2	3/8" X 1" BUTTON HEAD BOLT	1	51622 PASSENGER SIDE WRAPAROUND
6	3/8" FLAT WASHER	1	51611 DRIVER SIDE BRACKET
6	3/8" LOCK WASHER	1	51612 PASSENGER SIDE BRACKET
6	3/8" HEX NUT		



INSTALLATION INSTRUCTIONS

READ THE INSTALLATION INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN.

IT MAY BE NECESSARY TO LOOSEN THE GRILLE GUARD ASSEMBLY AND MOUNTING BRACKETS FASTENERS TO ATTACH THE BRUSH GUARDS.



STEP 1: BEGINNING WITH THE DRIVER SIDE REMOVE THE (5) SCREWS AND (2) PLASTIC RIVETS SECURING THE INNER FENDER WELL. **PHOTO #1**

STEP 2: PULL BACK THE INNER FENDER WELL, THEN LOCATE AND REMOVE THE (2) 5M BOLTS AND PLASTIC BRACKET SECURING THE BUMPER FASCIA TO THE FENDER. **PHOTO #2**

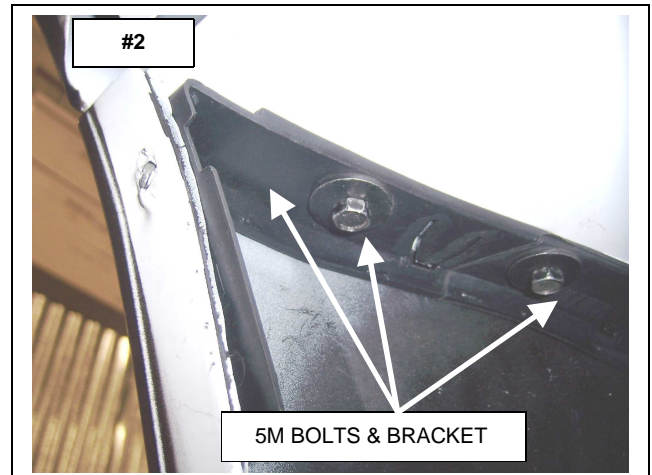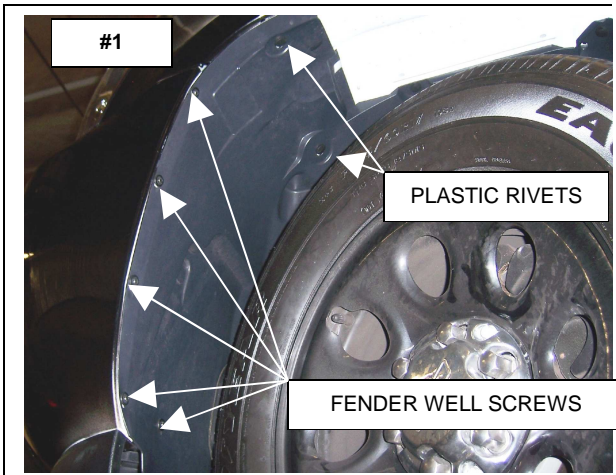



STEP 3: FROM THE FRONT OF THE VEHICLE, VIEW THE 8M FENDER BOLT AND BODY FLANGE THROUGH THE GAP BETWEEN THE BOTTOM OF THE HEADLIGHT ASSEMBLY AND TOP OF THE BUMPER FASCIA. **PHOTO #3**

STEP 4: WITH ASSISTANCE, FROM THE SIDE OF THE VEHICLE PULL OUTWARD ON THE BUMPER FASCIA, THEN REACH BEHIND THE FASCIA AND REMOVE THE FENDER BOLT. POSITION THE DRIVER SIDE BRACKET BEHIND THE FASCIA AND ATTACH THE BRACKET TO THE FENDER USING THE FACTORY FENDER BOLT AND TO THE BODY FLANGE USING (1) 5/16" BOLT TAB, (1) 5/16" FLAT WASHER, (1) LOCK WASHER AND (1) HEX NUT. DO NOT TIGHTEN. **PHOTOS #4, #5 & #6**

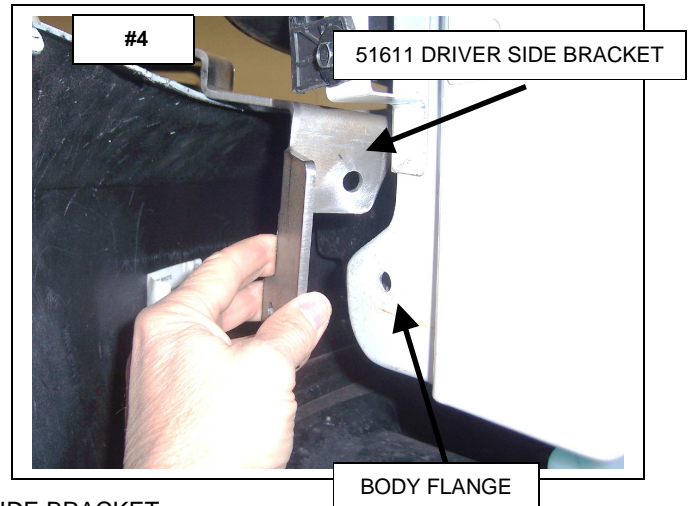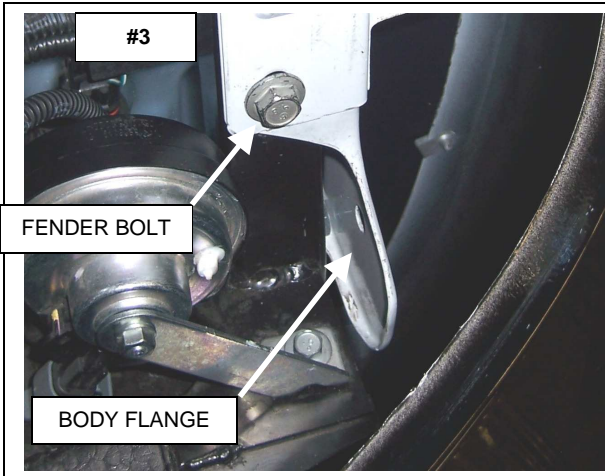

REPEAT THE ABOVE STEPS TO INSTALL THE PASSENGER SIDE BRACKET.

NOTE: PHOTOS #3 & #6 THE HEADLIGHT ASSEMBLY WAS REMOVED FOR PHOTO PURPOSES ONLY.

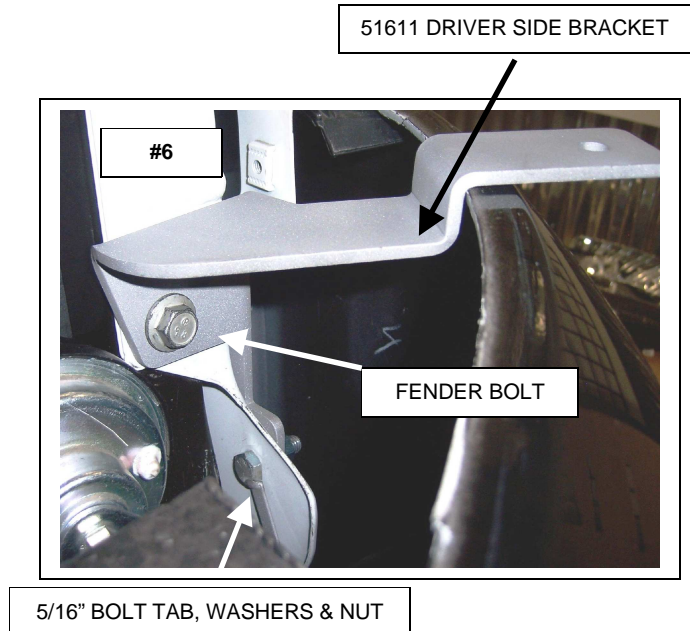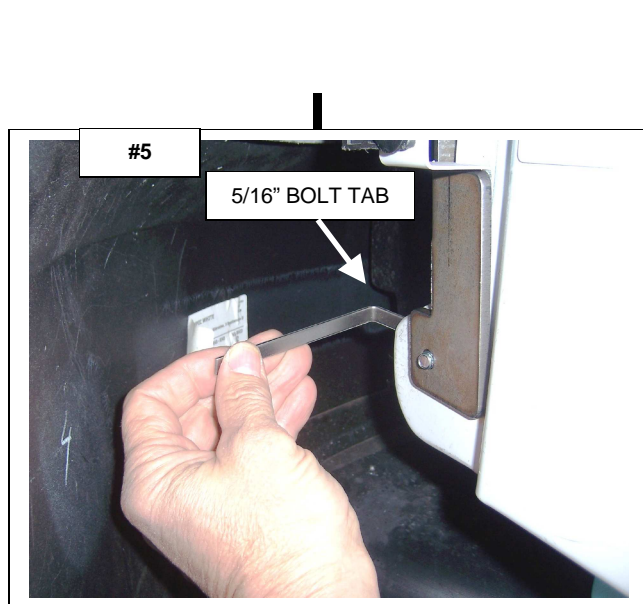


STEP 5: ATTACH THE DRIVER SIDE BRUSH GUARD TO THE GRILLE GUARD USING (2) 3/8" AND 1/2" HEX BOLTS, FLAT WASHERS, LOCK WASHERS AND HEX NUTS. **PHOTO #7**

NOTE: POSITION THE BRUSH GUARD TAB ON TOP OF THE MOUNTING BRACKET.

STEP 6: ATTACH THE BRUSH GUARD TAB TO THE MOUNTING BRACKET USING (1) 3/8" X 1" BUTTON HEAD BOLT, FLAT WASHER, LOCK WASHER AND HEX NUT. **PHOTO #8**

STEP 7: TIGHTEN ALL NUTS AND BOLTS THEN, REATTACH THE BUMPER FASCIA AND SPLASH SHIELDS.

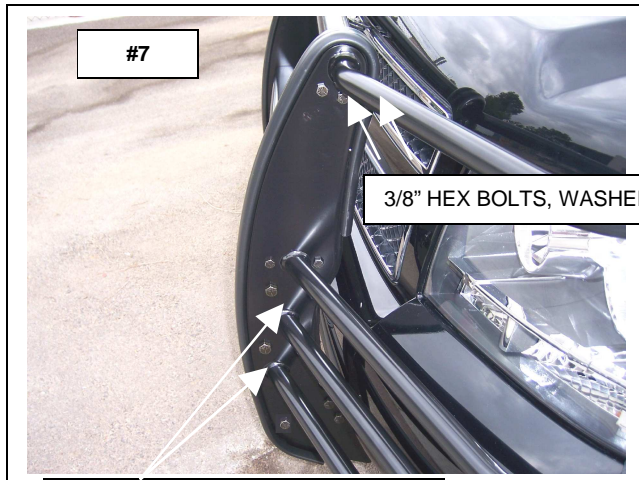

**FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888) 427-4466 FAX (714) 672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**