




INSTALLATION INSTRUCTIONS

HAVOC HS3

NERF BAR WITH STEP

HPG-003208

2009-2014 1500 CREW CAB 5'7" BED,
2010-2014 RAM HD CREW CAB 5'7" BED

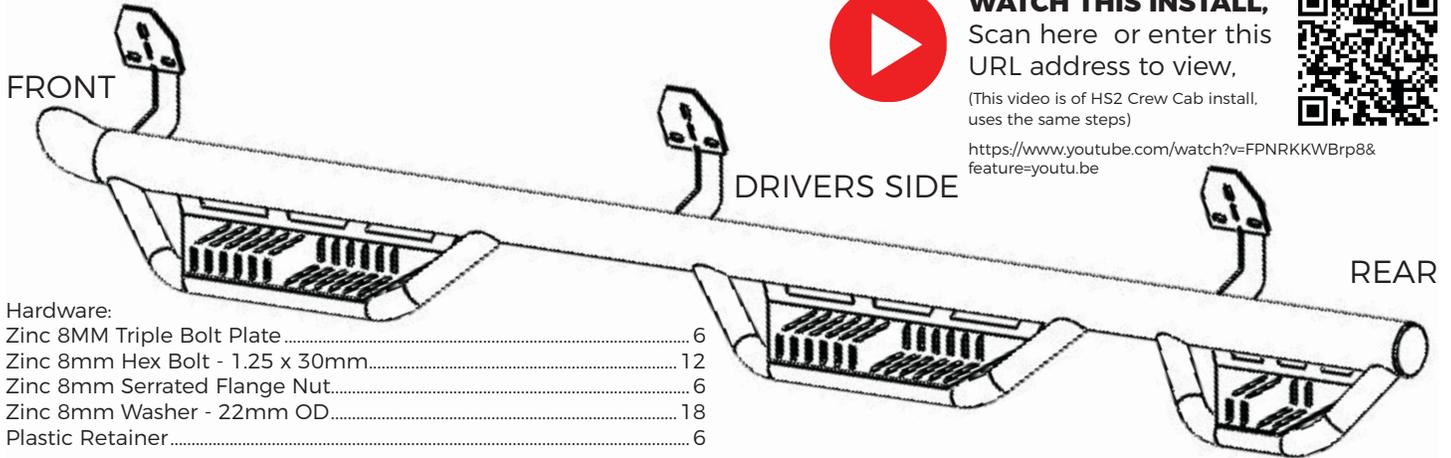

Hardware:

Zinc 8MM Triple Bolt Plate.....	6
Zinc 8mm Hex Bolt - 1.25 x 30mm.....	12
Zinc 8mm Serrated Flange Nut.....	6
Zinc 8mm Washer - 22mm OD.....	18
Plastic Retainer.....	6



WATCH THIS INSTALL,
Scan here or enter this
URL address to view,

(This video is of HS2 Crew Cab install,
uses the same steps)

<https://www.youtube.com/watch?v=FPNRKKWBrp8&feature=youtu.be>




STEP 1:
Identify the driver
and passenger bars.
The rear side is the
smallest step on
the bar. This goes
towards the
rear tire.



STEP 2:
Each mounting
bracket consist of
3 mounting holes.
All three holes will
be used to mount
to the truck.



STEP 3:
First thread plastic
retainer mid way down
the stud on the bolt
plate. Slide base of bolt
plate through large hole
and rotate into place.
Make sure you can
see the threads of
the bolt plate in
the lower two holes.

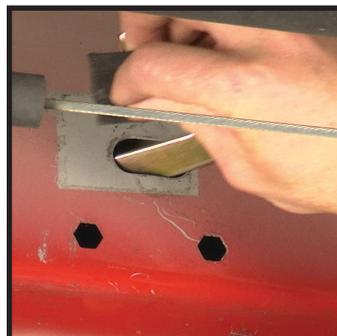

STEP 4:
While holding into the
stud with one hand
thread the plastic
retainer down the
stud to the body.
Take your time here,
avoid dropping bolt
plate into the body.



STEP 5:
Carefully place HS2
step onto Place. Hand
tightening the upper
nut to bolt plate with
washer. Best to have a
assistant to lift and hold
board in place. Insert
and hand tightening
lower bolts.



STEP 6:
Begin tightening nuts
& bolts in an alternating
pattern. **Avoid using
power or air tools.**
Tighten to 20ft lbs torque
to secure the board to
the truck. Repeat the
same procedure to the
other side.

