




INSTALLATION INSTRUCTIONS

HAVOC HS2

NERF BAR WITH STEP

HPG-46-20004

2007-2018 JEEP WRANGLER JK, 2-DOOR

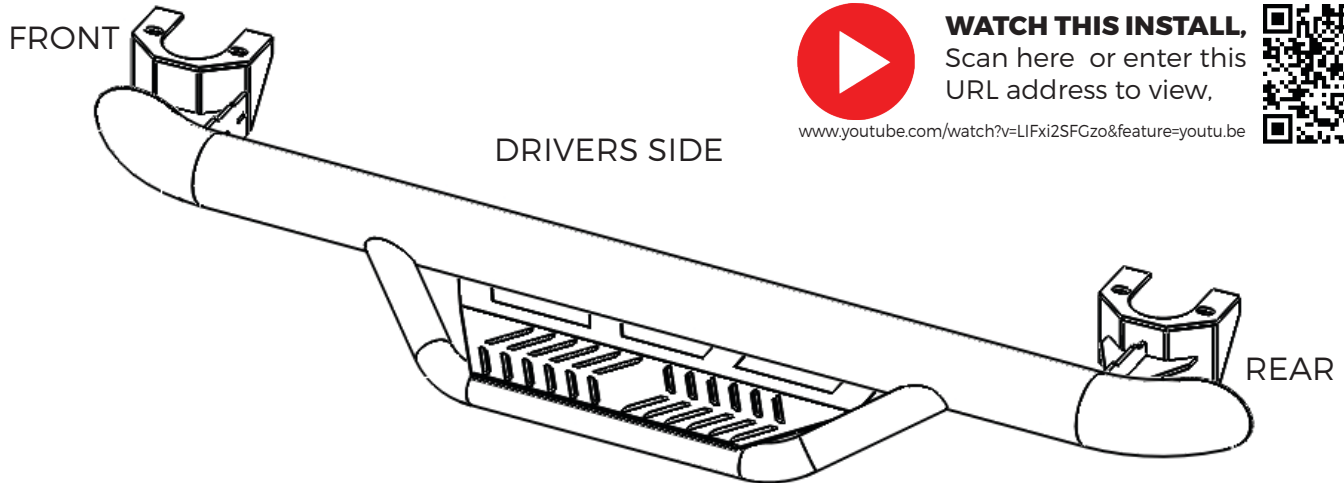

WATCH THIS INSTALL,
Scan here or enter this
URL address to view,

www.youtube.com/watch?v=LIFxi2SFGzo&feature=youtu.be



STEP 1:
Identify the driver and passenger bars. The rear brace has two triangle shape support brackets while the front brace has one triangle shape support bracket. See the two photos here for the difference.




STEP 2:
Each mounting bracket consist of 2 mounting holes. It mounts to the factory body mount.




STEP 3:
On the body mount remove the 2 nuts on either side of the mount.



STEP 4:
Carefully place HS2 step into place. Place mounting cup over the body mount washer. Slide upward over the studs. Best to have a assistant to lift and hold board in place.

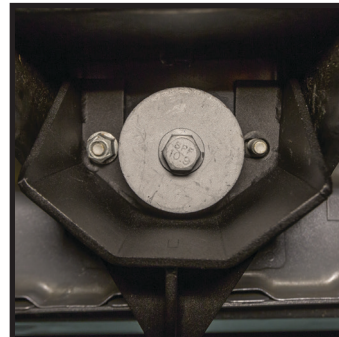

STEP 5:
Hand tighten all OE nuts to the studs

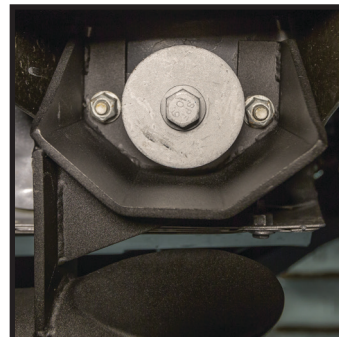

STEP 6:
Begin tightening nuts in a alternating pattern. **Avoid using power or air tools.** Tighten to 40ft lbs torque to secure the board to the Jeep. Repeat the same procedure to the other side.

