




INSTALLATION INSTRUCTIONS

HAVOC HS2

NERF BAR WITH STEP

HPG-46-40004

2007-2018 JEEP WRANGLER JKU, 4-DOOR

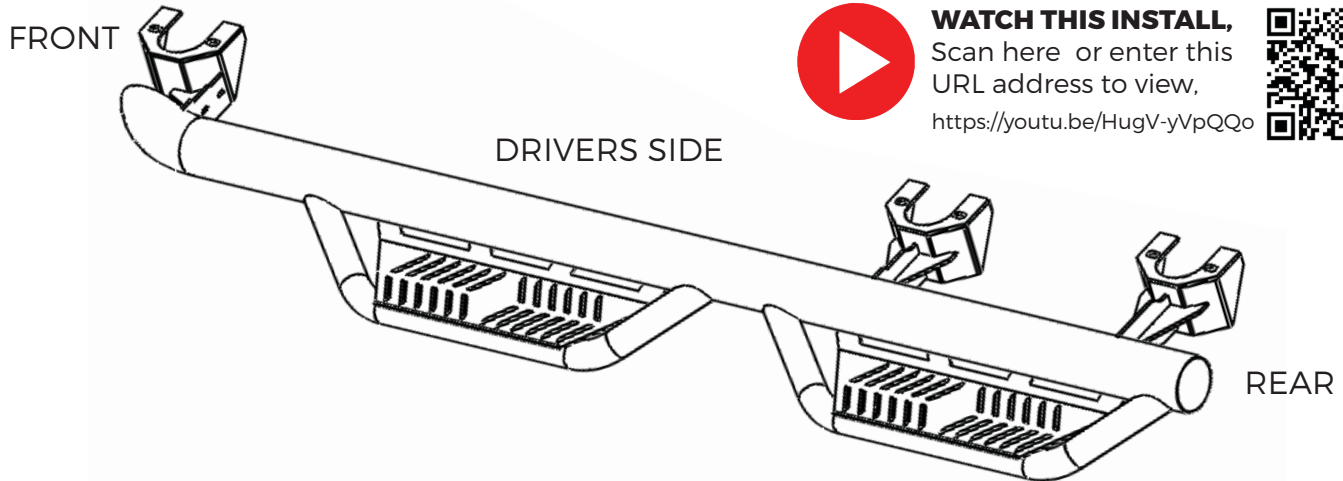

WATCH THIS INSTALL,

Scan here or enter this URL address to view,

<https://youtu.be/HugV-yVpQQo>



STEP 1:

Identify the driver and passenger bars. The tube is cut flat near the rear tire.



STEP 2:

Each mounting bracket consist of 2 mounting holes. It mounts to the factory body mount.




STEP 3:

On the body mount remove the 2 nuts on either side of the mount.




STEP 4:

Carefully place HS2 step into place. Place mounting cup over the body mount washer. Slide upward over the studs. Best to have a assistant to lift and hold board in place.

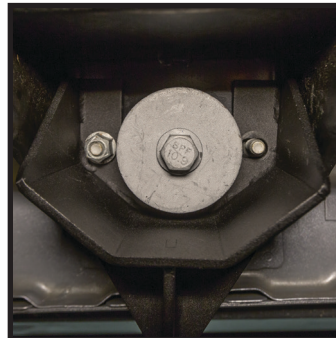

STEP 5:

Hand tighten all OE nuts to the studs

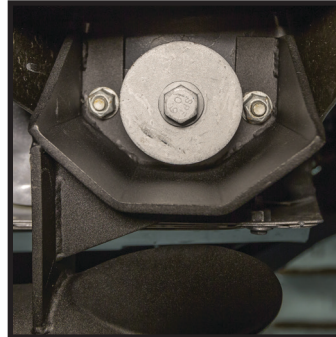

STEP 6:

Begin tightening nuts in a alternating pattern. **Avoid using power or air tools.** Tighten to 40ft lbs torque to secure the board to the Jeep. Repeat the same procedure to the other side.

