



For proper installation and best possible fit, please read all instructions BEFORE you begin.

Important Information

BEFORE you begin the installation process:

- Carefully read all instructions.
- Verify that all parts are included by checking the contents of your kit.

If any parts are missing or appear damaged, please contact our customer service team for assistance.

Customer Service

For support, please contact the Putco team, available Monday to Friday 8:30 AM to 5PM (Central Time).

1 800 247 3974

support@putco.com

Recommended Tools + Supplies

| | |
|-----------------|--|
| 3/4 Inch Wrench | |
| | |

Kit Contents

| | | |
|------------------------|--------------------------|----------------------|
| 2 | 2 Orange Tow Hook Clamps | 2 1/2-13 Flange Nuts |
| 4 5/16-18 1/4 in Bolts | 4 5/16-18 Flange Nuts | 1 wooden spacer |
| | | |

Denominator Tow Hook

1. Decide which of the 4 orientations seen on the right will best fit your vehicle and accessories






2. Using your $\frac{3}{4}$ inch wrench detach the orange clamp from the rest of the denominator by removing the 2 nuts holding it in place

3. Place one of the orange clamps onto the left tow hook with the threaded side hanging down.



4. Fit the large plate to the hook around the tow hook
 a. Use the holes seen in the table below depending on the orientation chosen in step 1

| 1 | 2 | 3 | 4 |
|--------------------|--------------------|---------------------|---------------------|
| Hole A | Hole B | Hole B | Hole A |
| Slot C | Slot D | Slot D | Slot C |
| Flange to the left | Flange to the left | Flange to the right | Flange to the right |

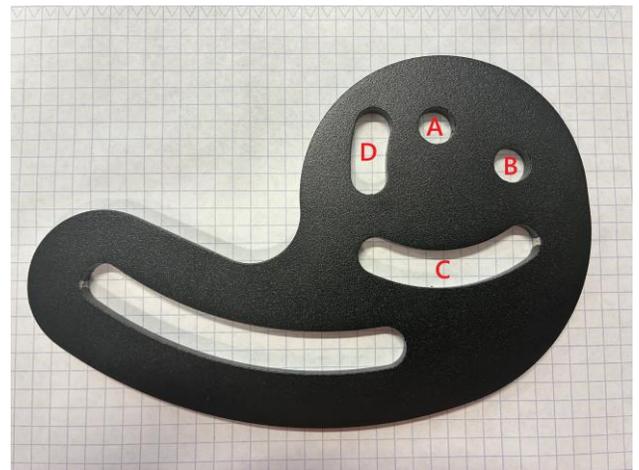

5. While holding the plate in place attach two of the $\frac{1}{2}$ -13 flange nuts to the bolts coming through the plates.



6. Use $\frac{3}{4}$ inch wrench to tighten the nuts placed in the previous step until they contact the rubber bushing attached to the clamp. They should still be loose enough to allow the clamp to move along the hook

7. Choose whether the risers should be mounted up or down
- Assure that whichever orientation is chosen doesn't interfere with the license plate or any sensors on the front of the vehicle**



8. If the Riser needs to be moved, it can be accomplished by the following steps.
- a. Using the $\frac{3}{4}$ inch wrench detach the nut holding the Carriage bolt on.
 - b. Flip the orientation of the while keeping the 2 endplates attached
 - c. Thread the carriage bolt back through the assembly assuring the square end seats into the slot
 - d. Attach and tighten the washer that was removed in step 1a. Allow for movement along the slot to adjust the riser.



9. Repeat steps 2-7 to install your second denominator on the opposite tow hook
- a. Be sure to mirror steps where necessary



10. Using the provided hardware, or whatever hardware came with your attachment, attach your accessory

| | |
|--|--|
| <p>11. Adjust the Denominator along its slots until your accessory is in a position you like.</p> <ul style="list-style-type: none">a. It is recommended to simply center your accessory | |
| <p>12. Use your $\frac{3}{4}$ inch wrench to tighten all the nuts and affix your Denominator in place</p> | |

Congratulations on completing the installation of your Putco product!
For information regarding your warranty, please visit www.putco.com/warranty.

Issues? Please Contact Our Technical Support Team: 1 800 247 3974

| | |
|---|---|
|  | <p>WARNING: Final Inspection required. Inspect product was properly Installed and all installation instructions were followed.</p> |
|---|---|

| | |
|---|--|
|  | <p>For additional information, please visit our website at www.putco.com!</p> |
|---|--|