


PUTCO®

# MOLLE PANELS

- MODULAR LIGHTWEIGHT LOAD CARRYING EQUIPMENT -

## INSTRUCTION GUIDE

### TOYOTA TACOMA

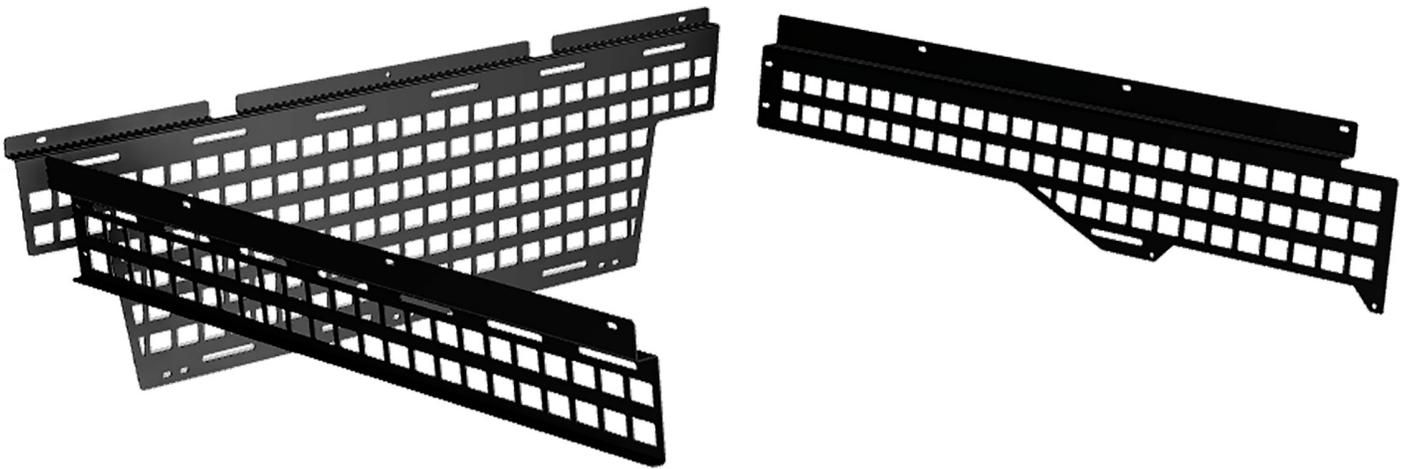

Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

**1-800-247-3974**

Monday-Friday 8:00am - 5:00pm (Central Standard Time)  
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION  
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

#### REQUIRED TOOLS

T40 TORX DRIVER



T30 TORX DRIVER



PHILLIPS SCREWDRIVER




#### CONTENT LIST

DESCRIPTION	QTY
Molle Front Plate	1
Molle Side Plates	2
Side Brackets	2
Front Brackets	3
M6 Torx-Head Bolts	10
8-32 Philip's-Head Screws	3
5/16 Well Nuts	3



## INSTALLATION INSTRUCTIONS

- 1** Unscrew and remove both in-bed rails using a T30 Torx driver.
- 2** Using a T40 Torx driver, unscrew and remove the two tie-down hooks located towards the front of the bed. Place the supplied side brackets behind the tie-down hooks, then fasten to the bed re-using factory hardware.
- 3** Loosely assemble a well nut and Philip's-head screw onto each of the three front brackets. Insert the well nuts down into each of the three drain holes located towards the front of the bed floor, then tighten the screw until the well nut is snug in the hole, but do not overtighten

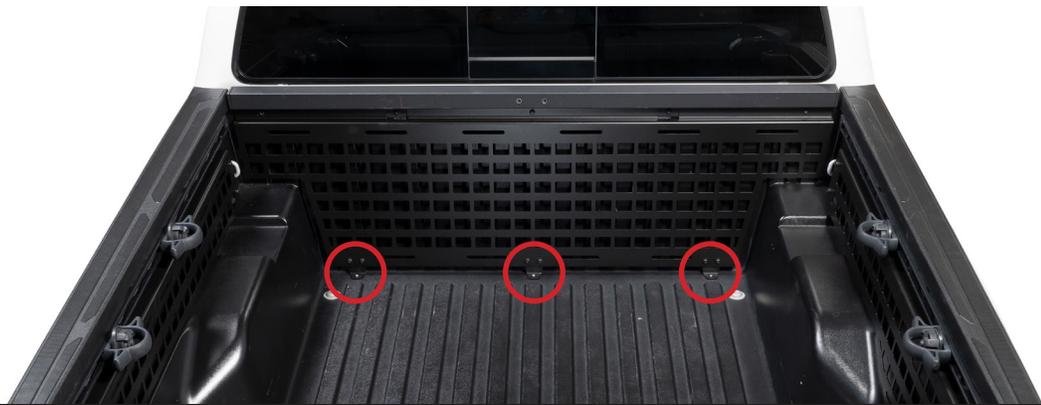

Front bracket locations circled in red

- 4** Remove and set aside the two T30 Torx-head fasteners from the passenger-side bed cubby shown below. The passenger-side molle plate will mount to this location re-using these fasteners.





- 5** Place the side plates on the backside of the in-bed rails, then fasten to the bed re-using the factory hardware.
- 6** Unscrew and remove the three required T30 Torx-head fasteners from the upper part of the bed front, then set the front molle plate in place, and attach to the bed re-using these three fasteners.
- 7** Fasten the molle plates to their brackets using the supplied M6 bolts and a T30 Torx driver.
- 8** Once all the plates are installed in the vehicle, ensure all fasteners are tightened until snug, but do not overtighten.

**Your new MOLLE Panels are now successfully  
installed on your vehicle!**