









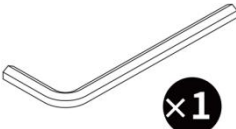

Installation Manual



Warnings :

- Please follow the installation instructions carefully, failure to do so will cause property loss or road accidents!
- We are not responsible for damages to your vehicle if the load is above the weight limits. Consult your vehicle owner's manual for any weight or load restrictions.
- This kayak rack can be only installed on vehicles with cross roof bars.

Contents:

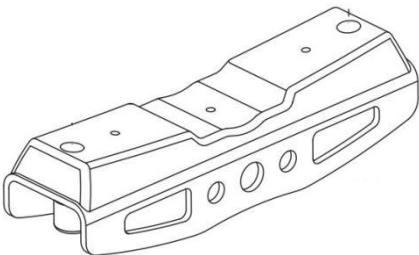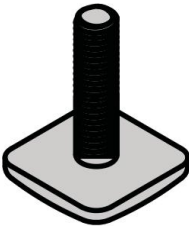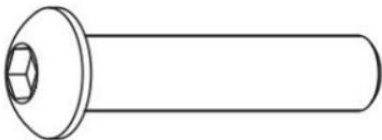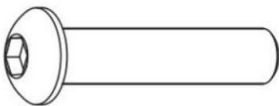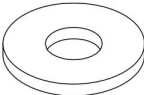	
2* Carrier	2* lashing straps with cam buckles
	
4*metal bracket with rubber pad	4* T-bolt
	
8* M6 X80mm button head Bolt	8* M6X35mm button head Bolt
	
4*M6 washer	12* M6 Nut
	

Installation Steps:



Place the rack onto cross bars with the bars between the two M6X80mm button head bolts



Mount the metal brackets on the bolts through the drilled holes.





Screw the bolts tight onto the metal bracket and make sure that the kayak racks are securely attached onto your cross bars.




Adjust the longer arm of the J bar to your required angle by loosening the plastic knobs. Make sure the two racks are aligned to the same angle.

Installation Steps(T-slot installation):

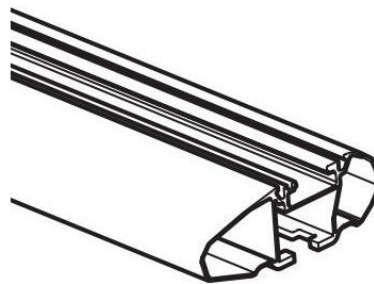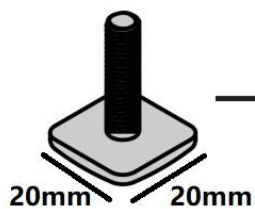


STEP 1:



Use the M6X35mm bolt through the hole to fix the plastic bottom under the steel tube as shown

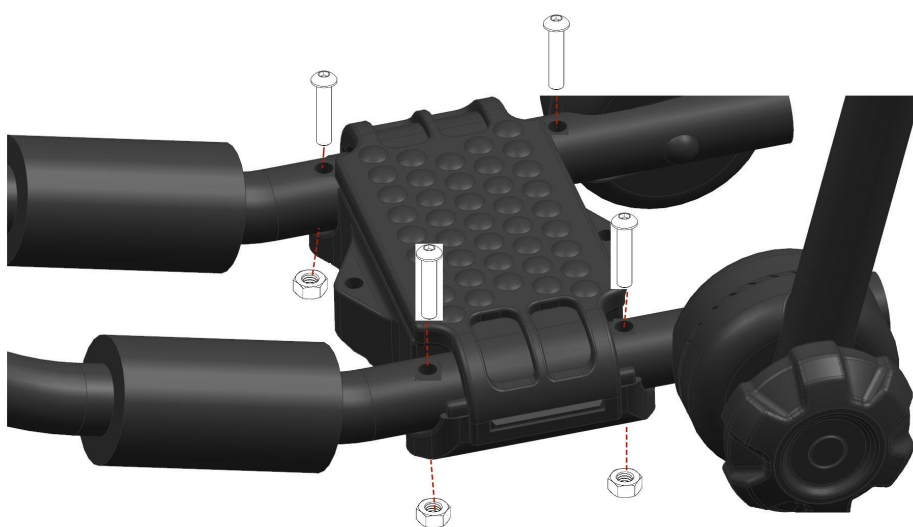

STEP 2:

Slide the T-bolt into the T-slot of the cross bar in proper position, two bolts in each bar, and put the kayak rack on the cross bar and tighten the lock nut as shown.

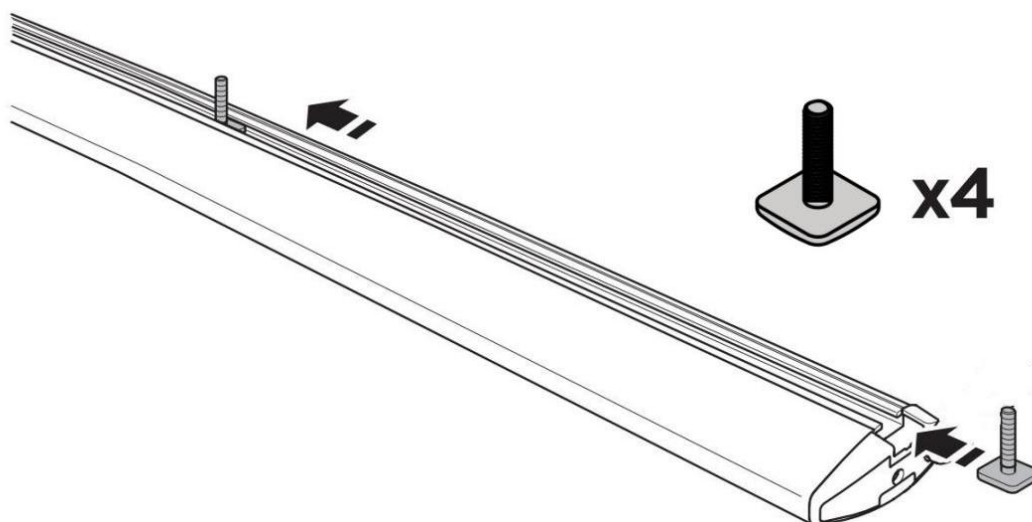

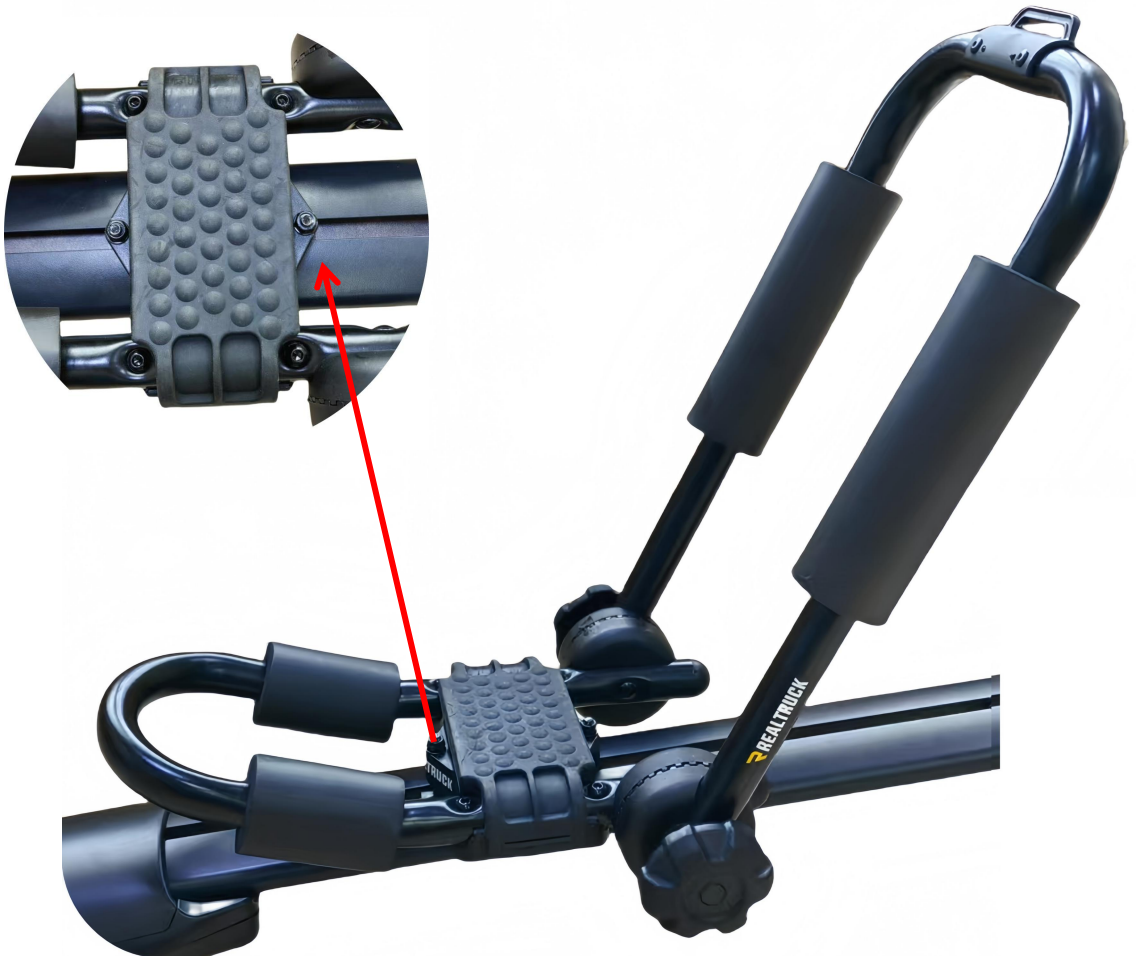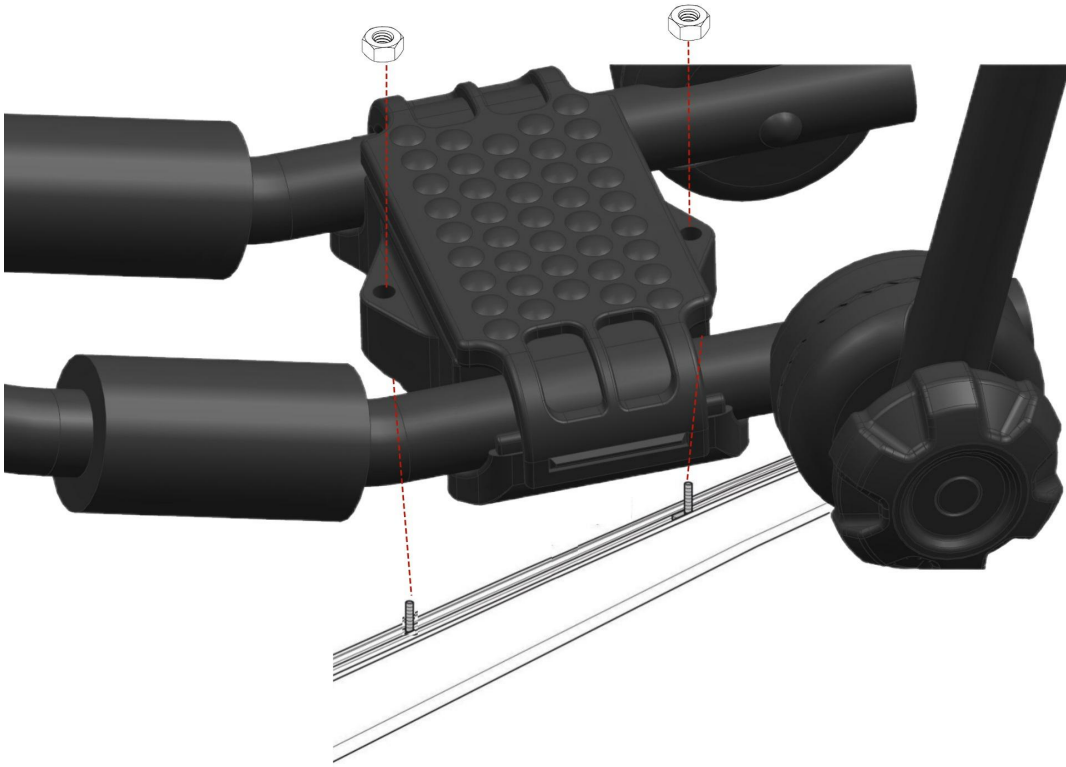


Install the Kayak onto the Rack:




Put the non-cam end of the lashing strap through the plastic loop on the longer arm




Feed half of the length of the strap into the loop.

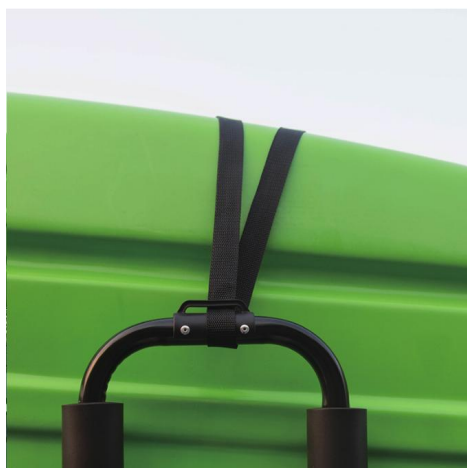

Load the kayak or canoe onto the rack, put the two-fold straps over the kayak.

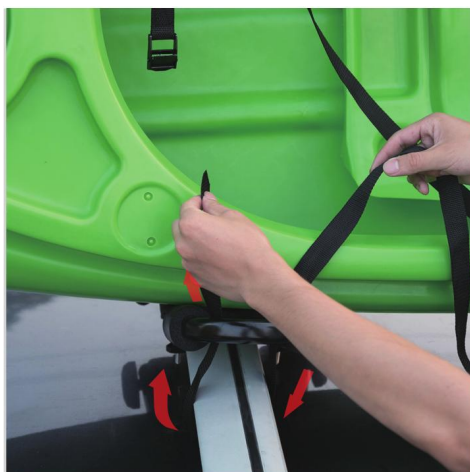

Thread the non-cam end of the strap from underneath the cross bar and pull it out through the shorter arm of the rack.

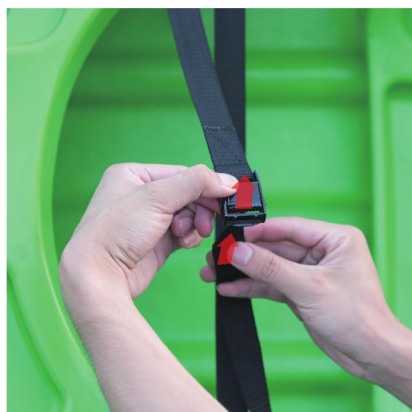

Feed the loose end into the ratchet part of the cam buckle and tighten it by pulling the loose end.

Please DO FEED THE STRAP WITH THE RIGHT DIRECTION LIKE THE PICTURE SHOWS.