

# TRUXPORT REPLACEMENT CABLE GUARD INSTALLATION SHEET


**NOTE:** It is important that all installation surfaces are clean and free of dirt, debris, and contaminants before installation.

## TOOLS REQUIRED

- No tools required


## PARTS INCLUDED

- 2x Cable Guard

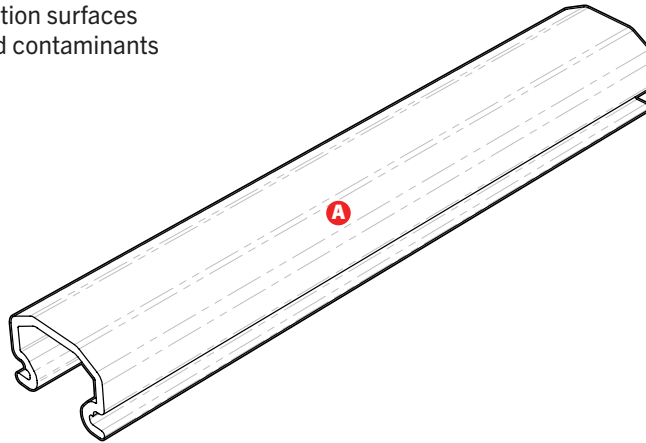


## INSTALLATION STEPS

- 1 Open cover.

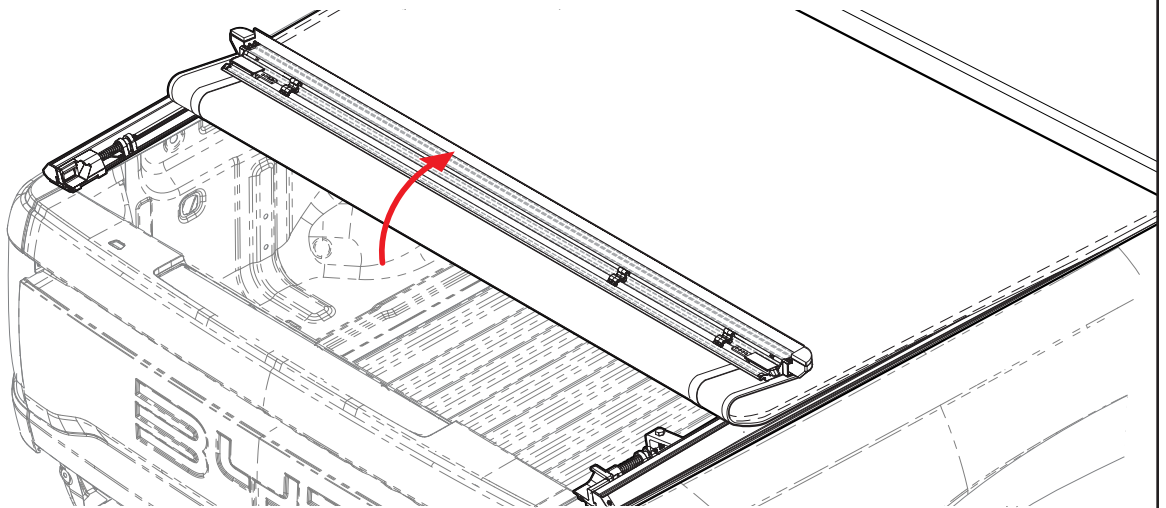


- 2 Locate where the release cable attaches to the slam latch. Slide the cable clip out of the way.

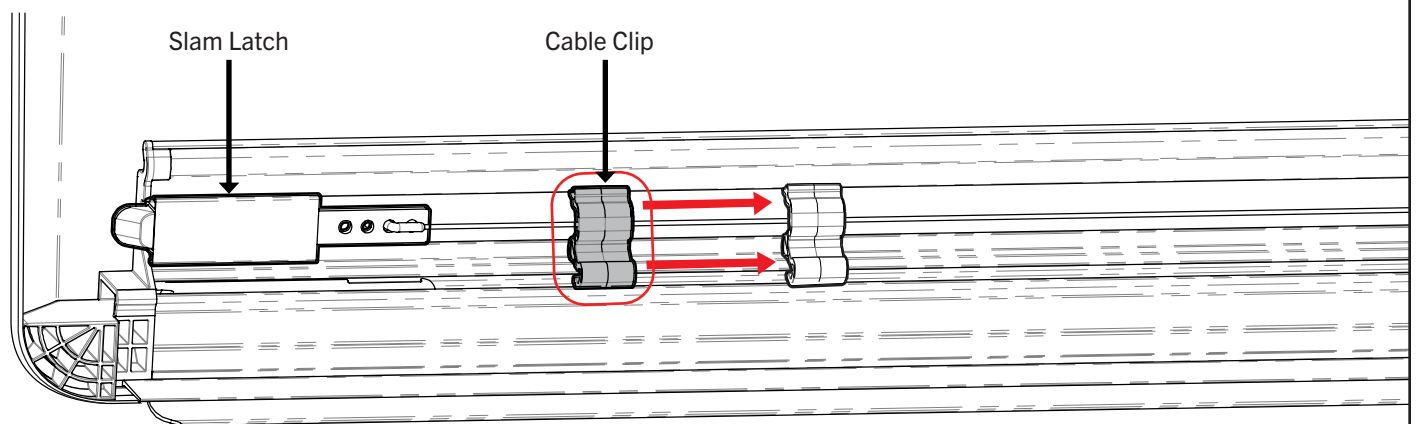


# INSTALLATION STEPS

- 3** Squeeze and clip Cable Guard (A) into rear header extrusion.

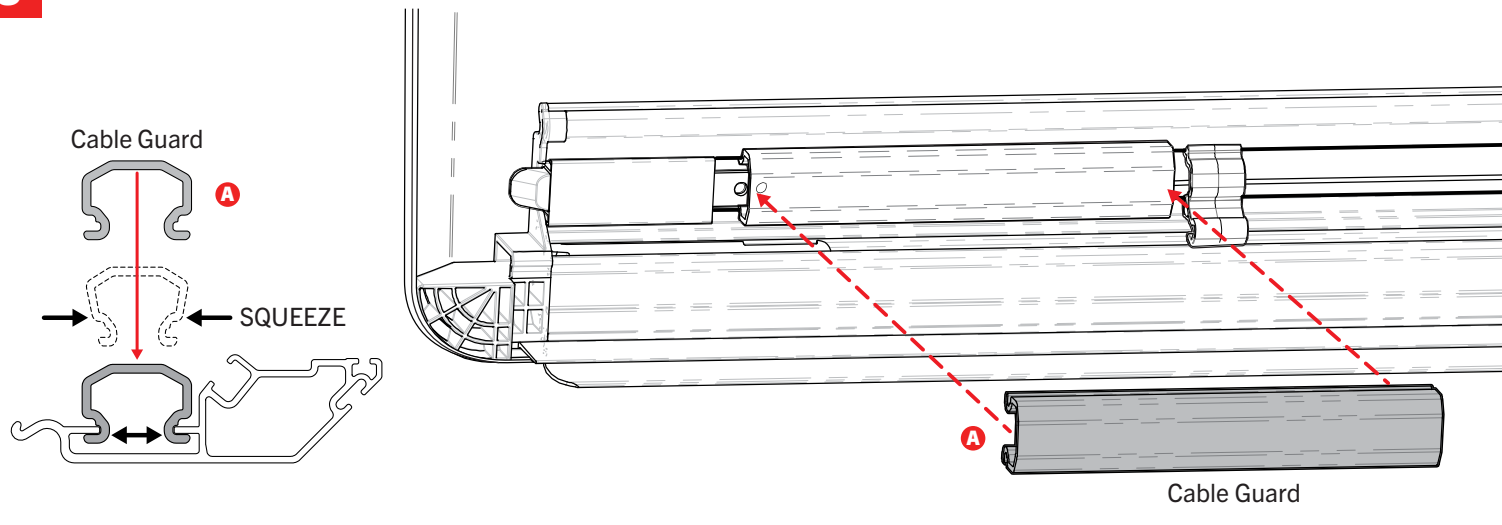

- 4** Align Cable Guard (A) FLUSH with latch. Slide Cable Clip FLUSH with Cable Guard (A).

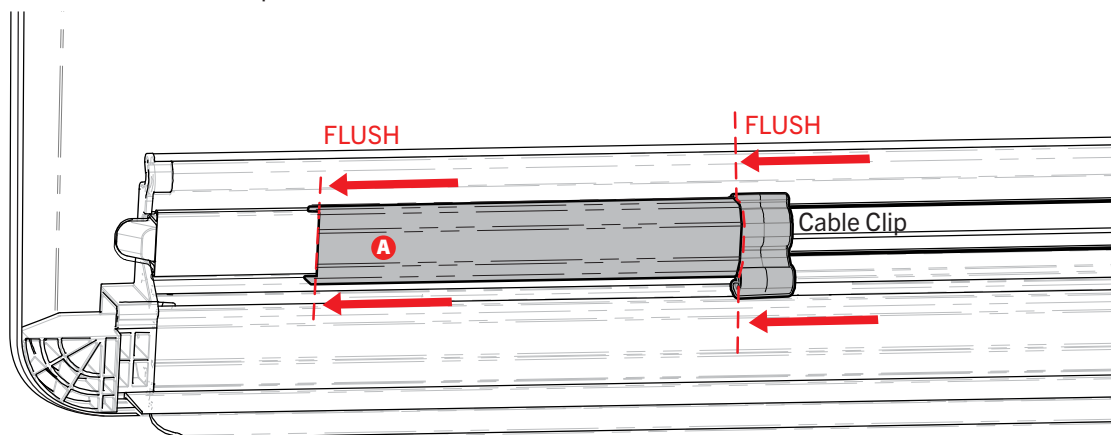

**Note:** Mirror installation process for opposite side of vehicle.

- 5** Close Cover.

