





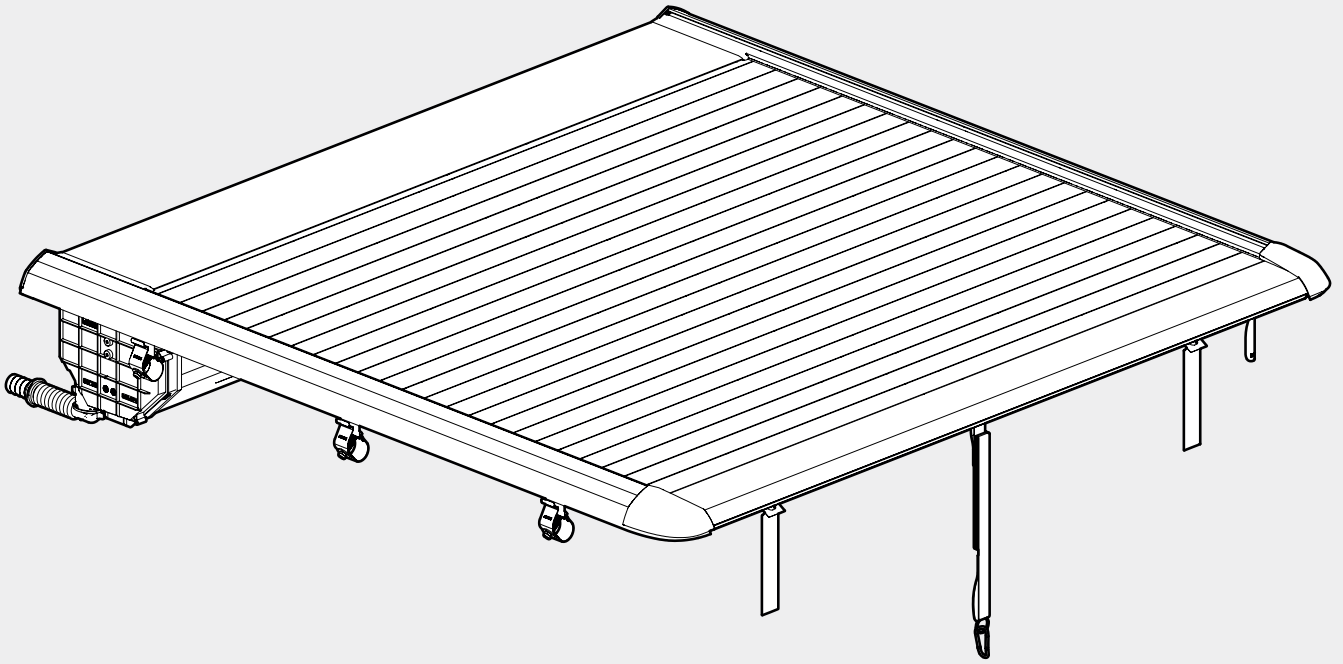


REALTRUCK® EVOm















Installation manual








Parts



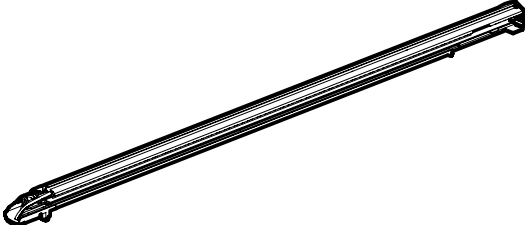
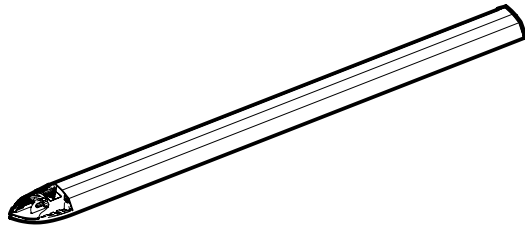
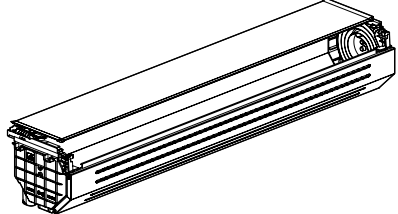
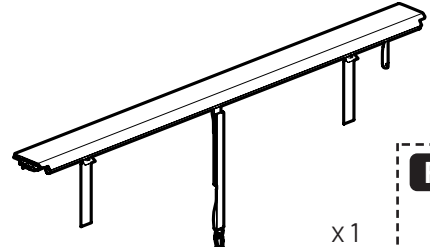
A  x1	B  x1
C  x1	D  x1 R2  x1

Kit

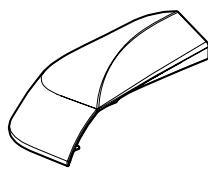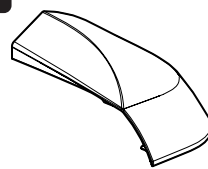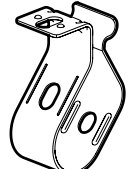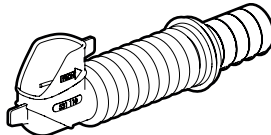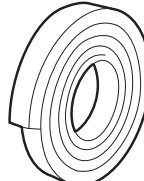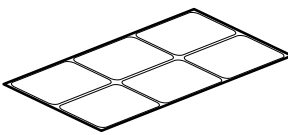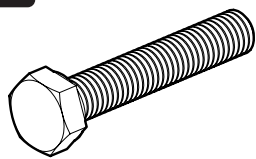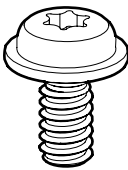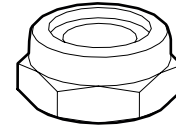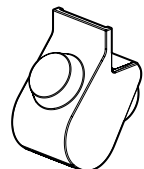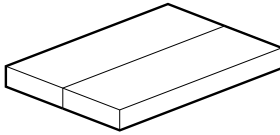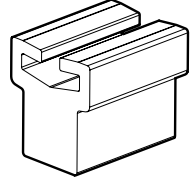E  LEFT x1	F  RIGHT x1	G  x12	H  x6
I  x2	J  x1	K  x1	L  x6
M  x6	N  x4	O  x6	P  x6
R  x6	S  x1	T  x2	U  x4

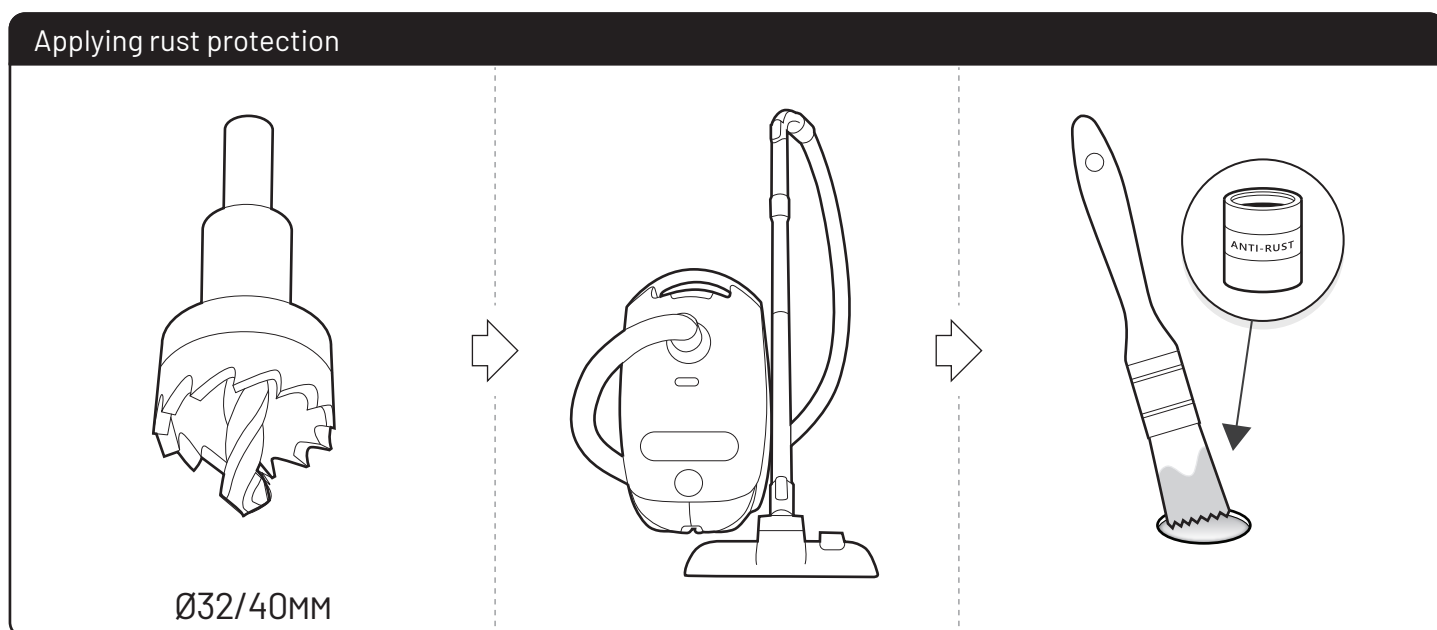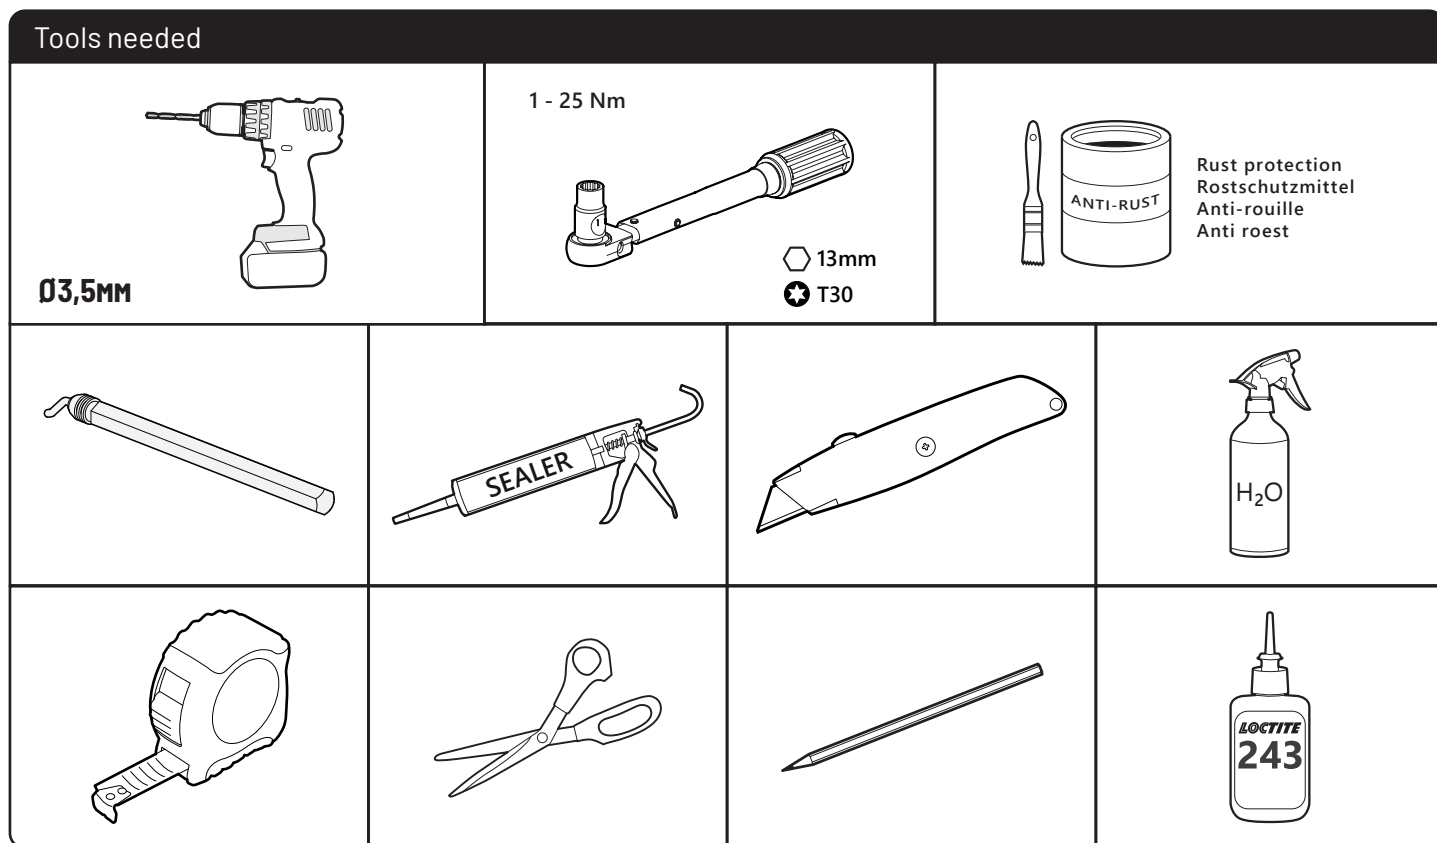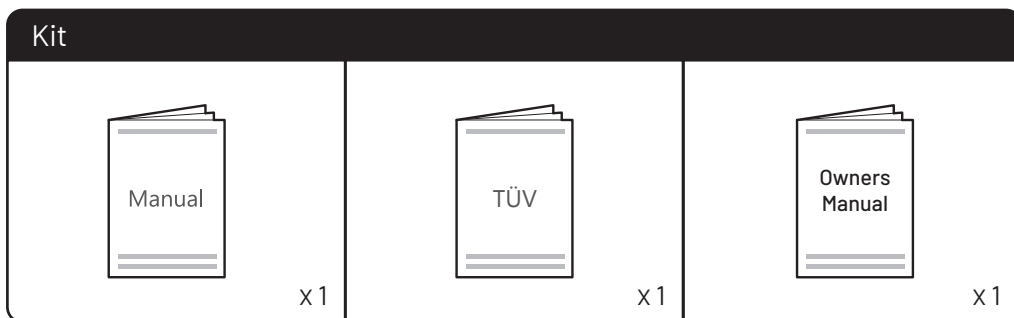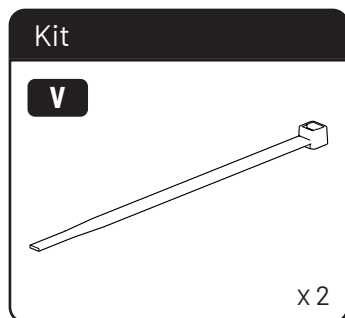

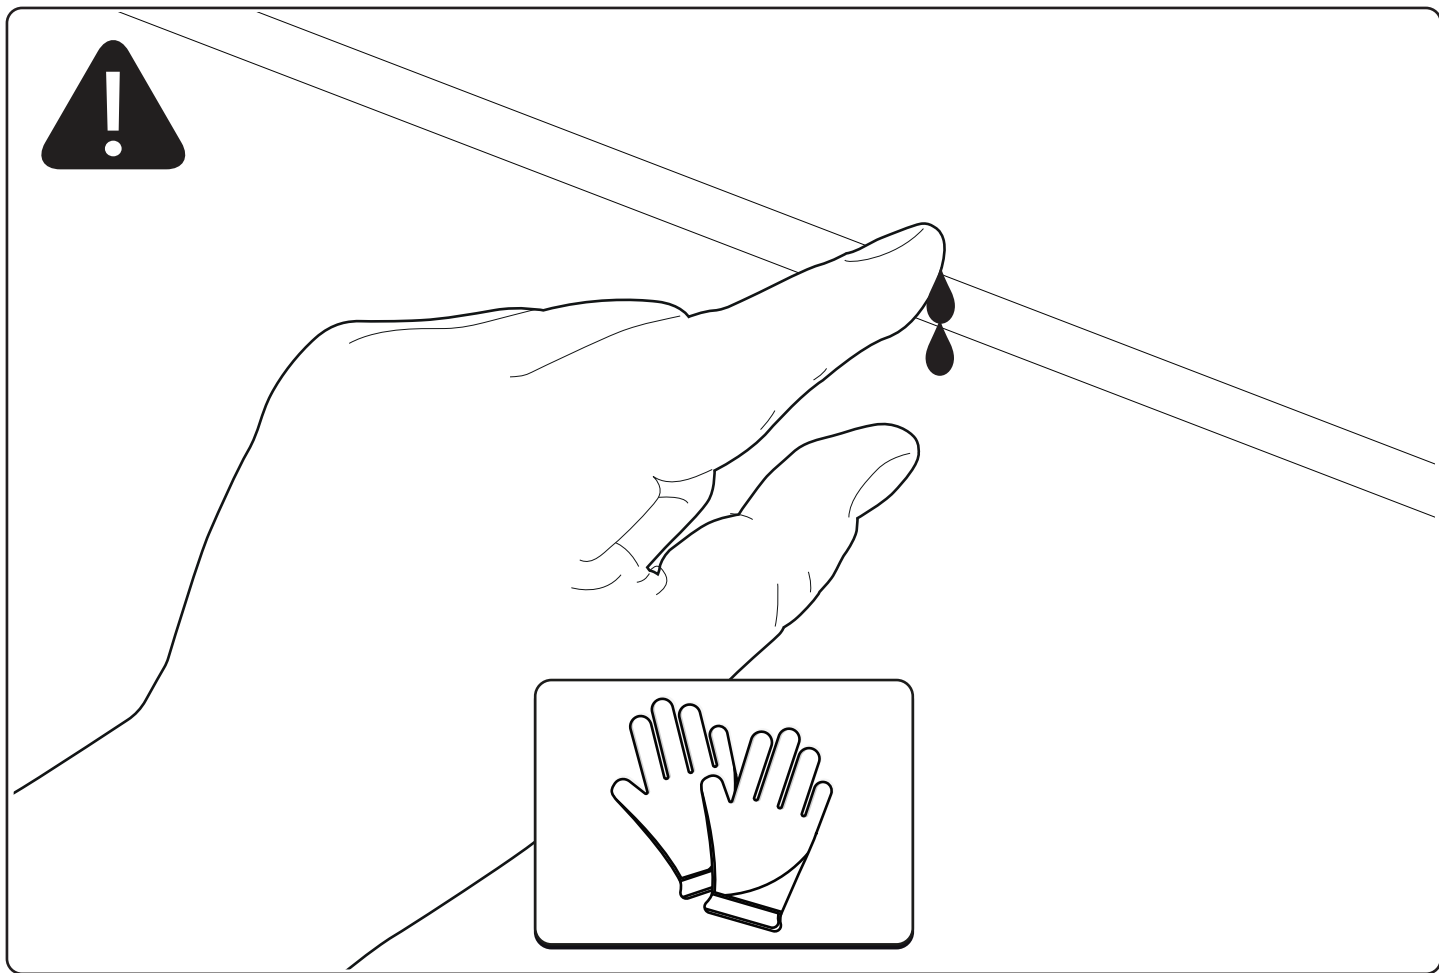


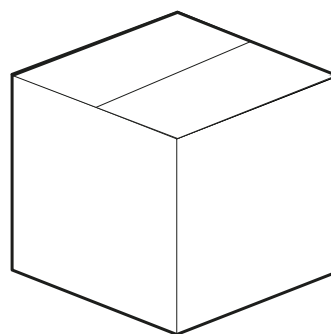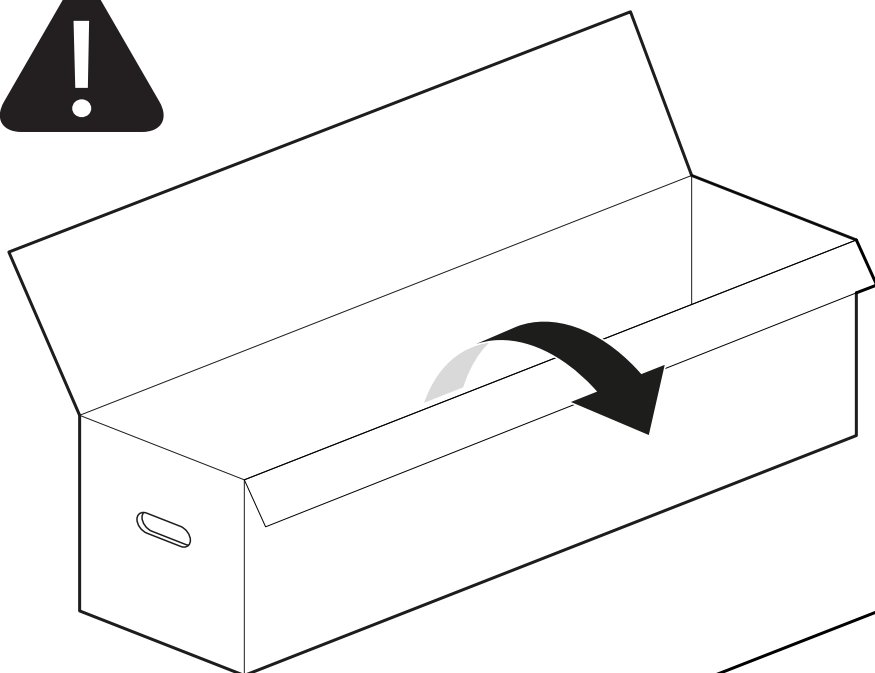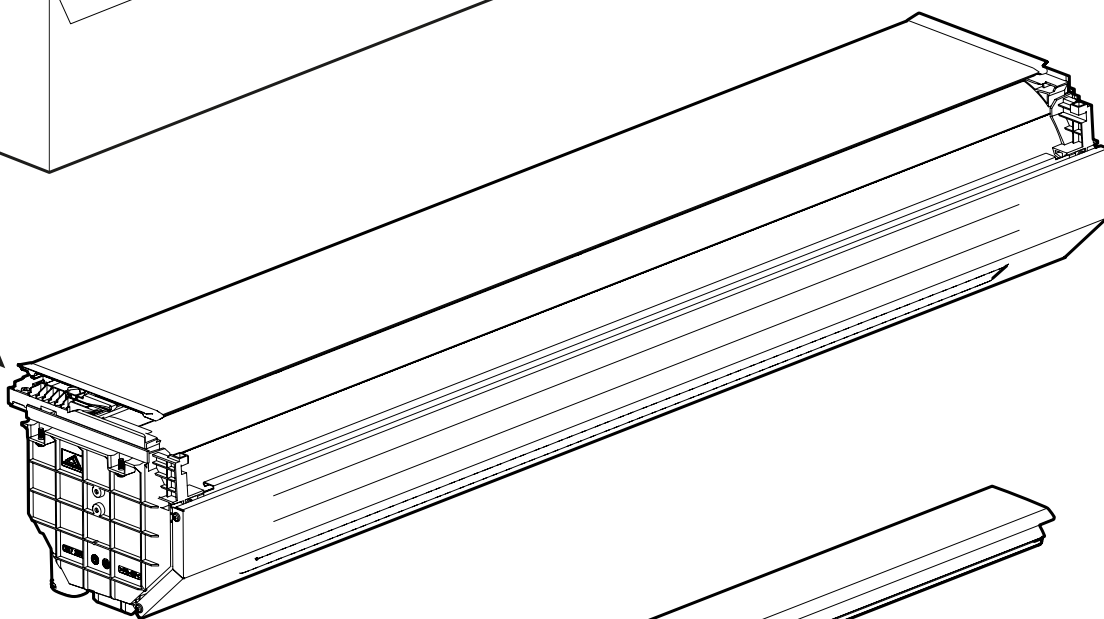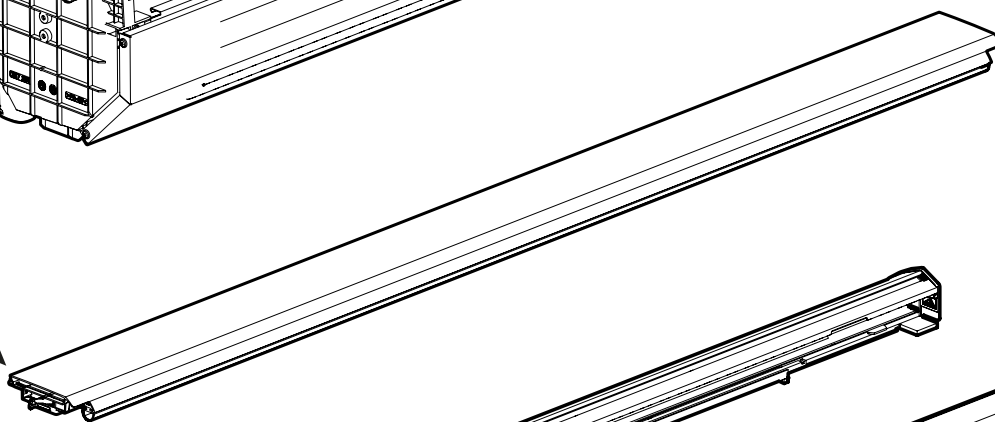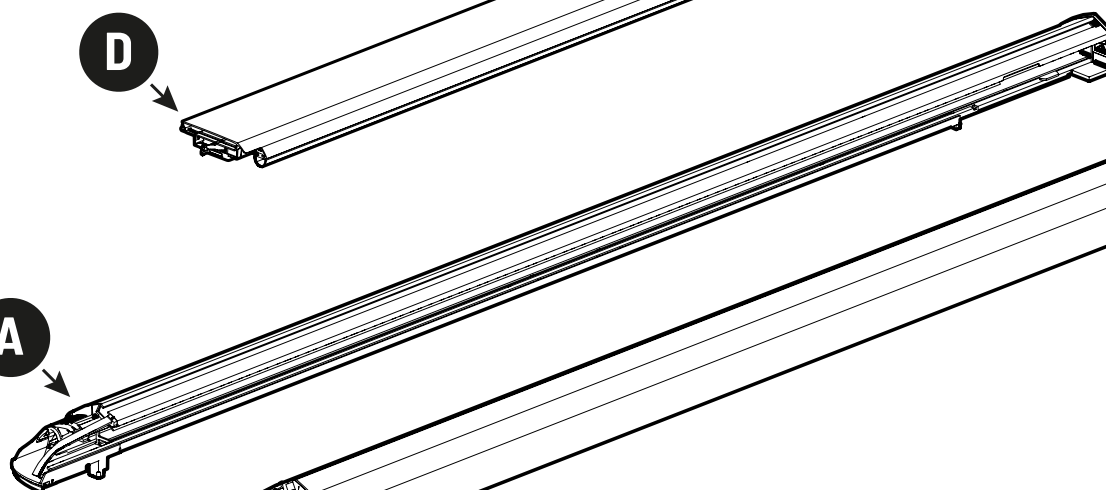**C****D****A****B**






Water & sponge

2

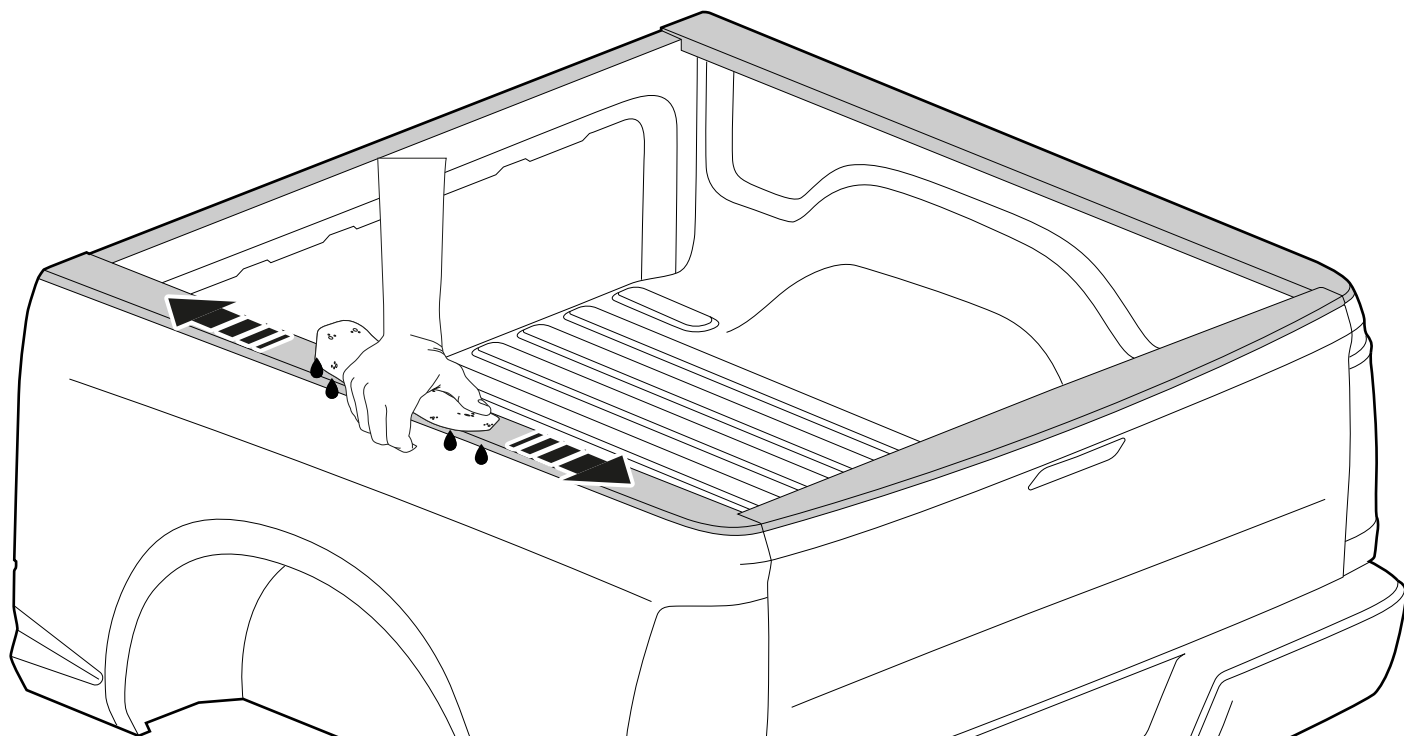


3




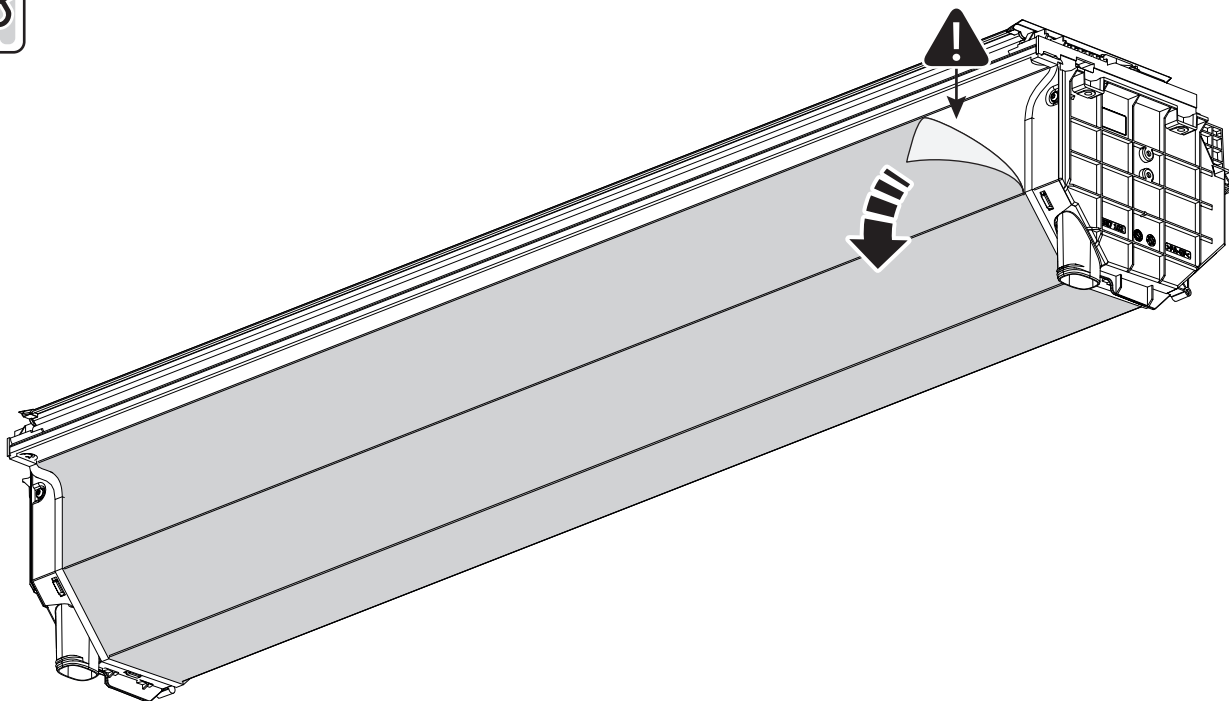


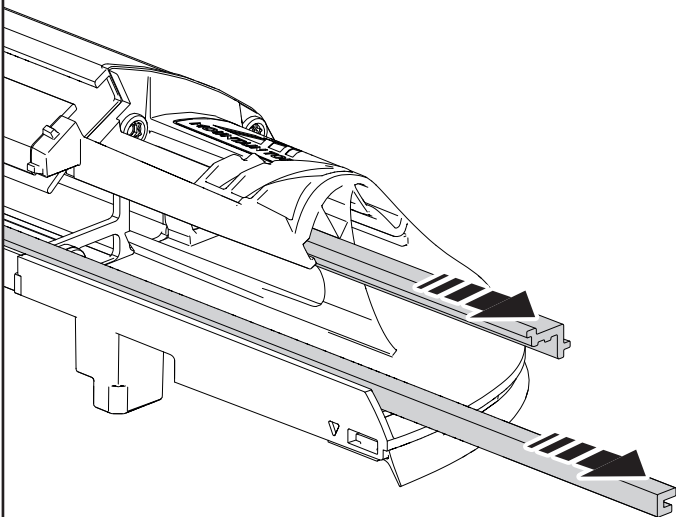
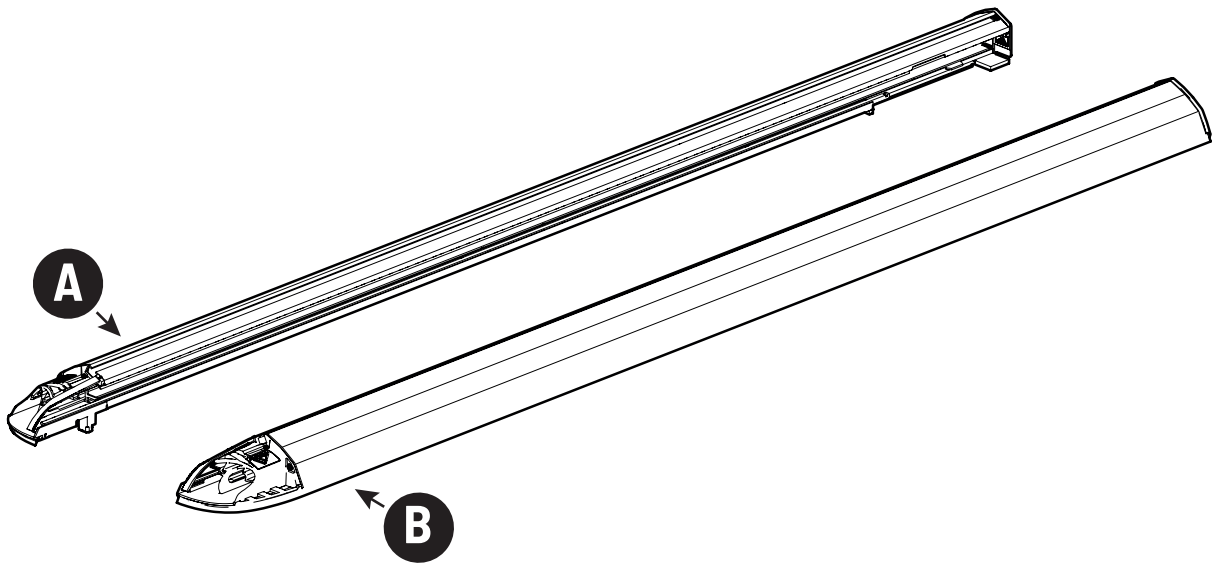




1


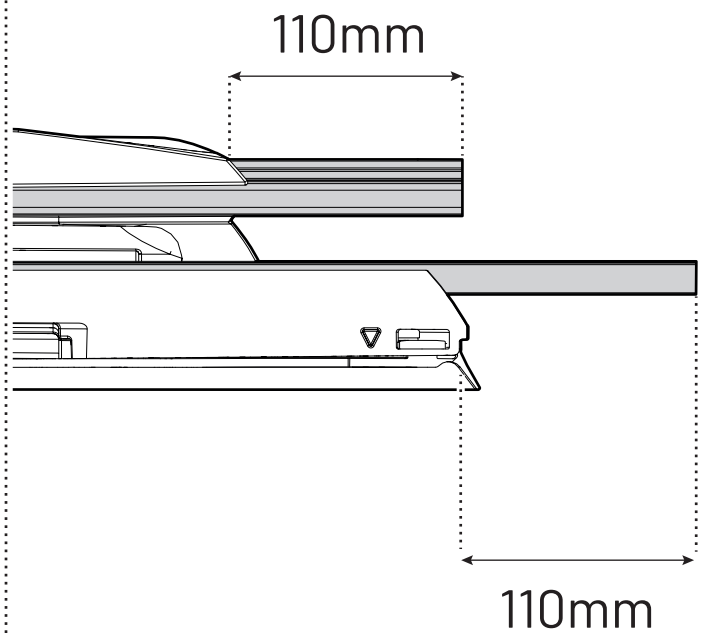




2

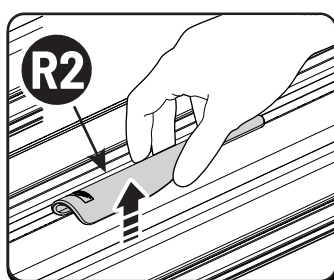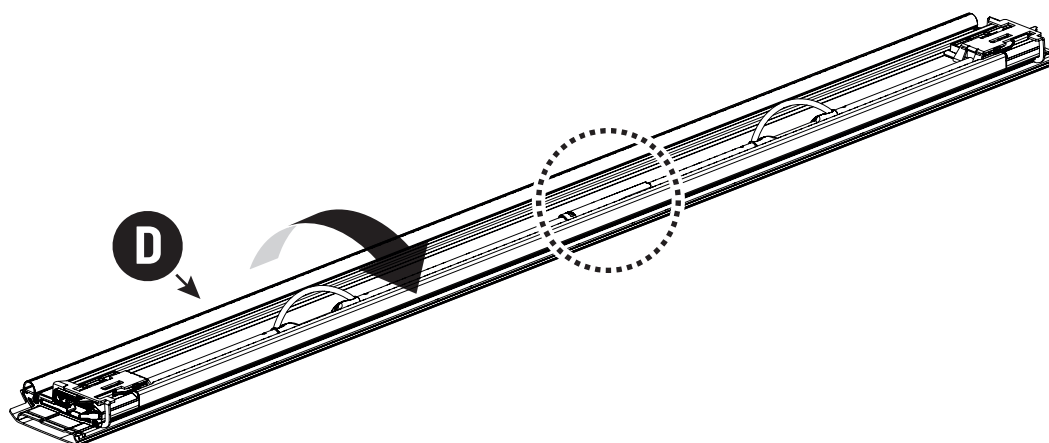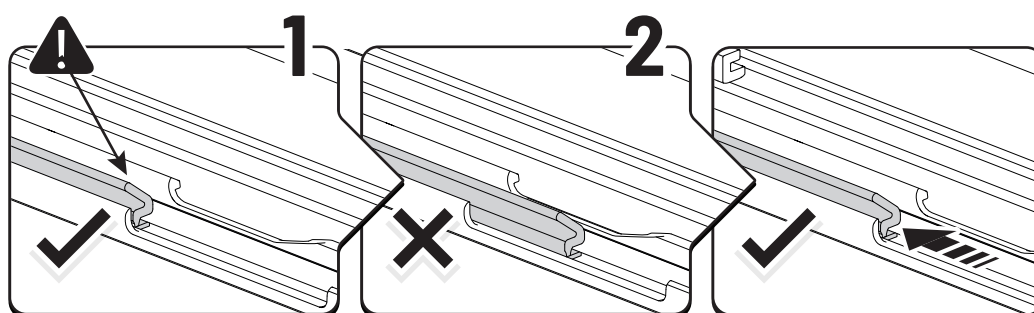
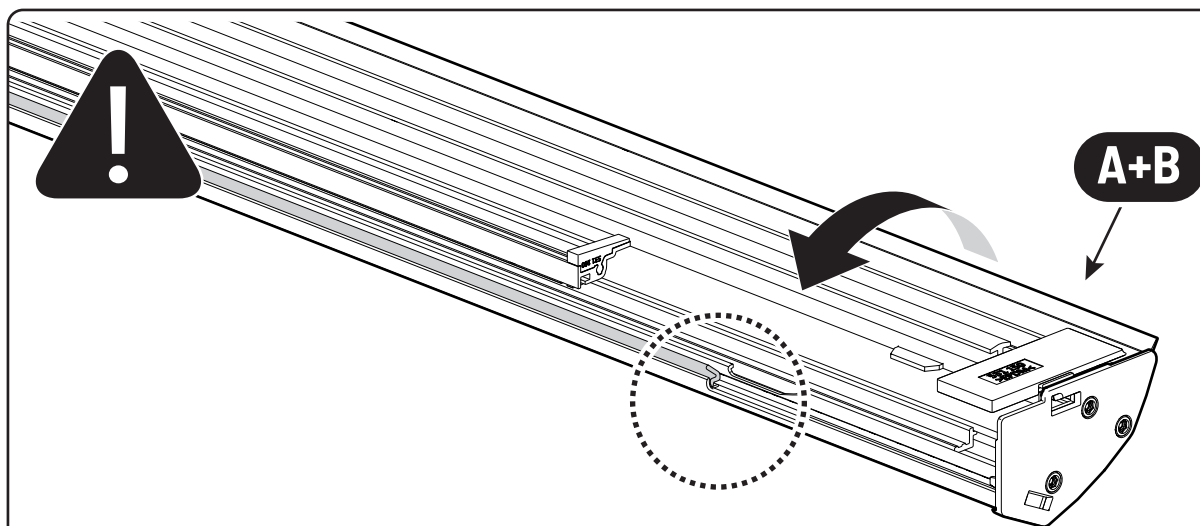


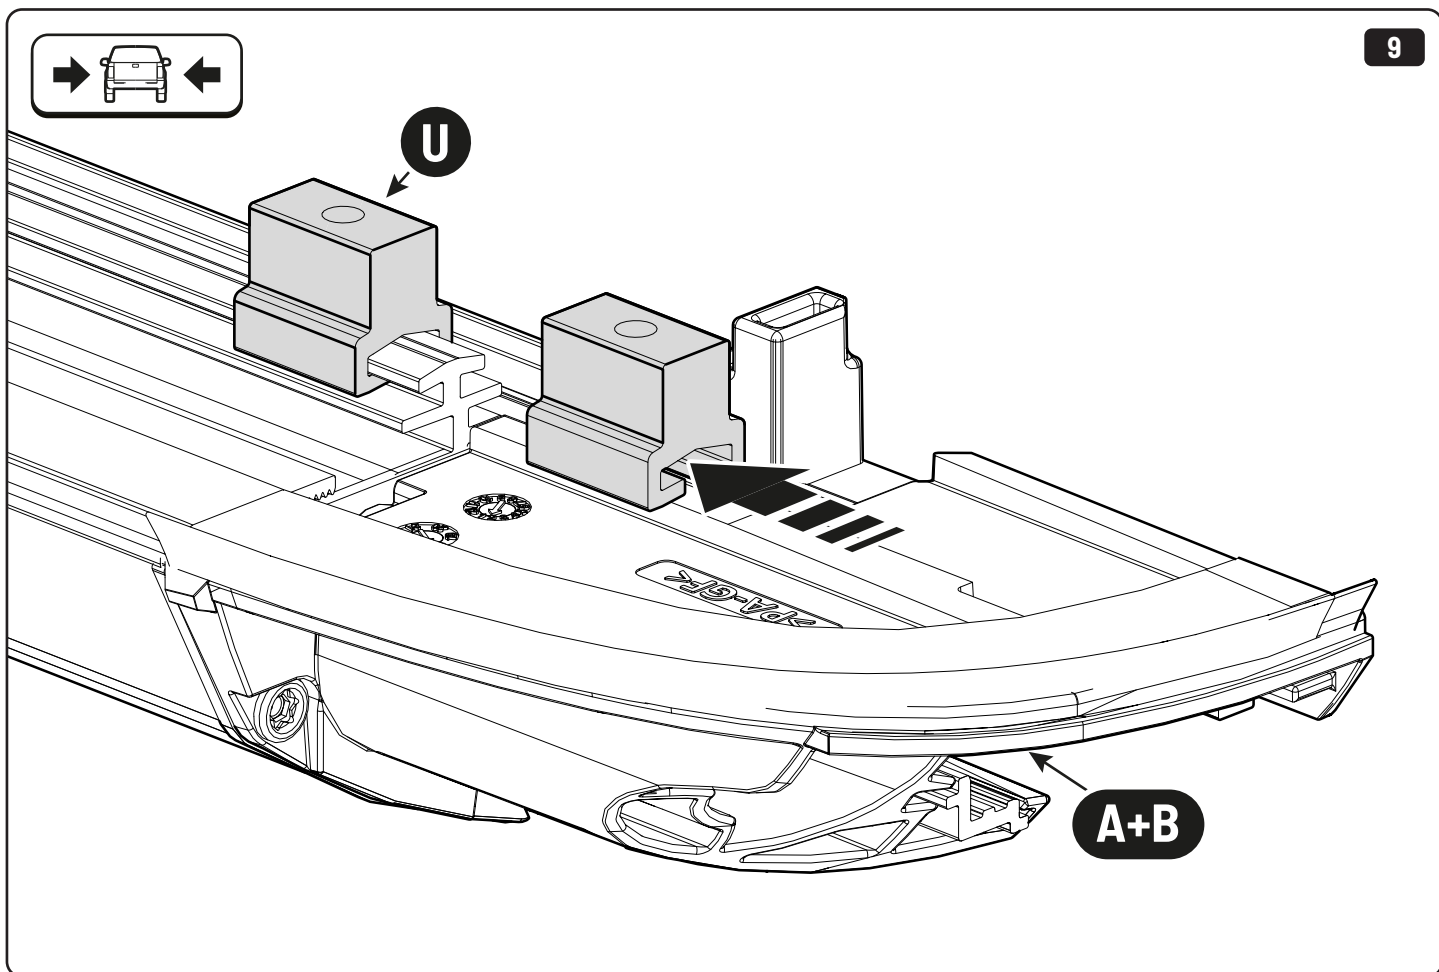
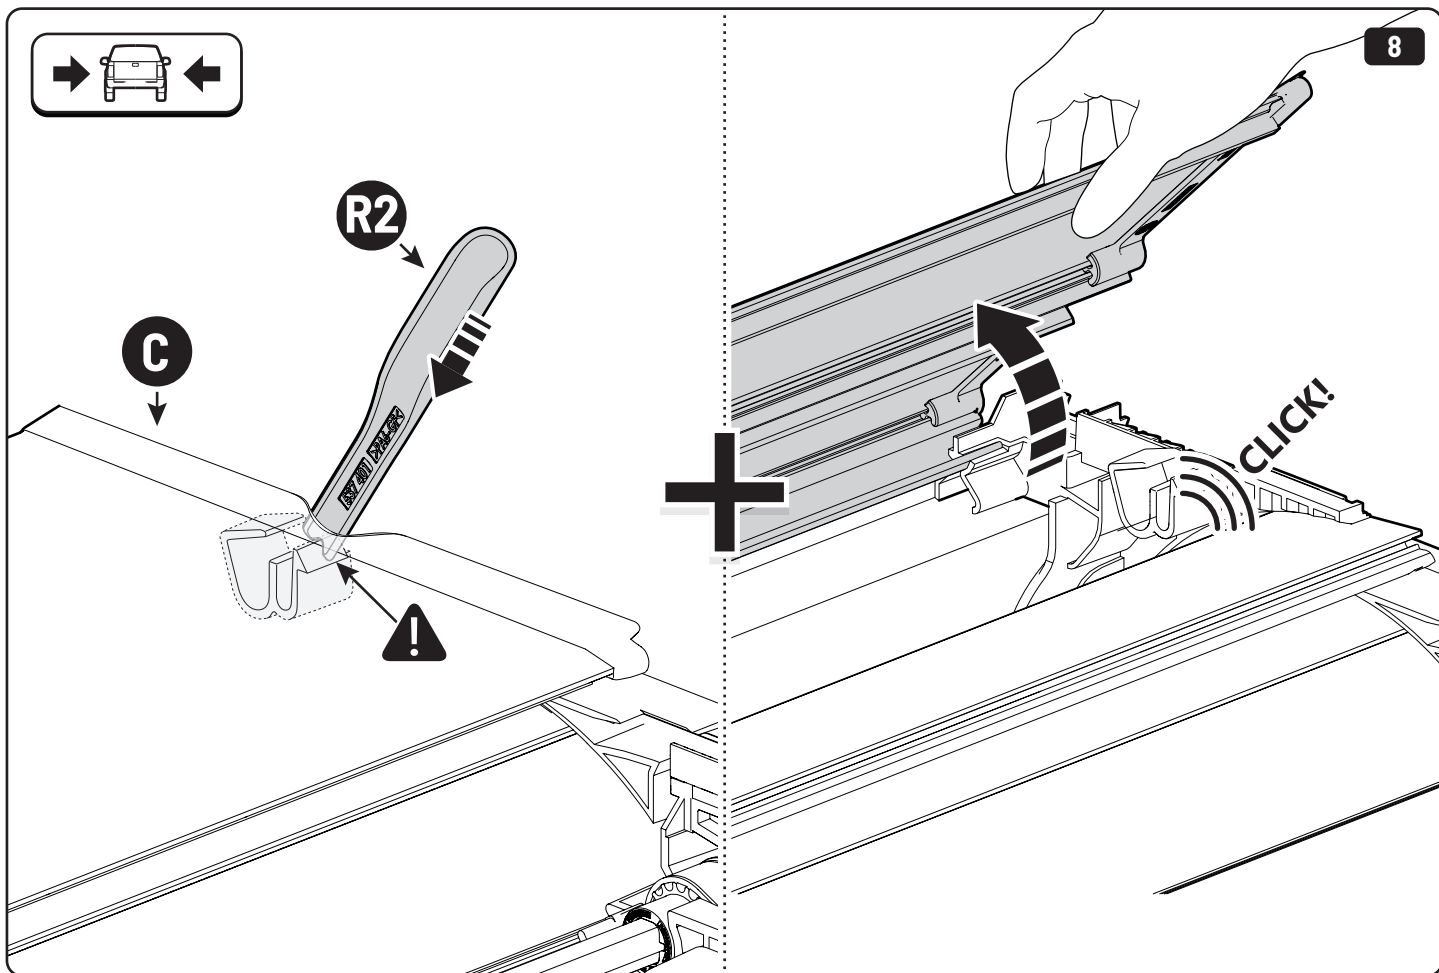


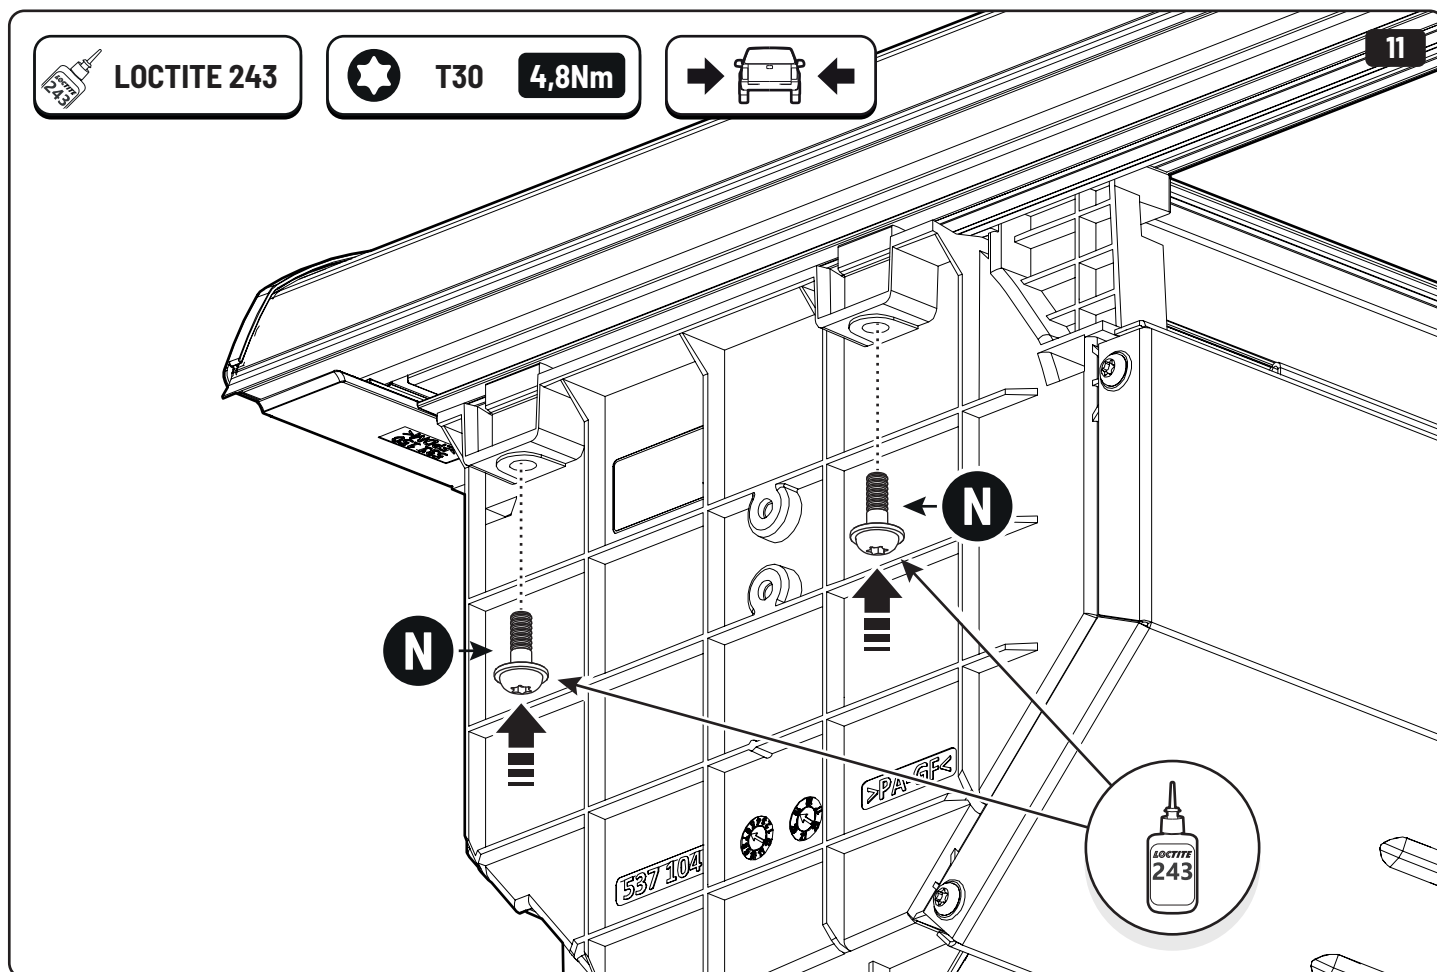
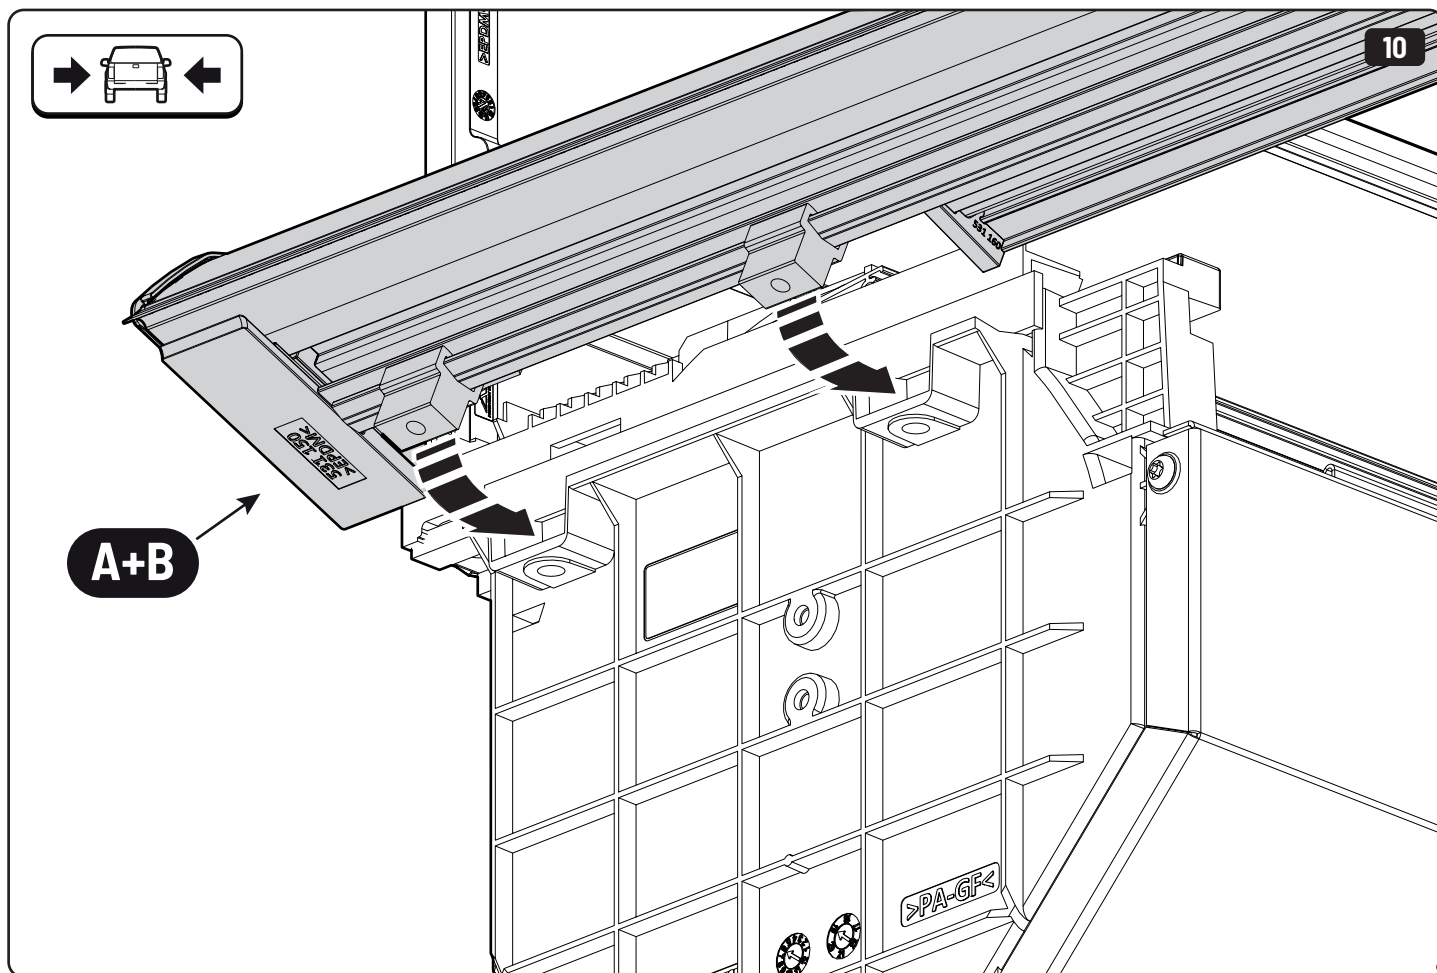


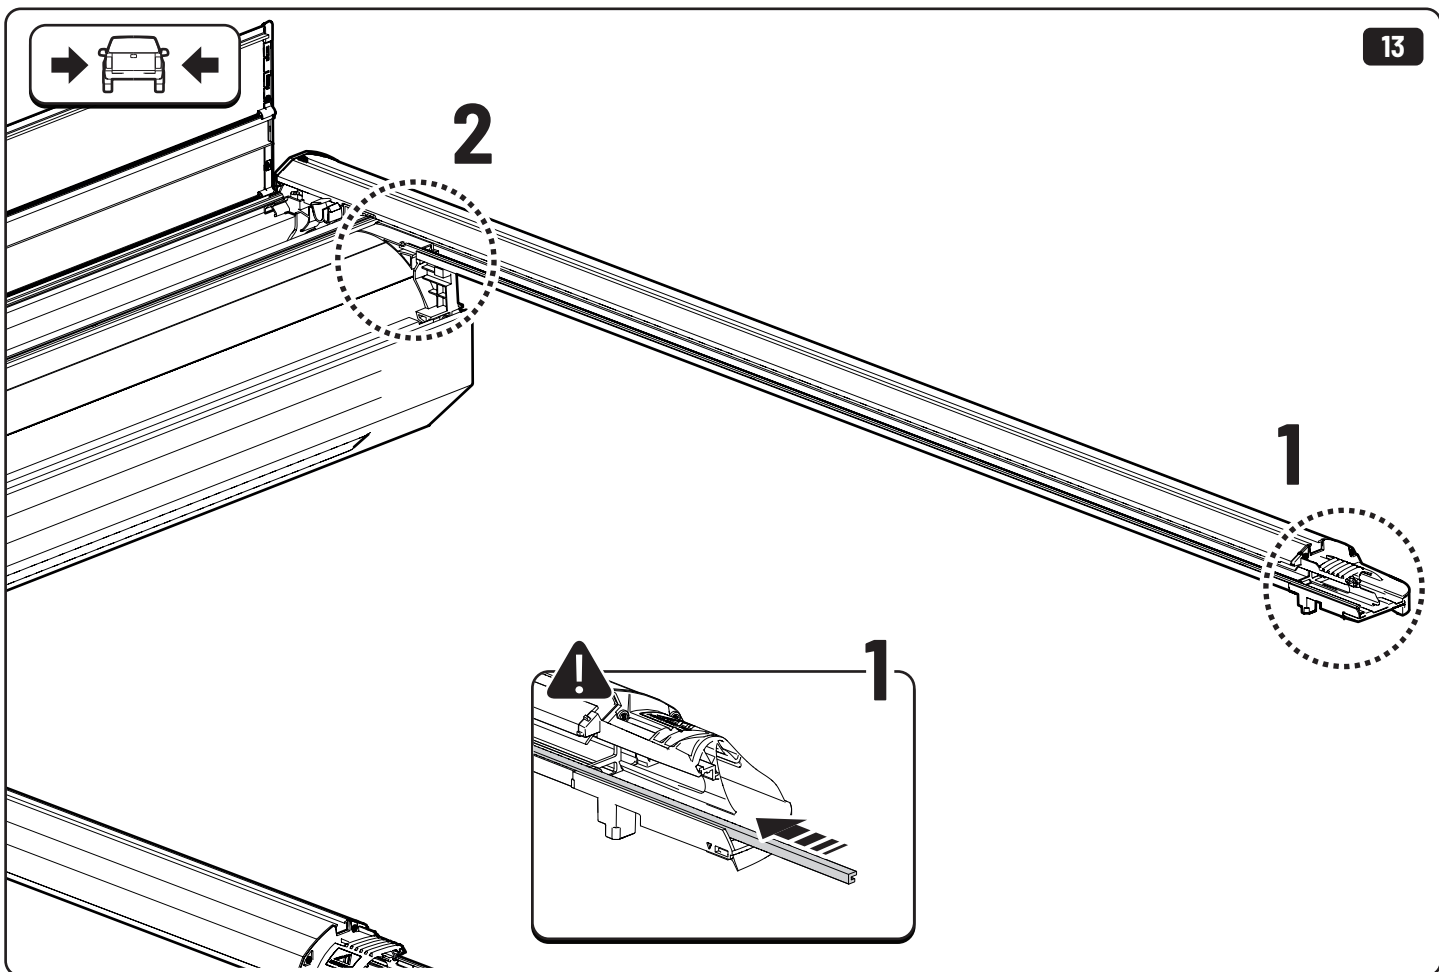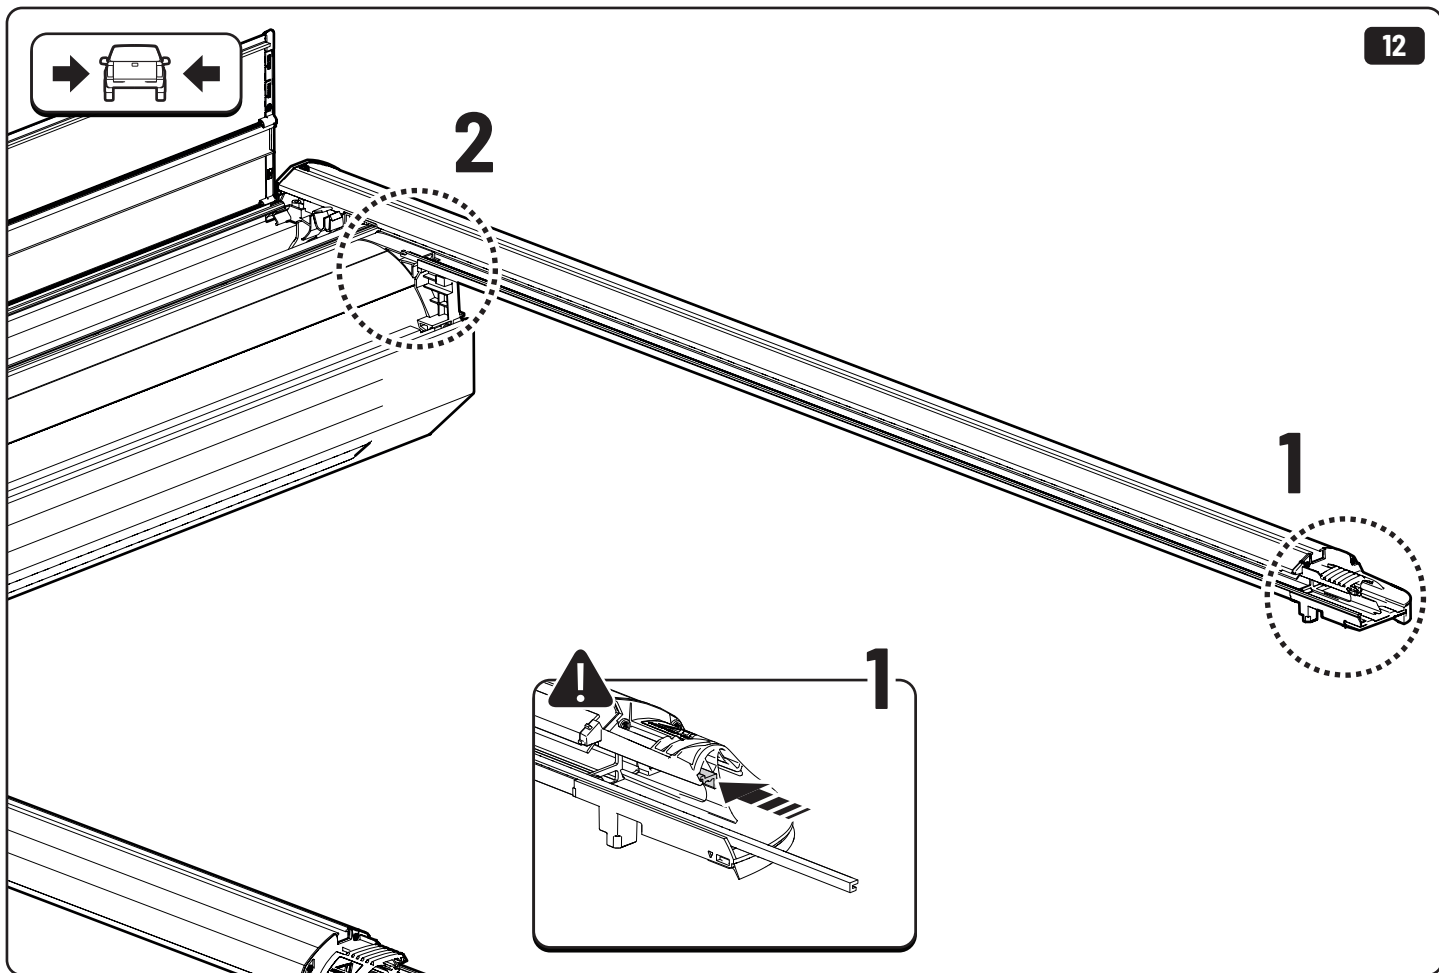


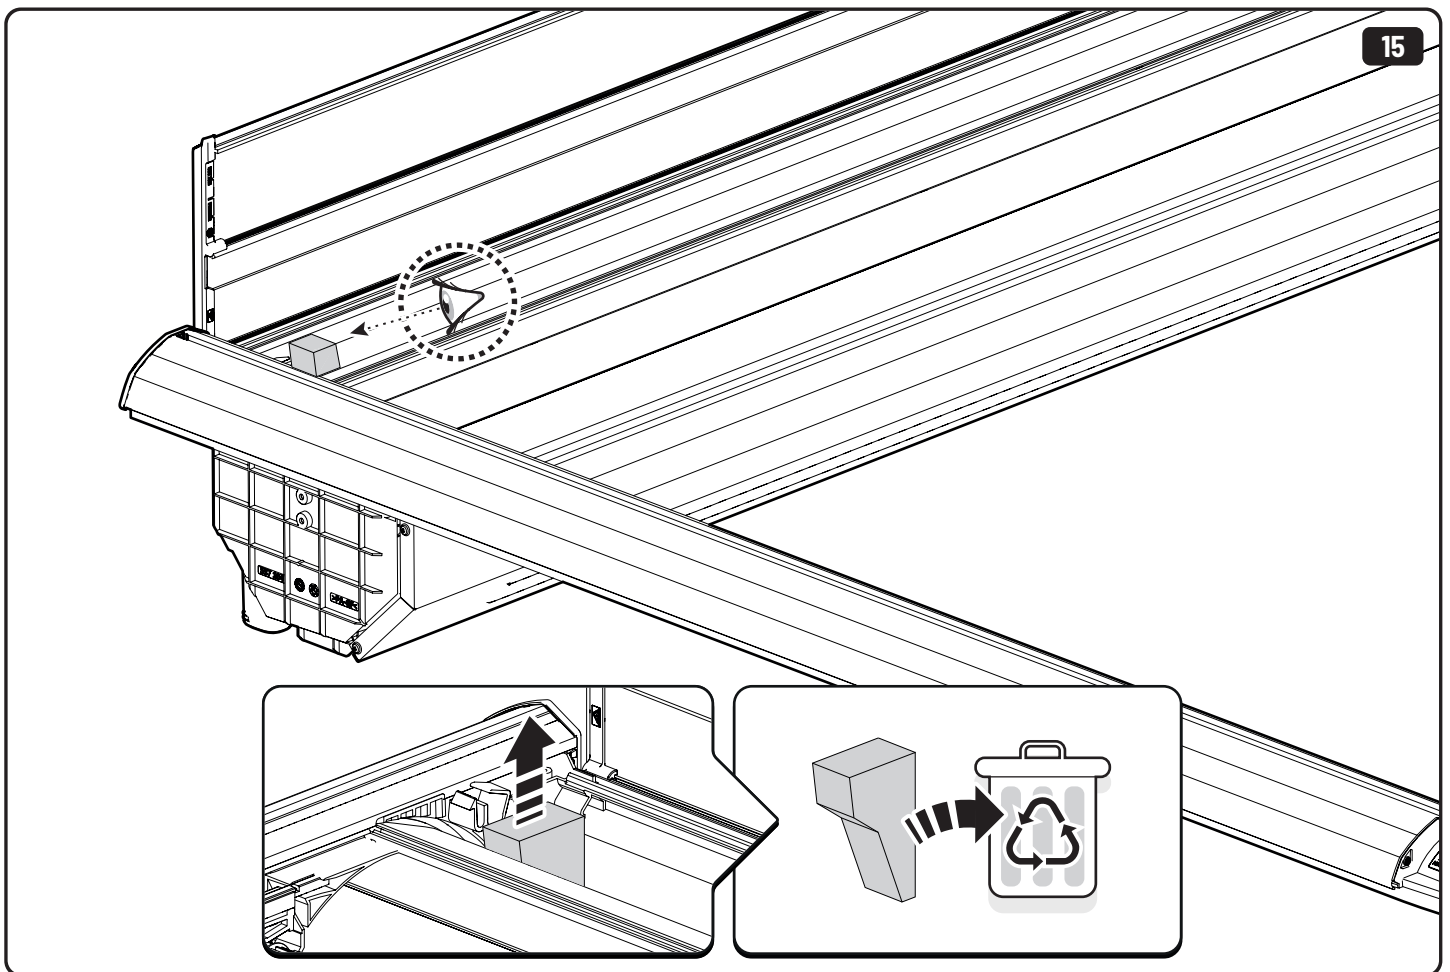
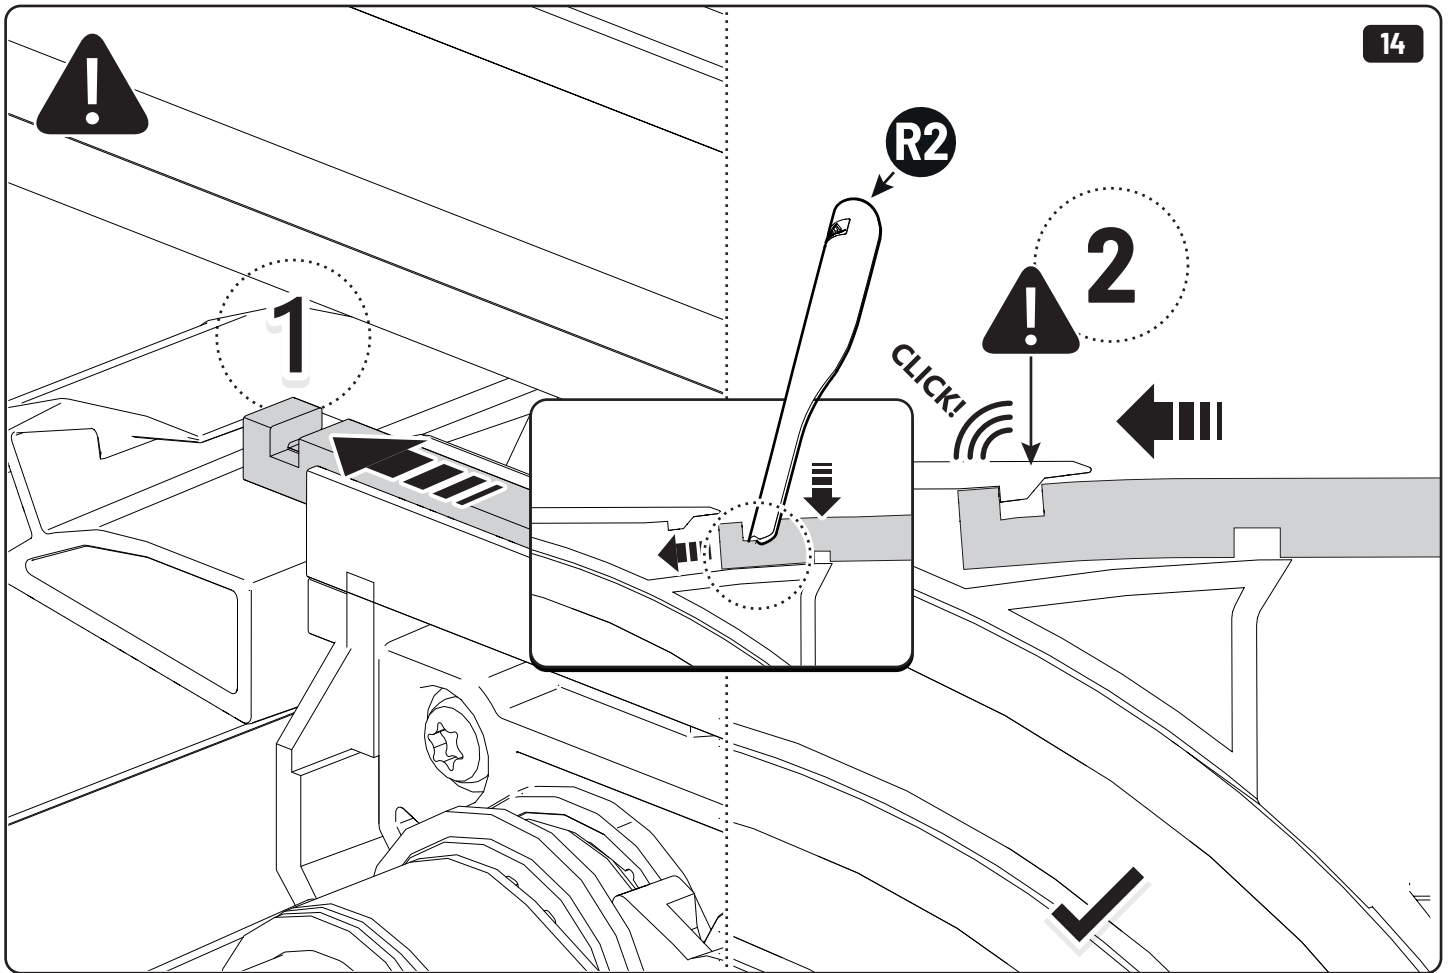


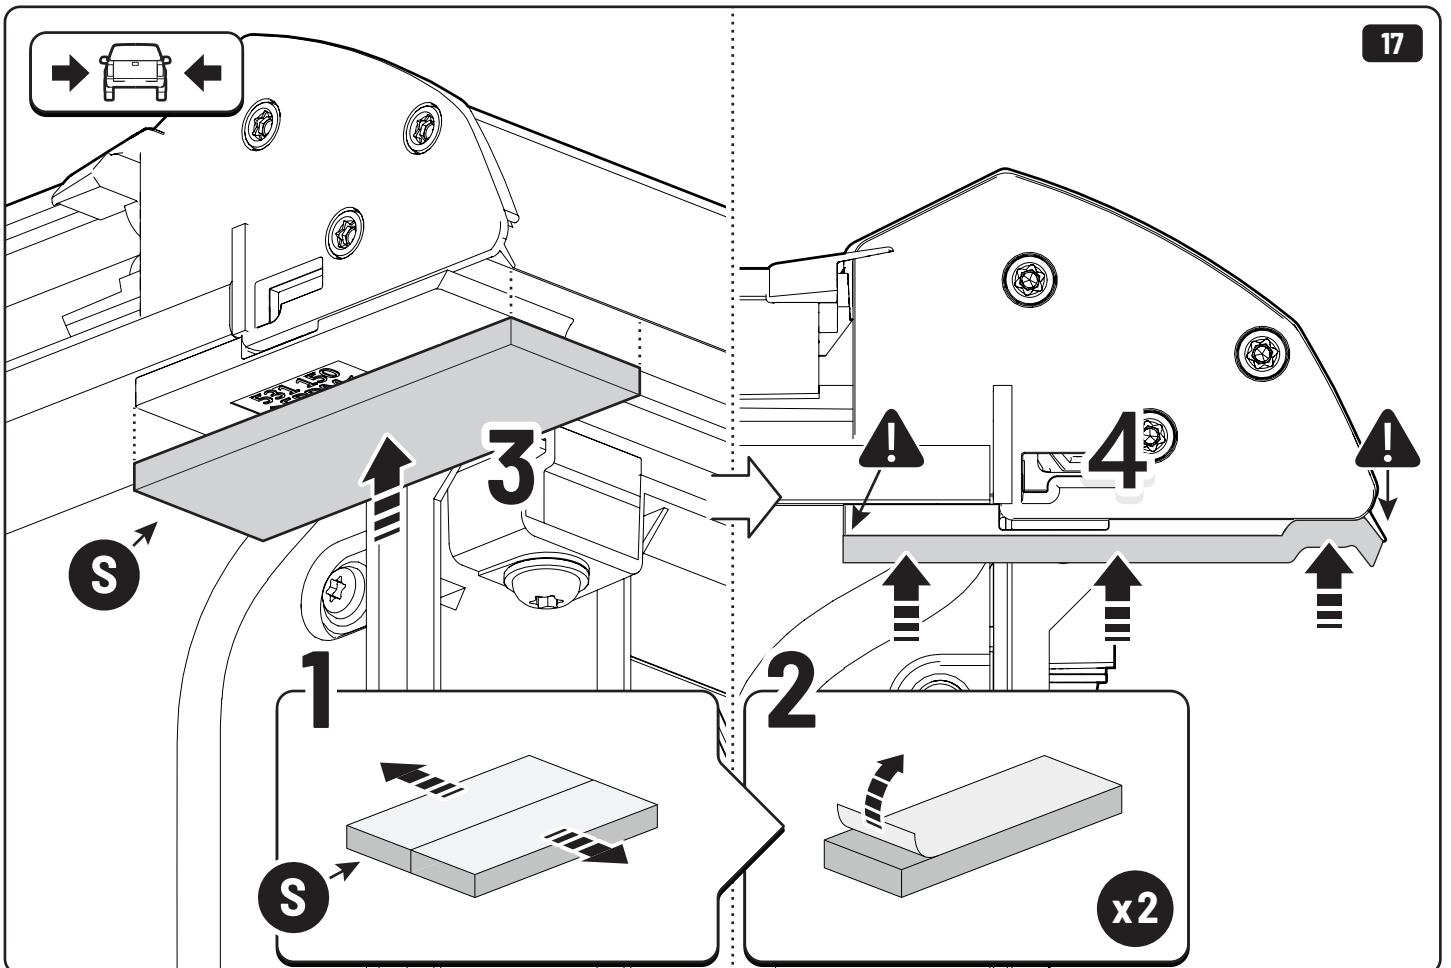
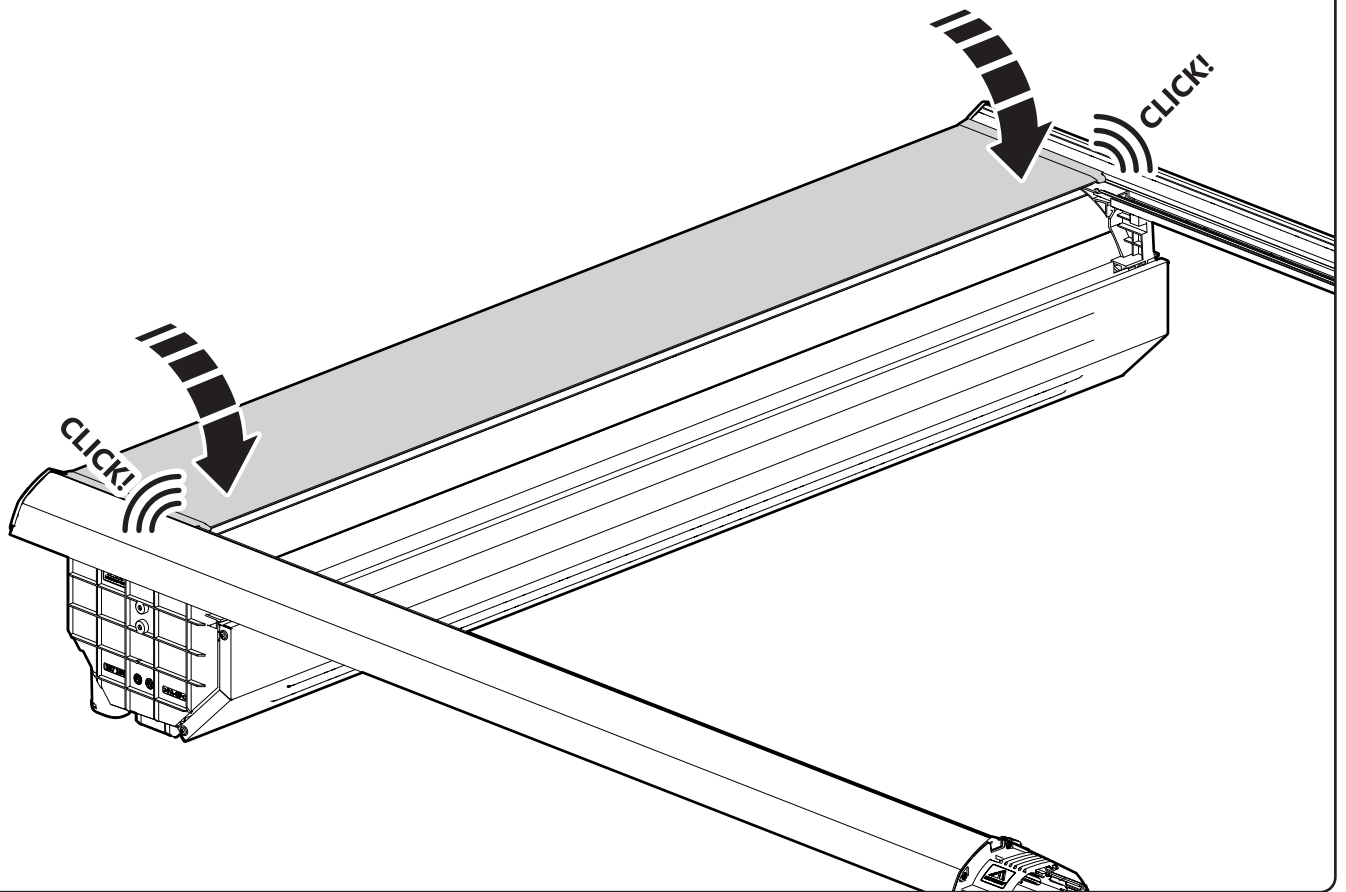


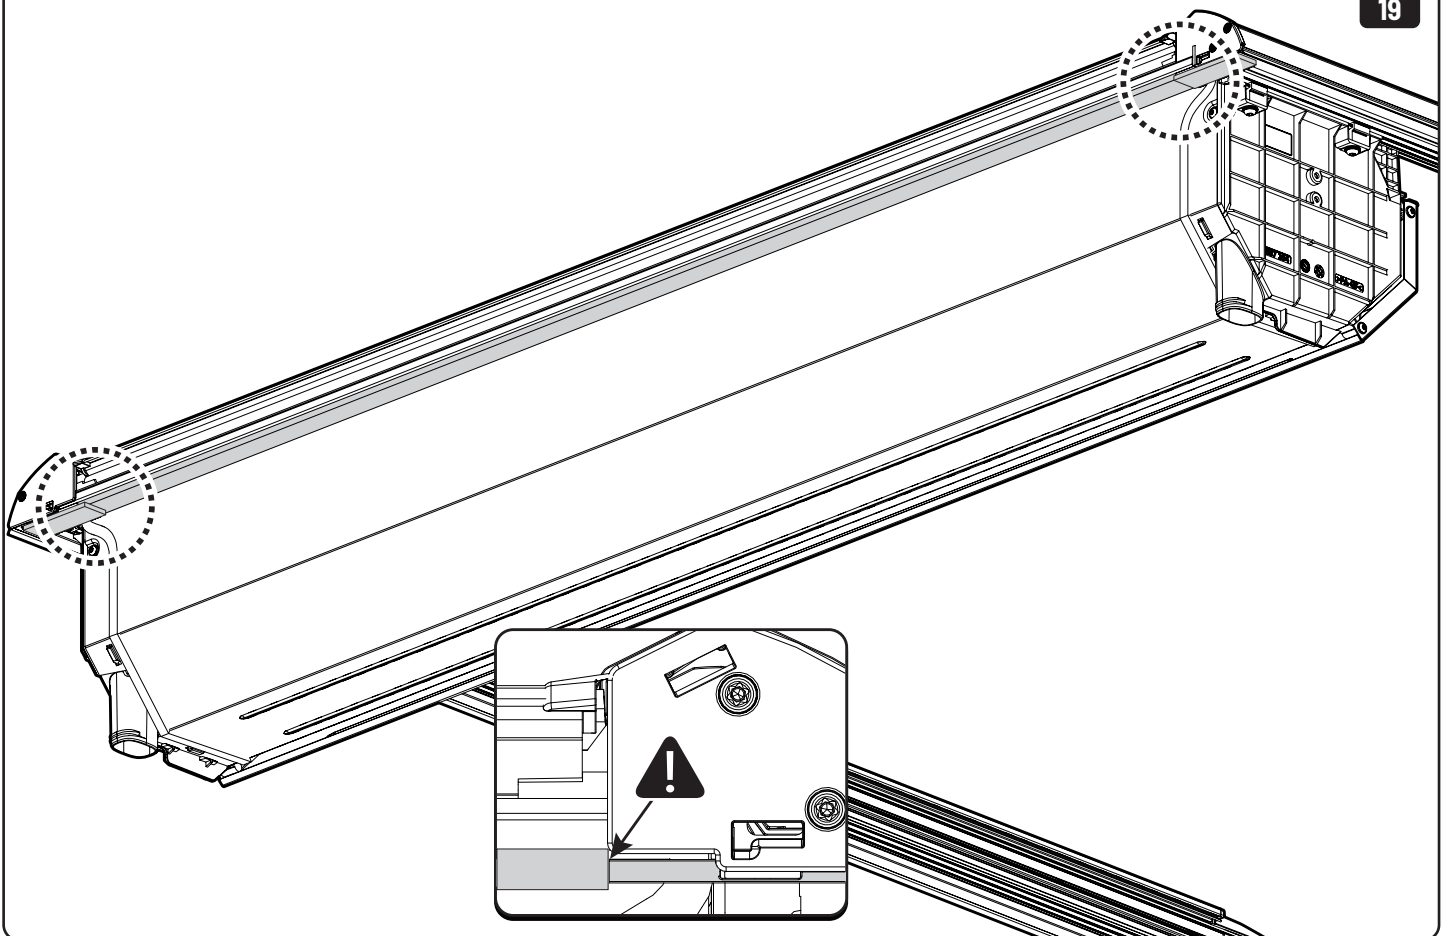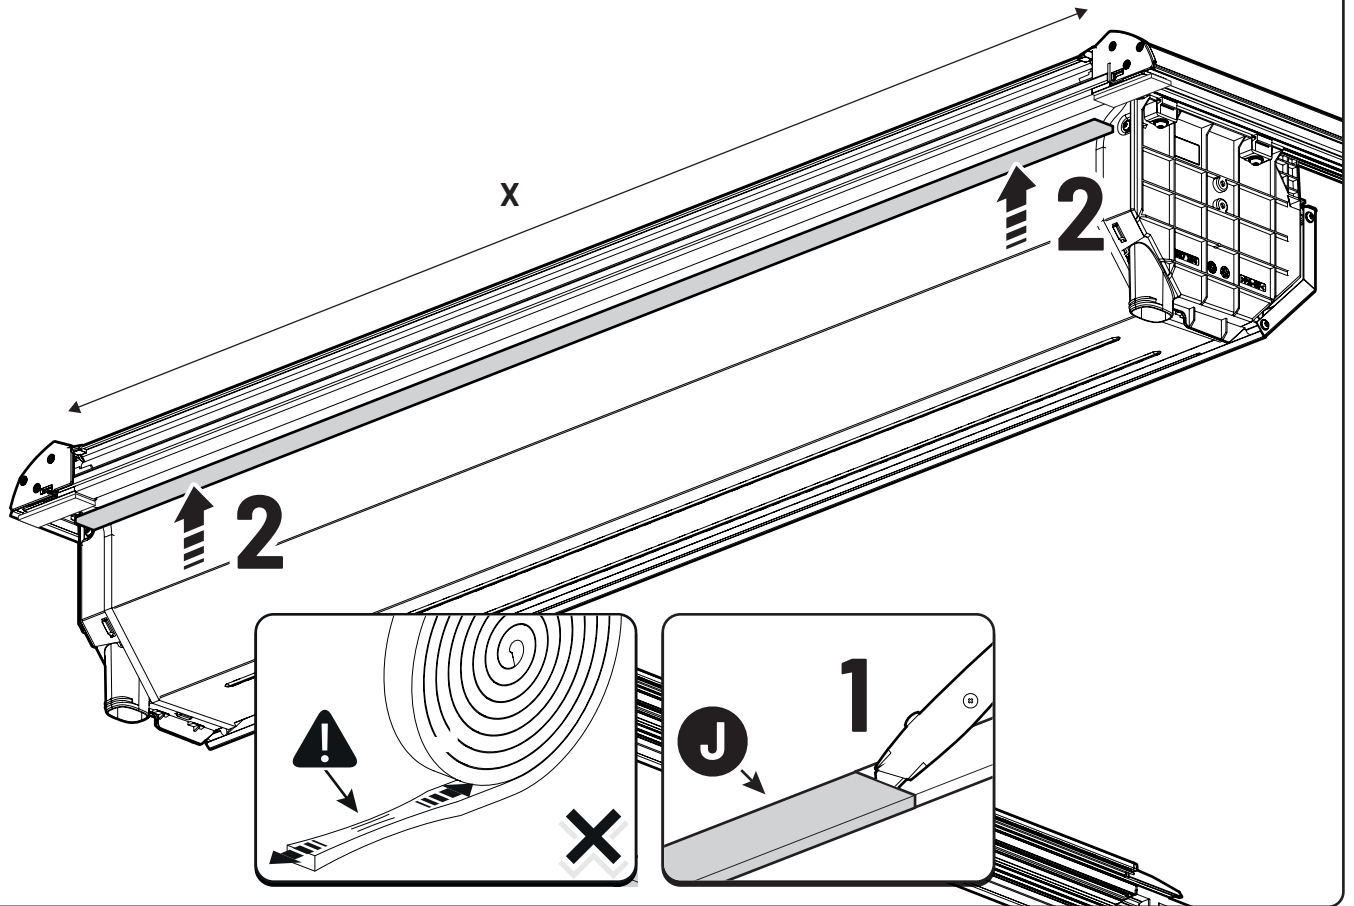


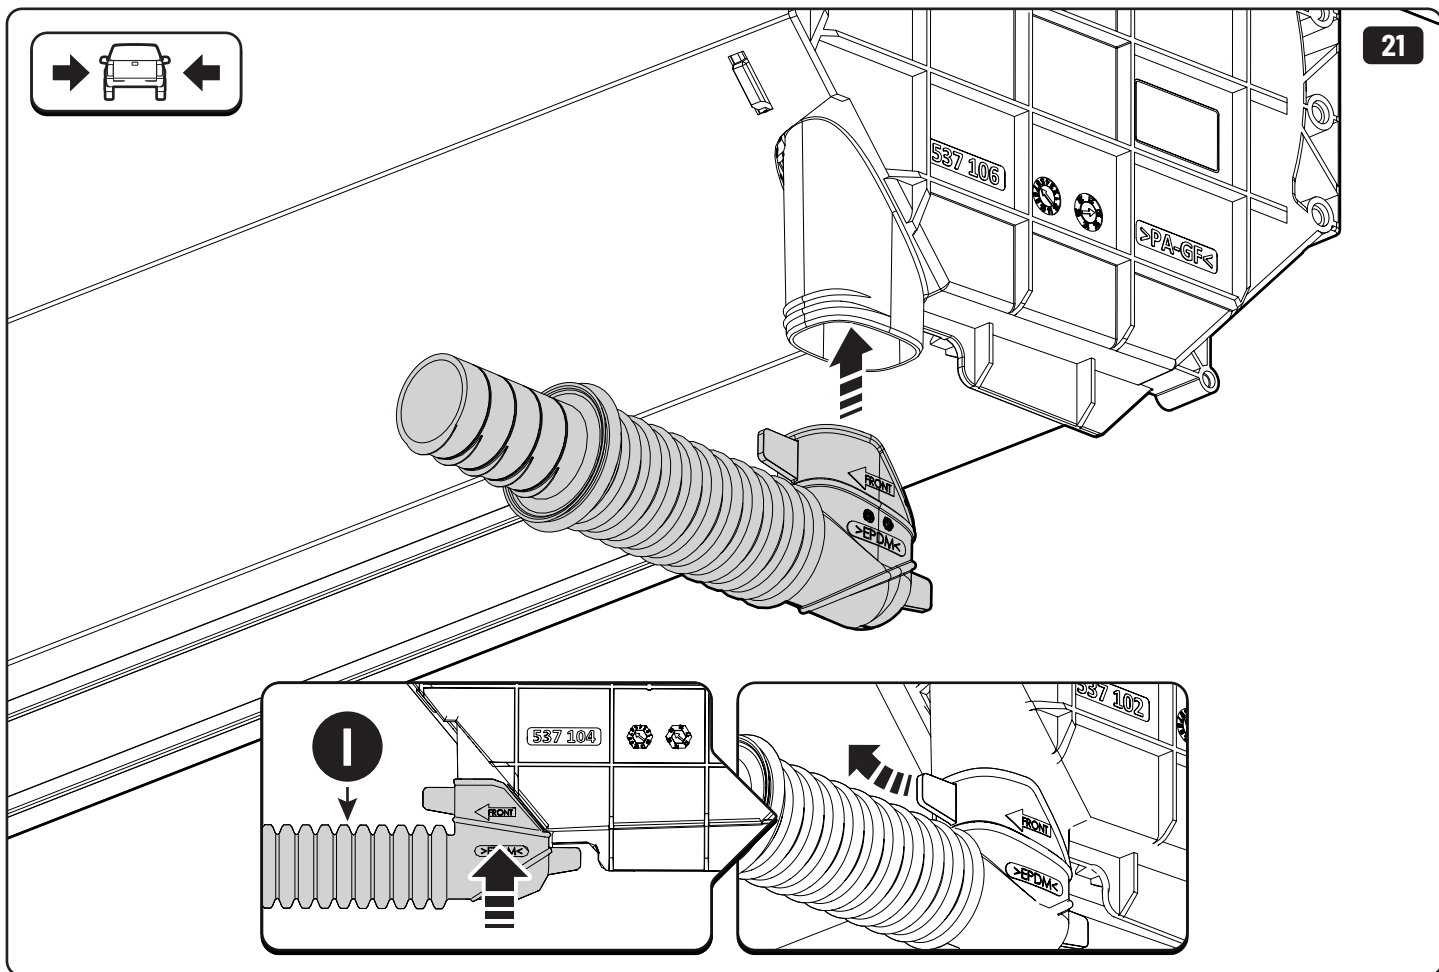
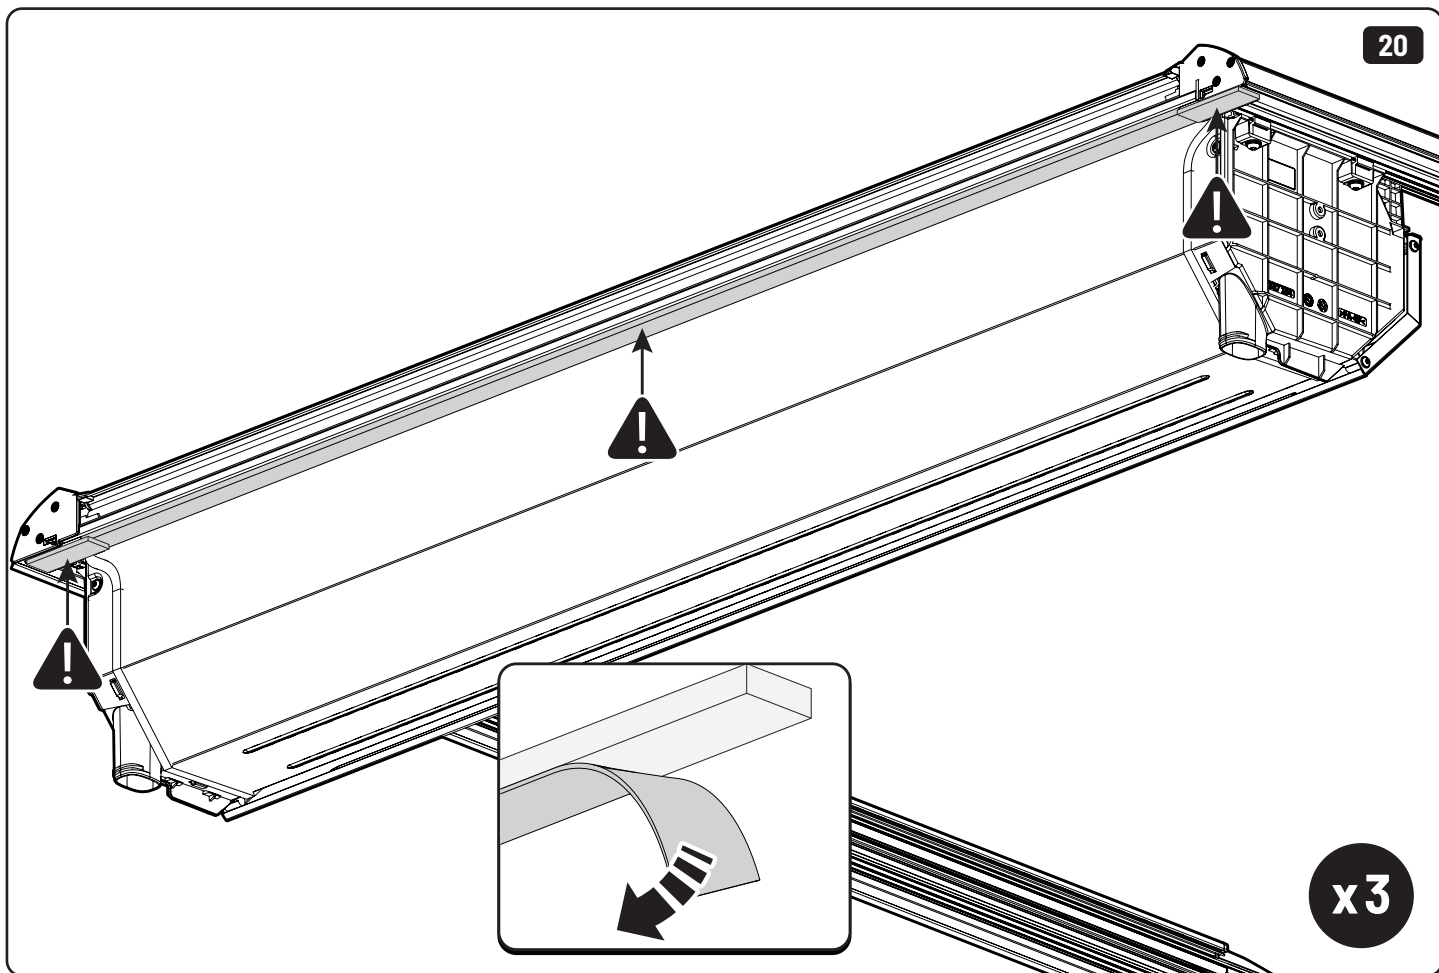



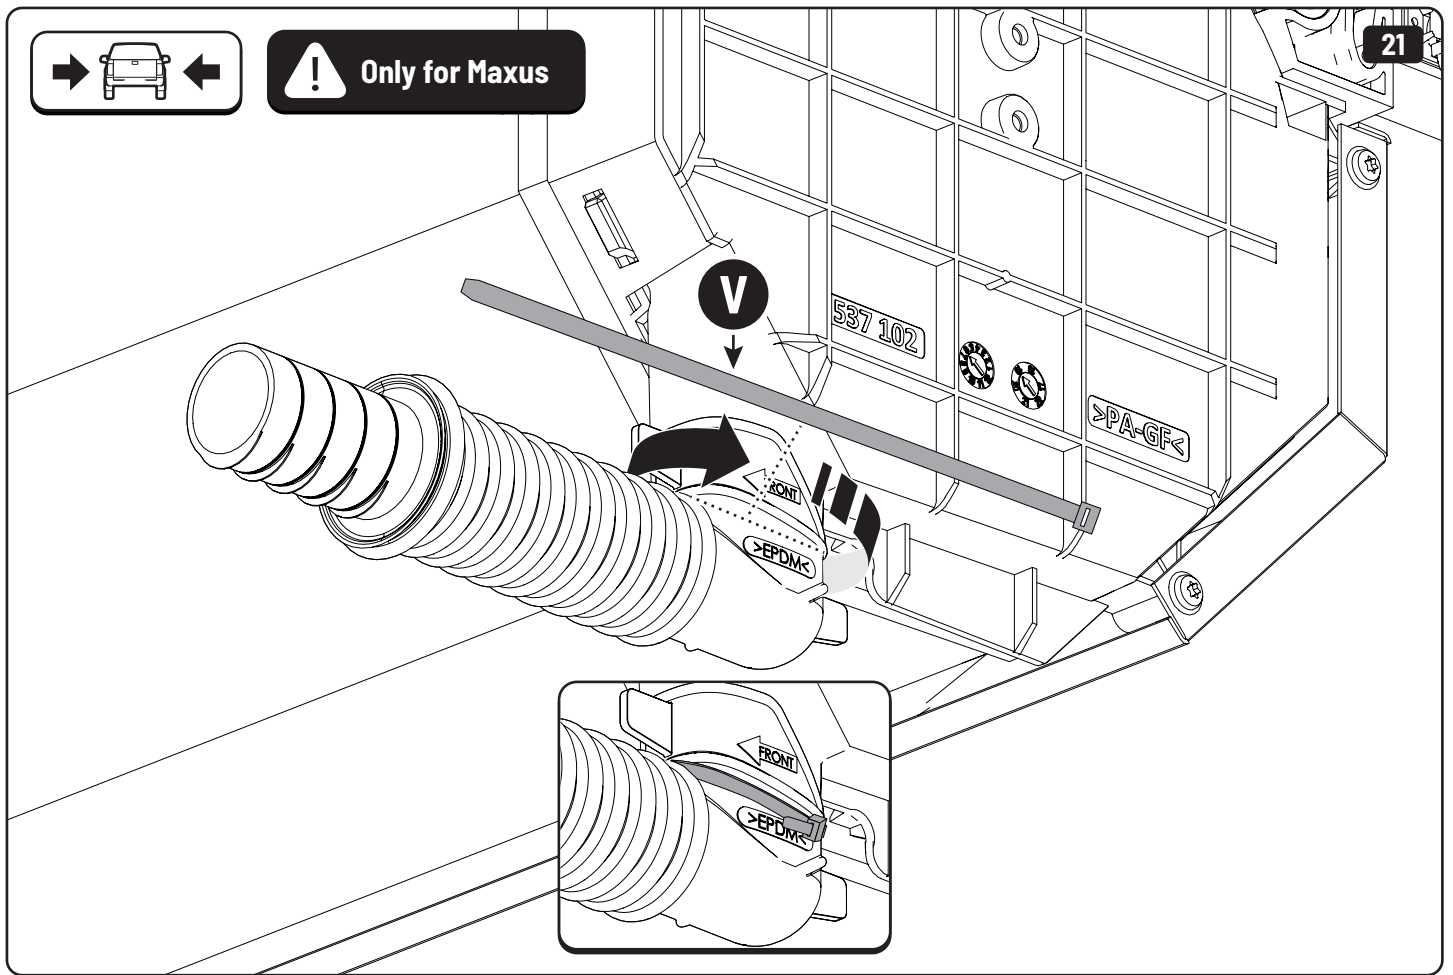


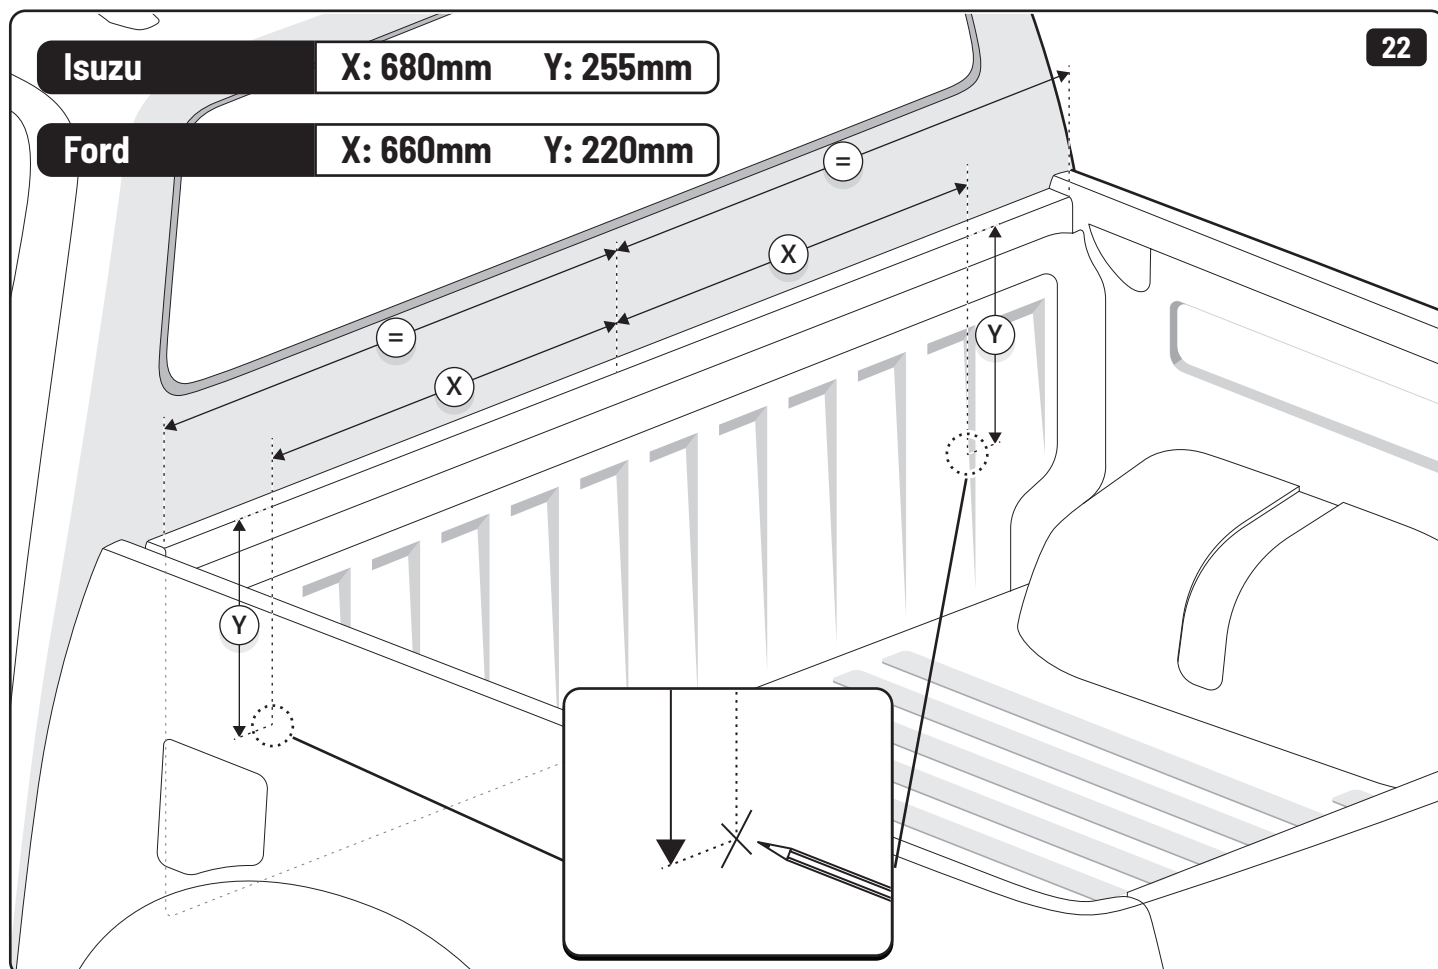
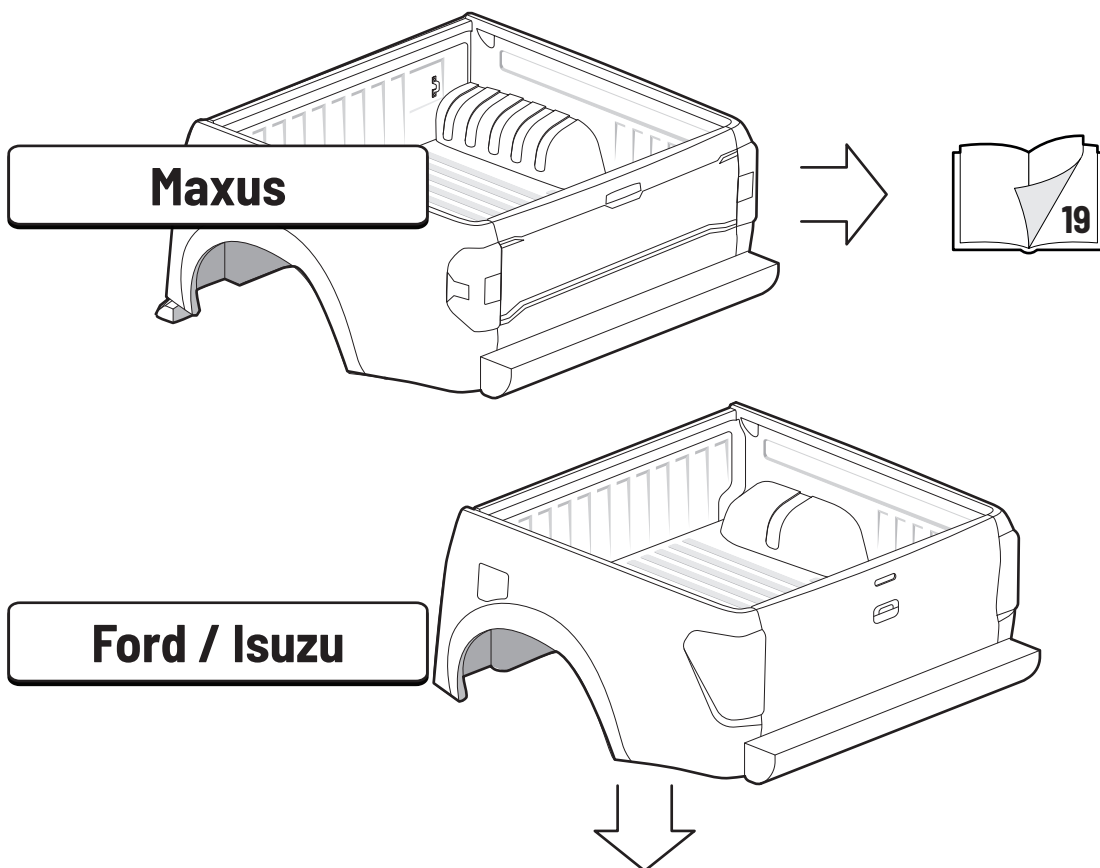


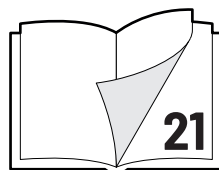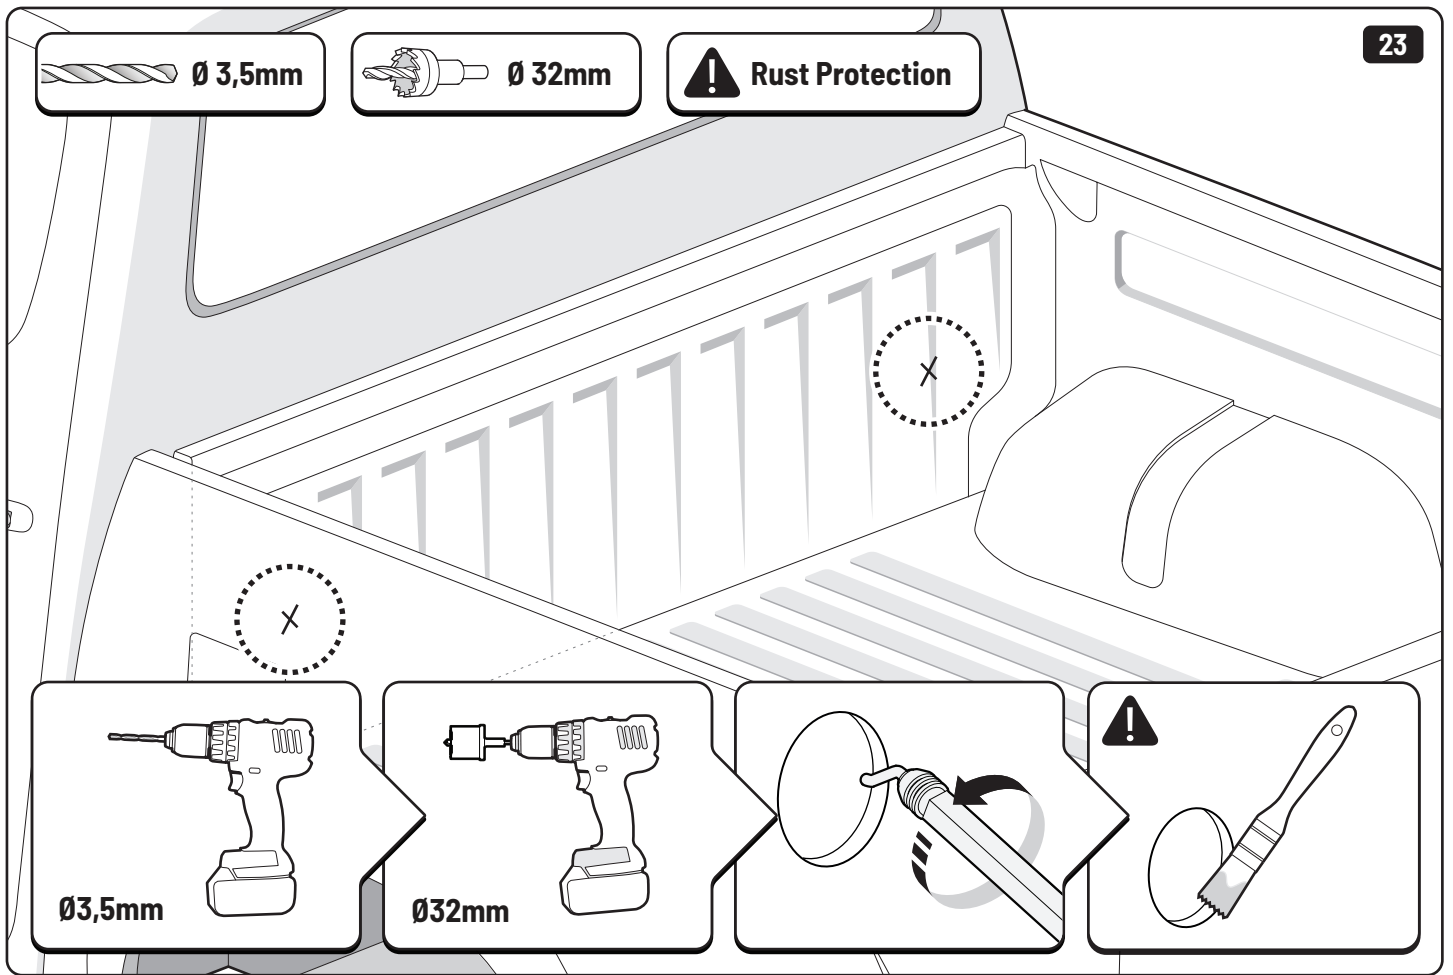

Maxus

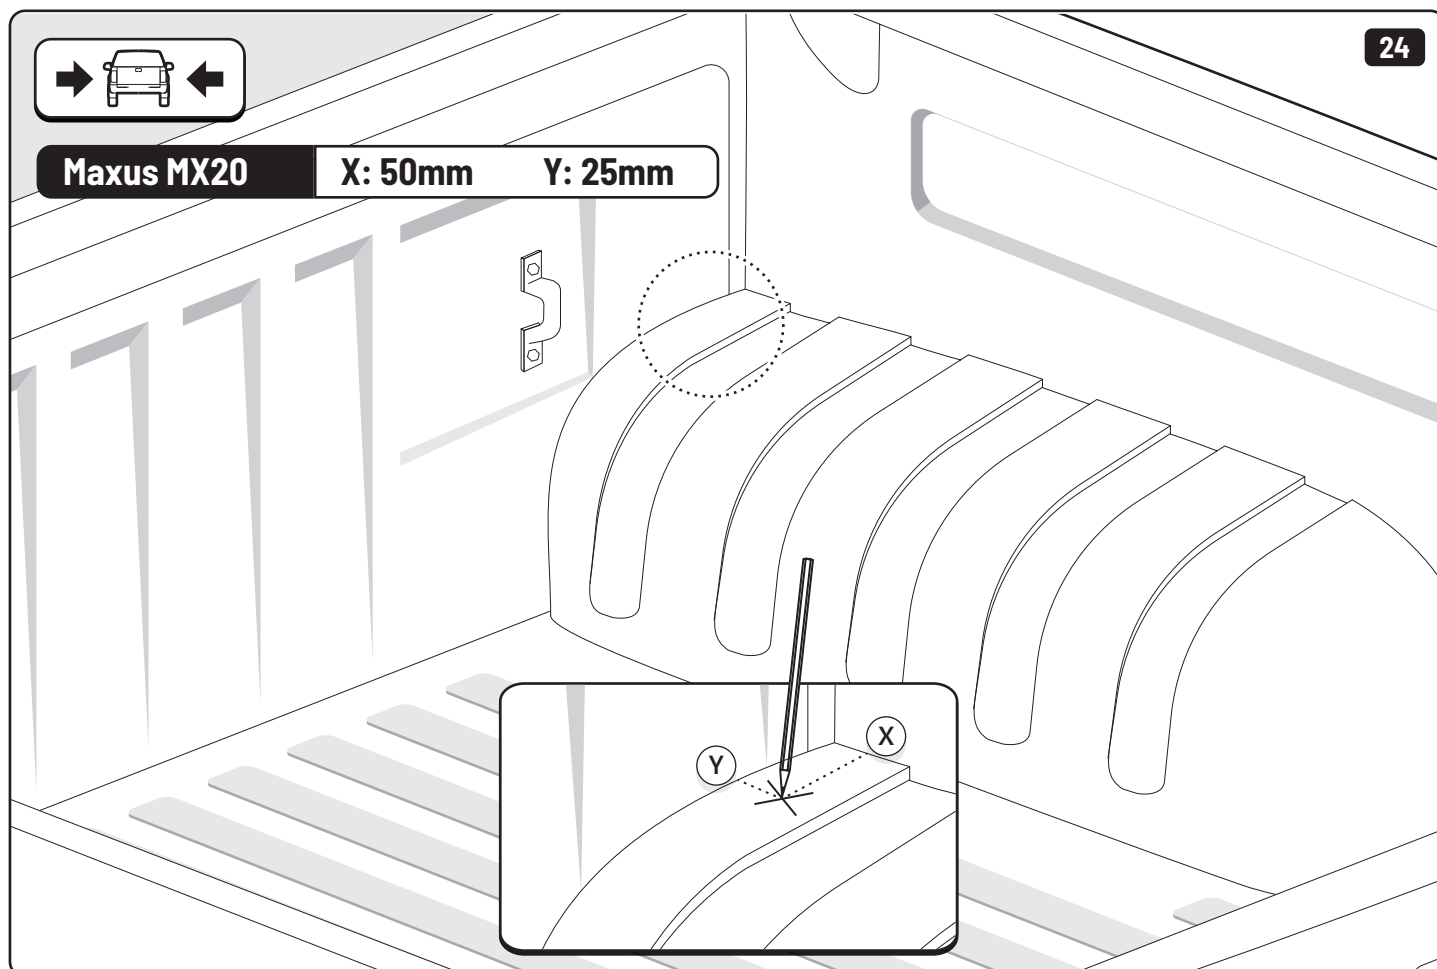
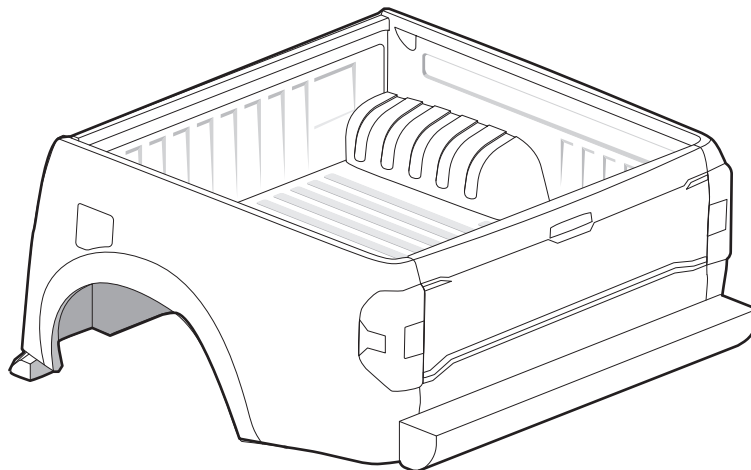


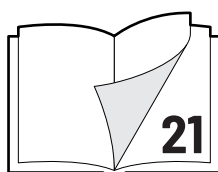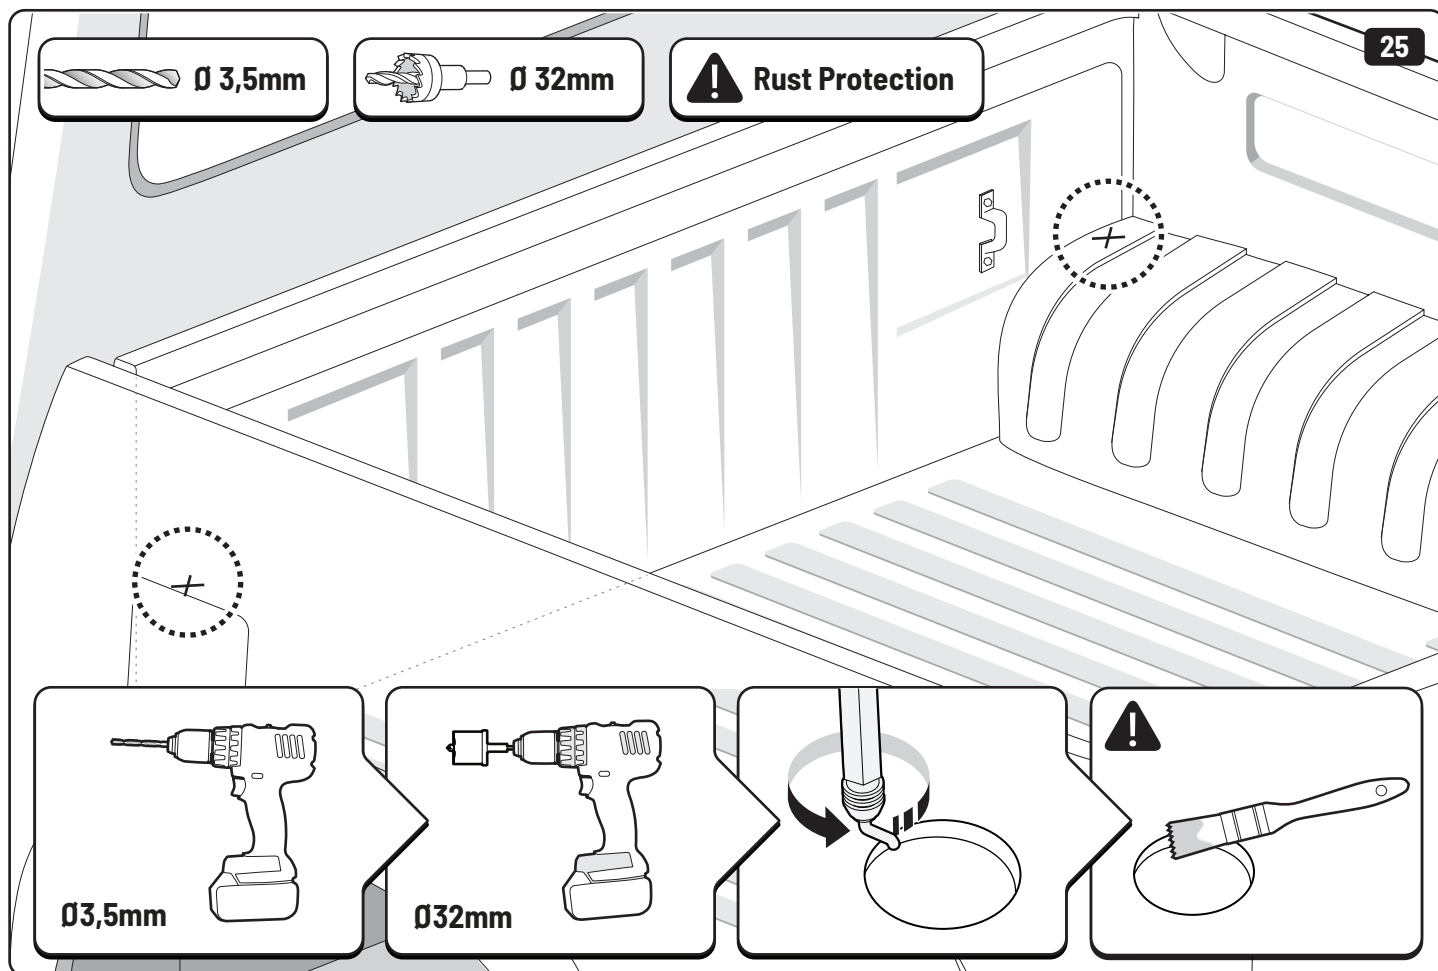

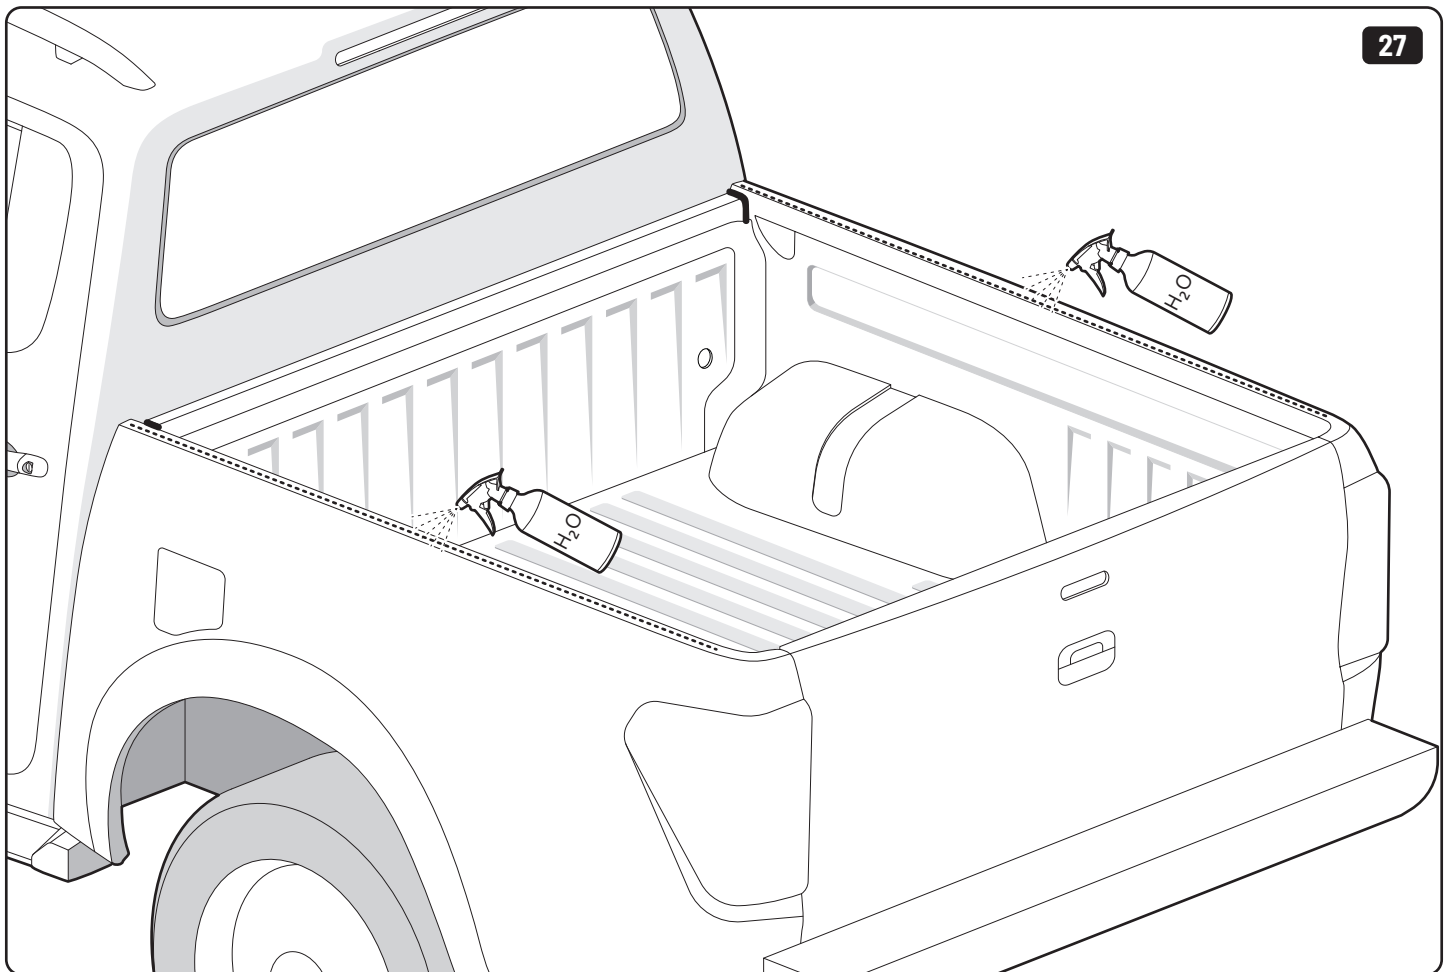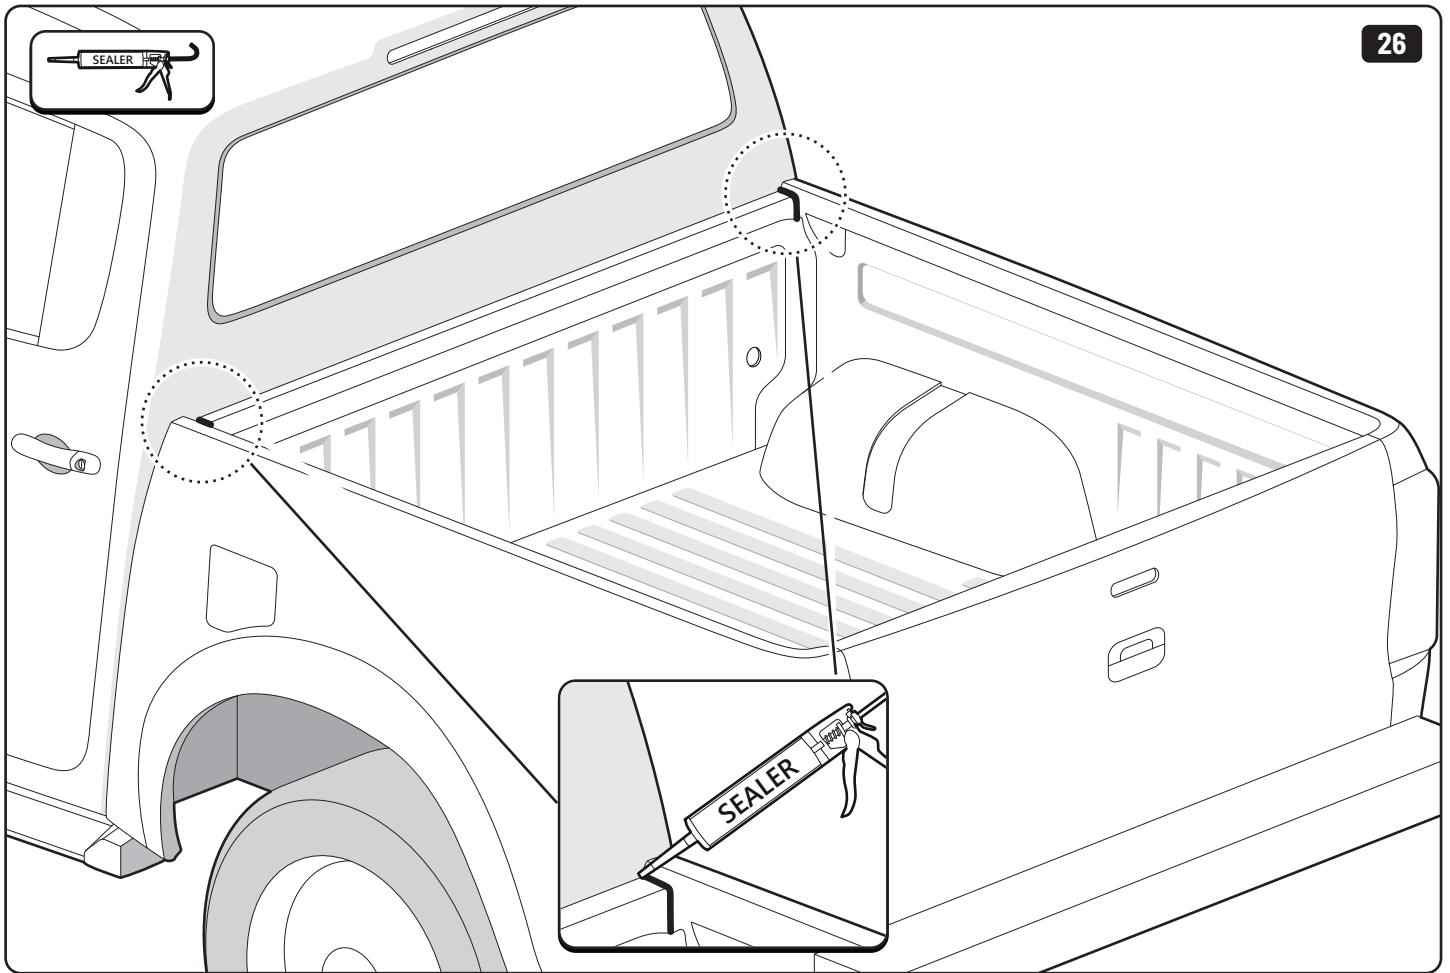








28

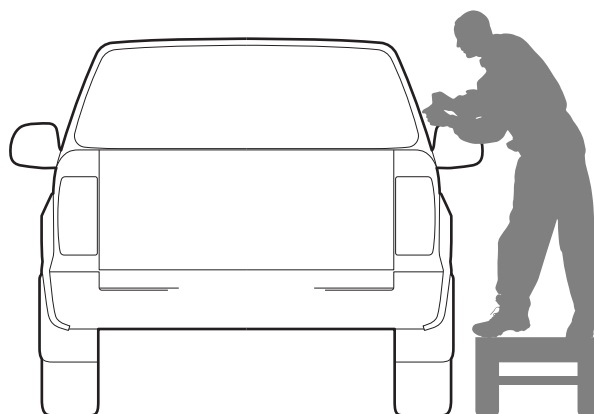
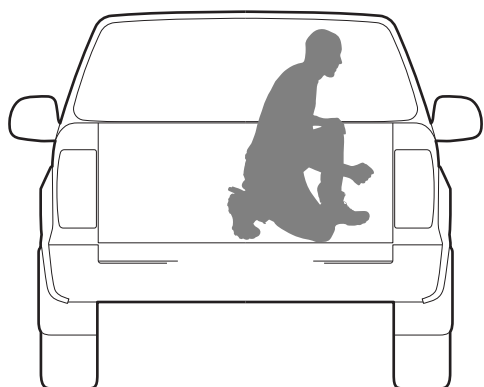


29

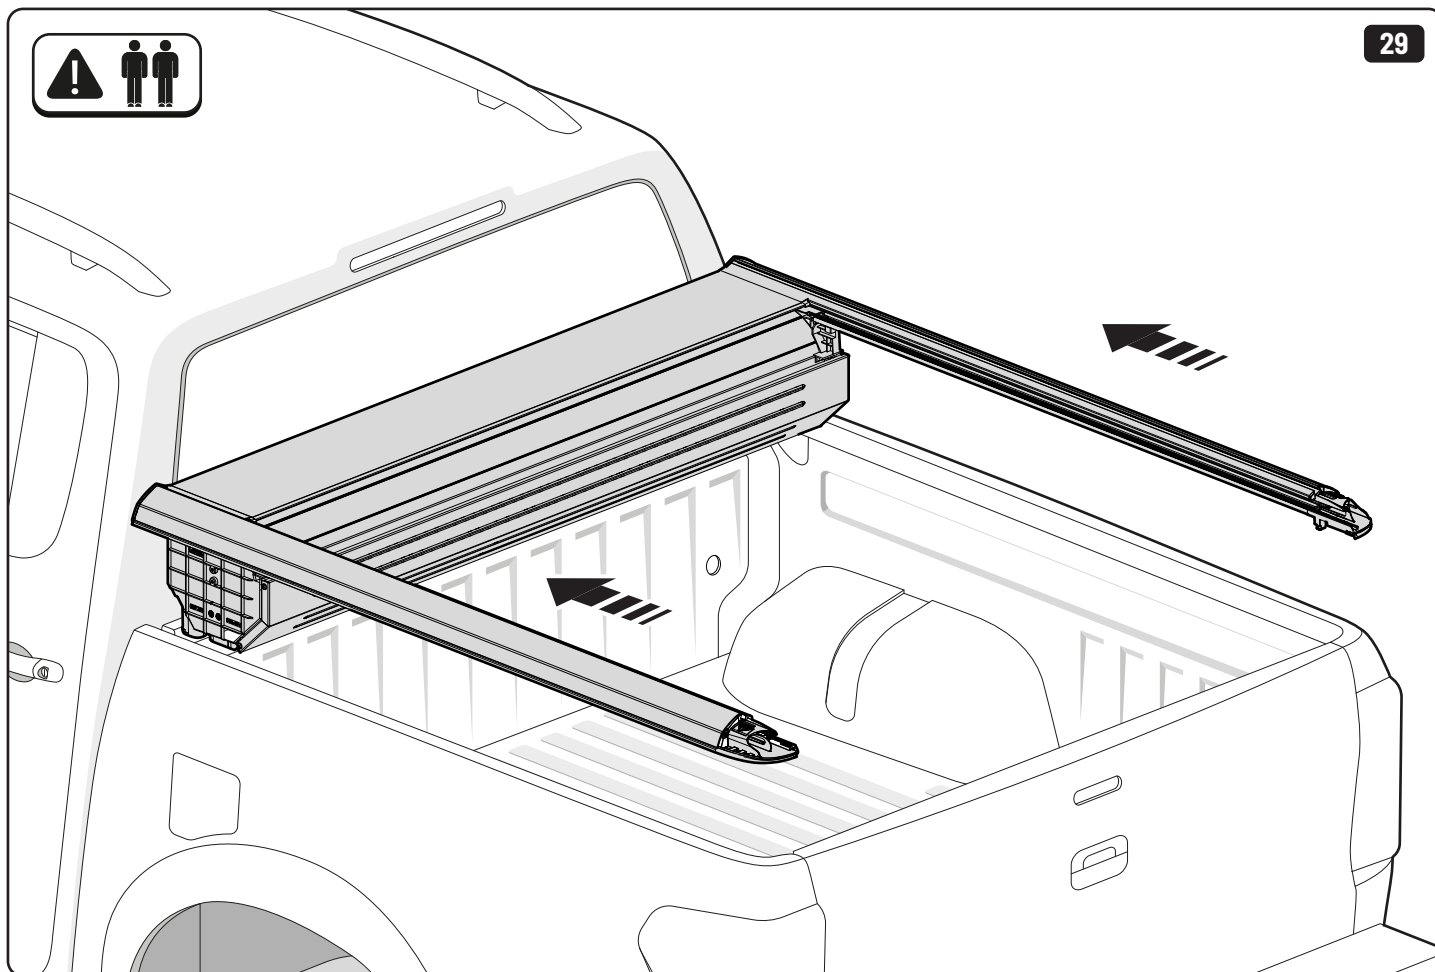

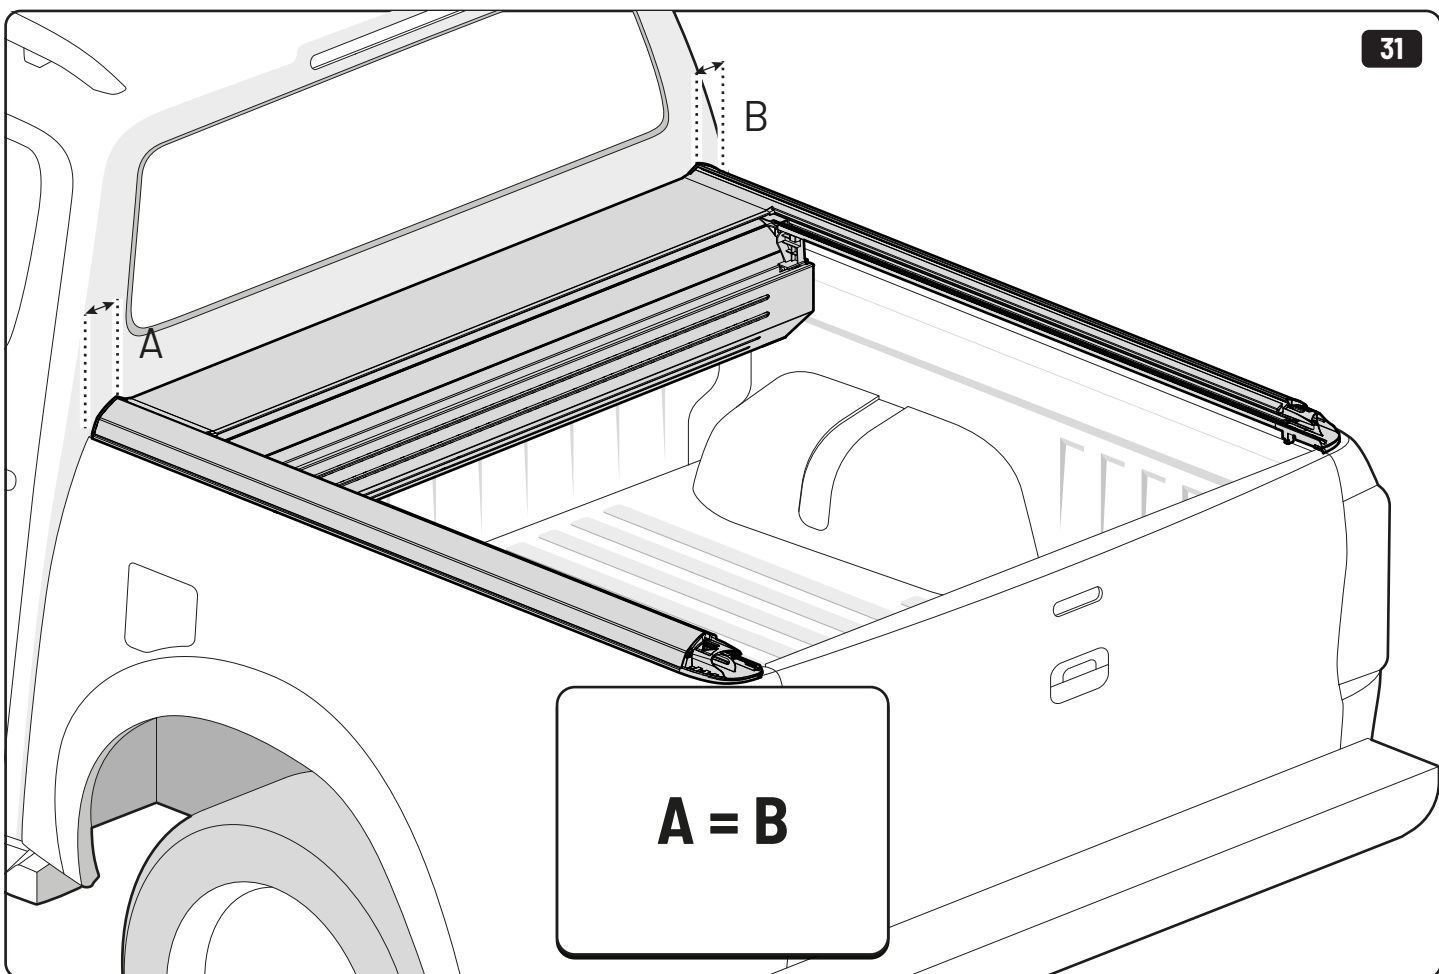
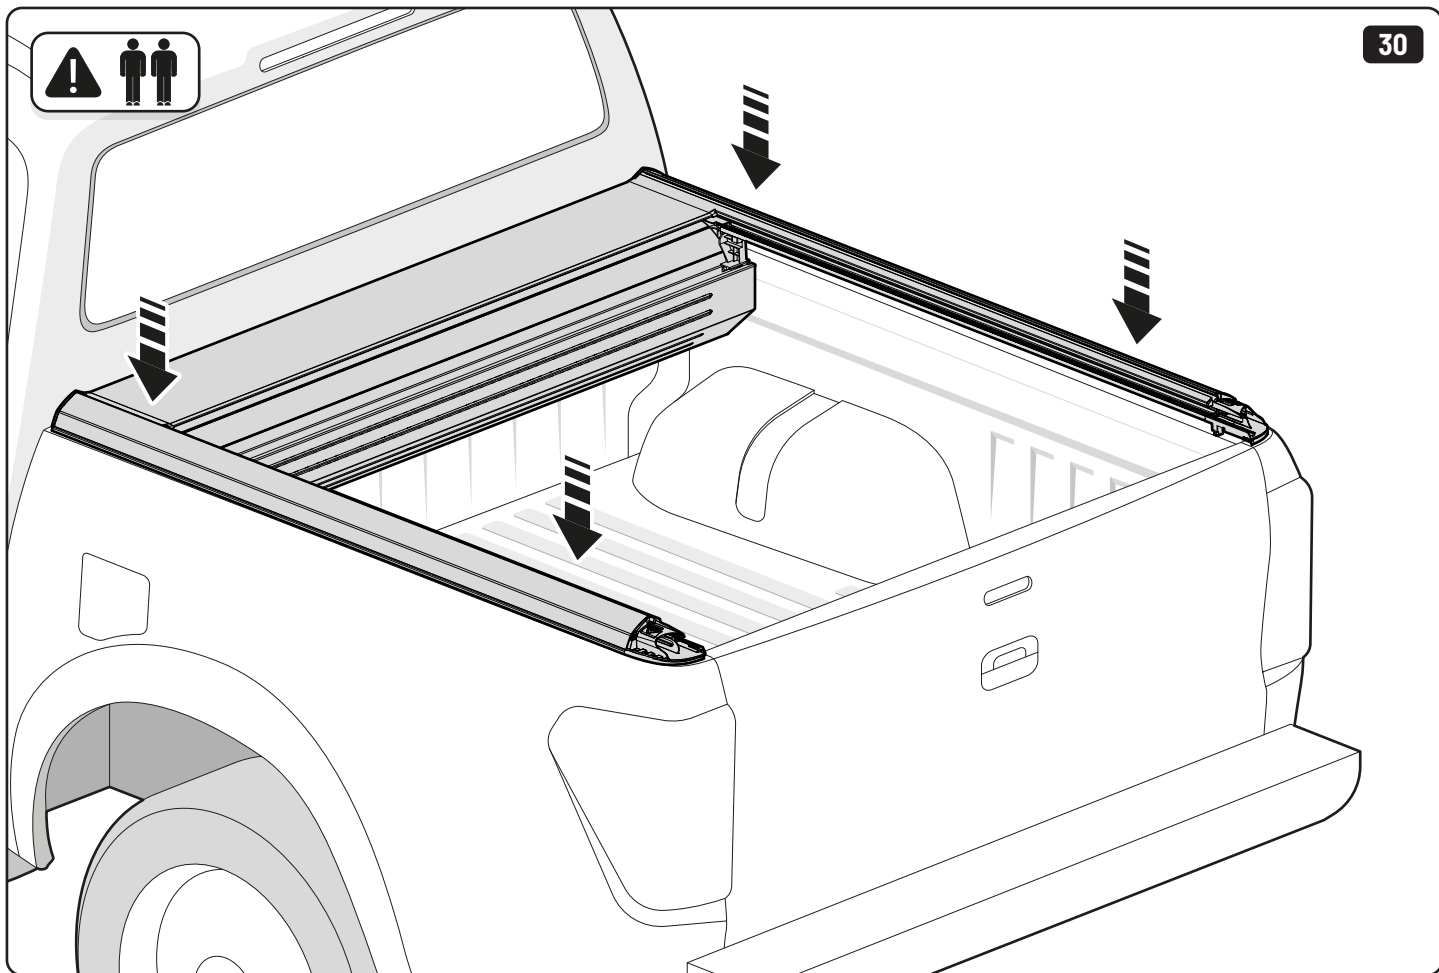


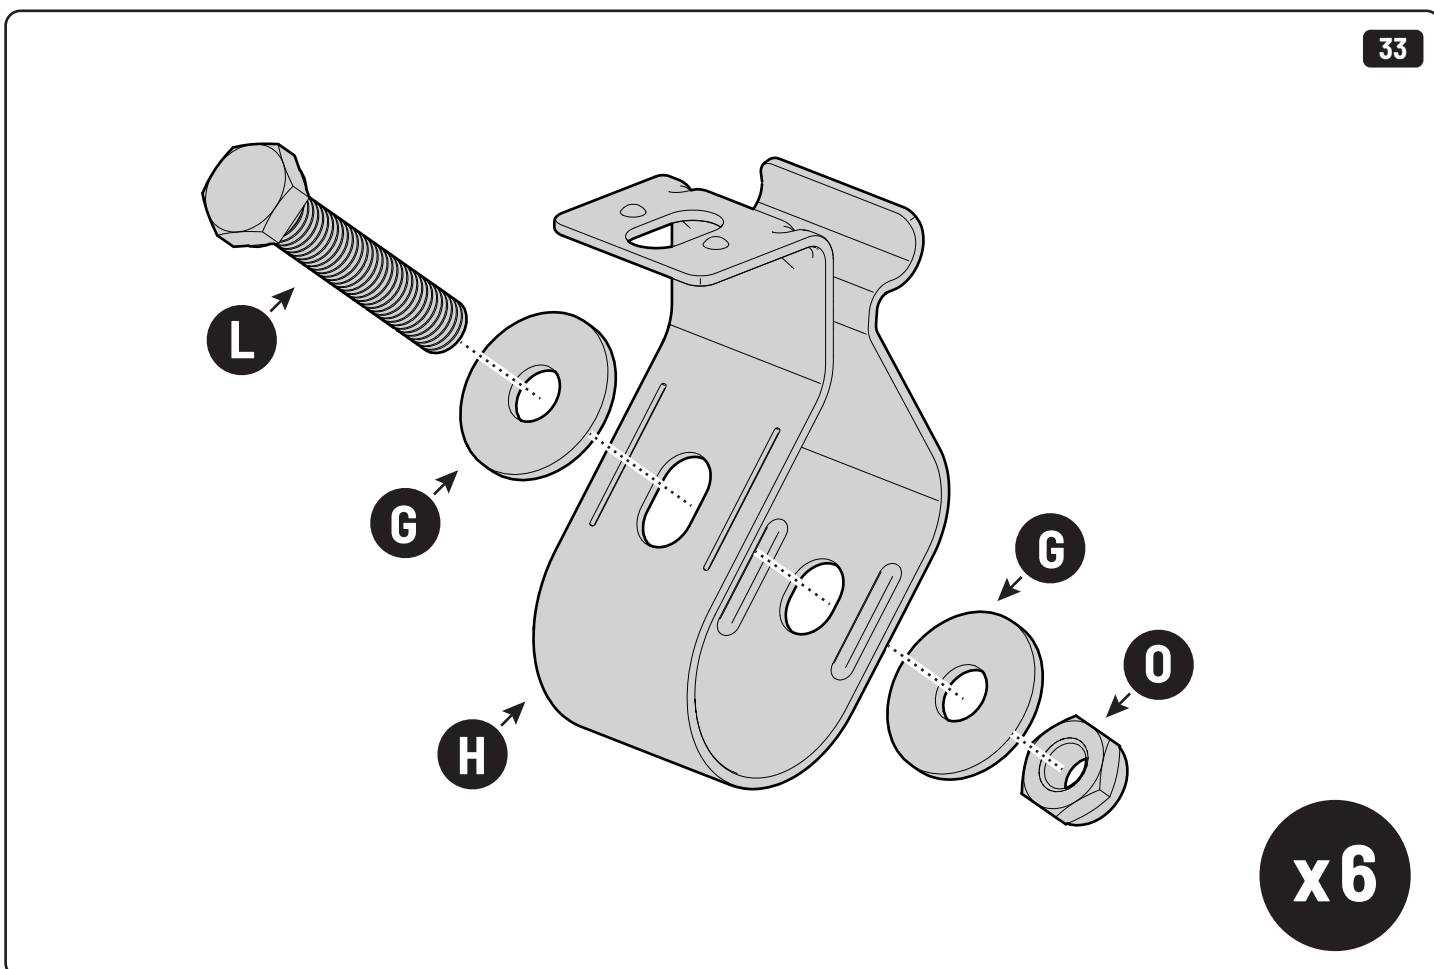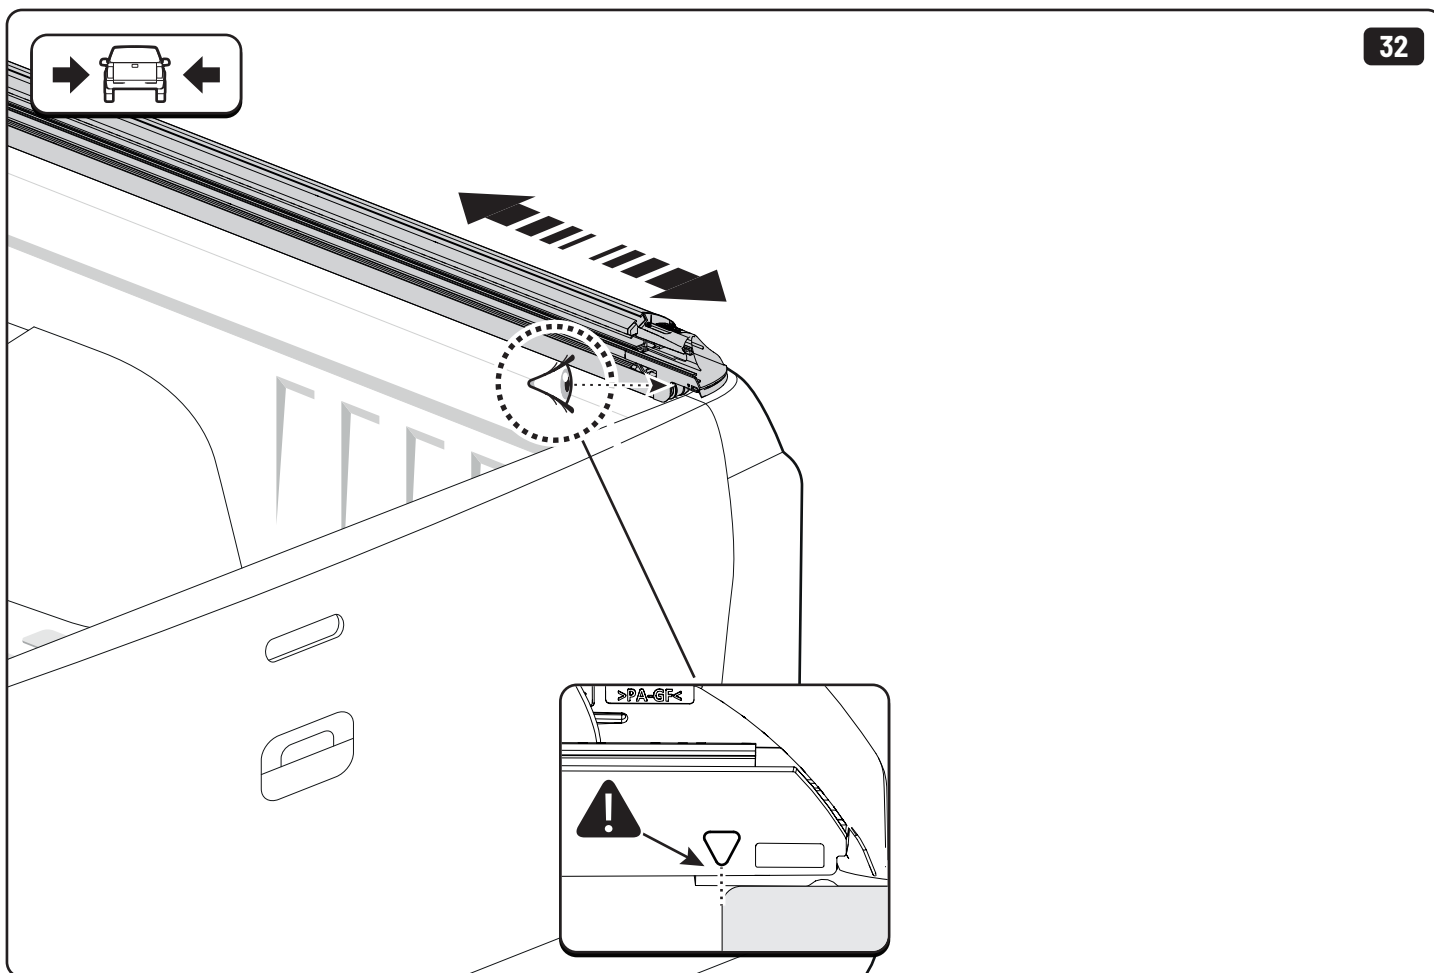

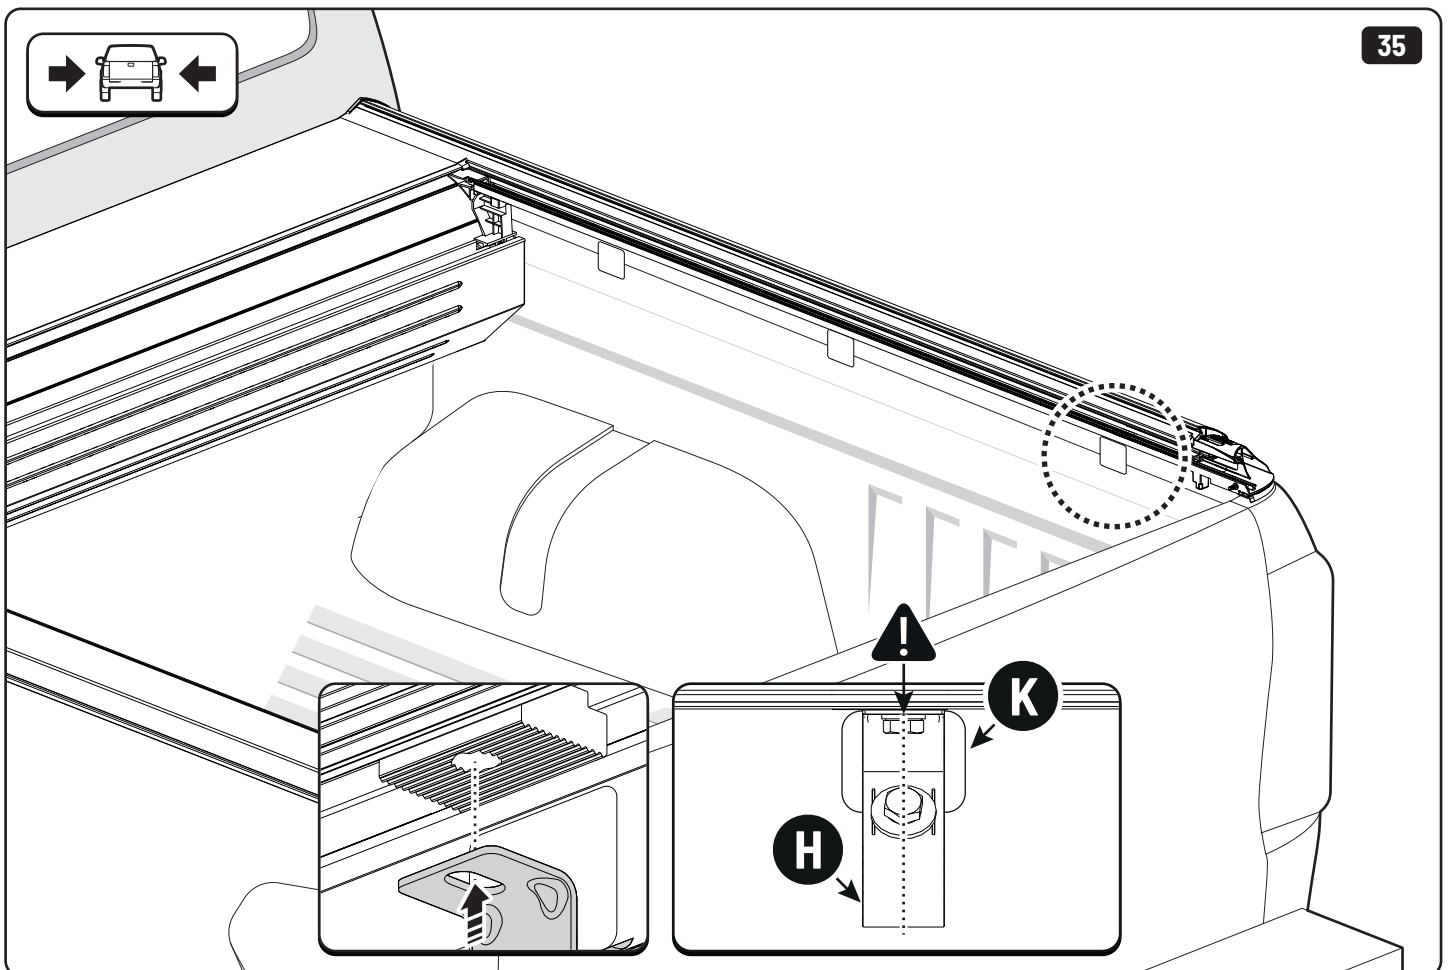
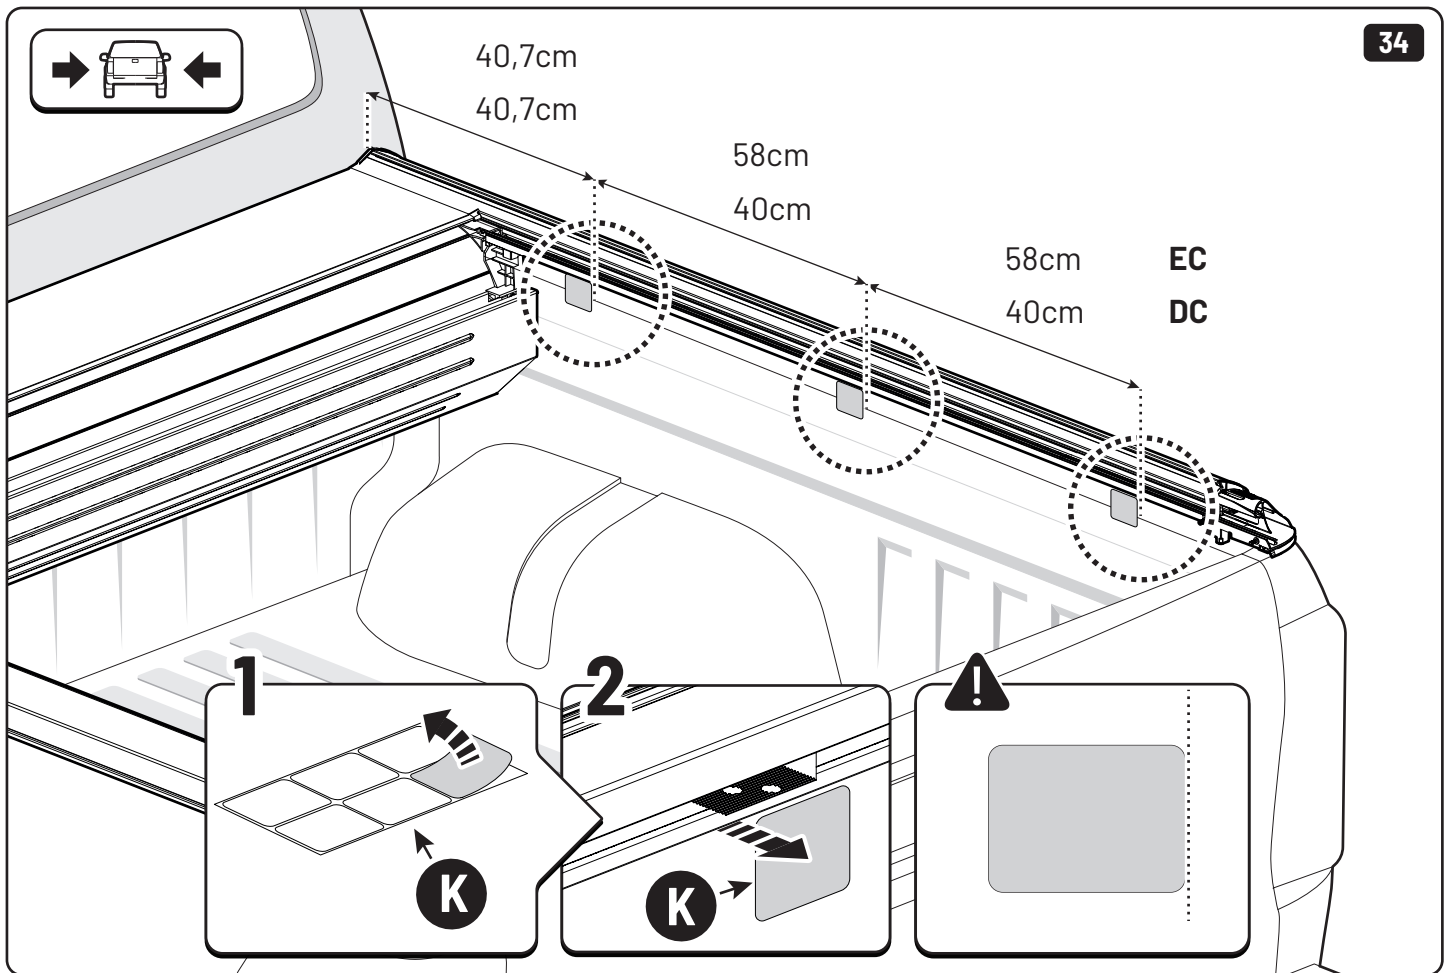








36

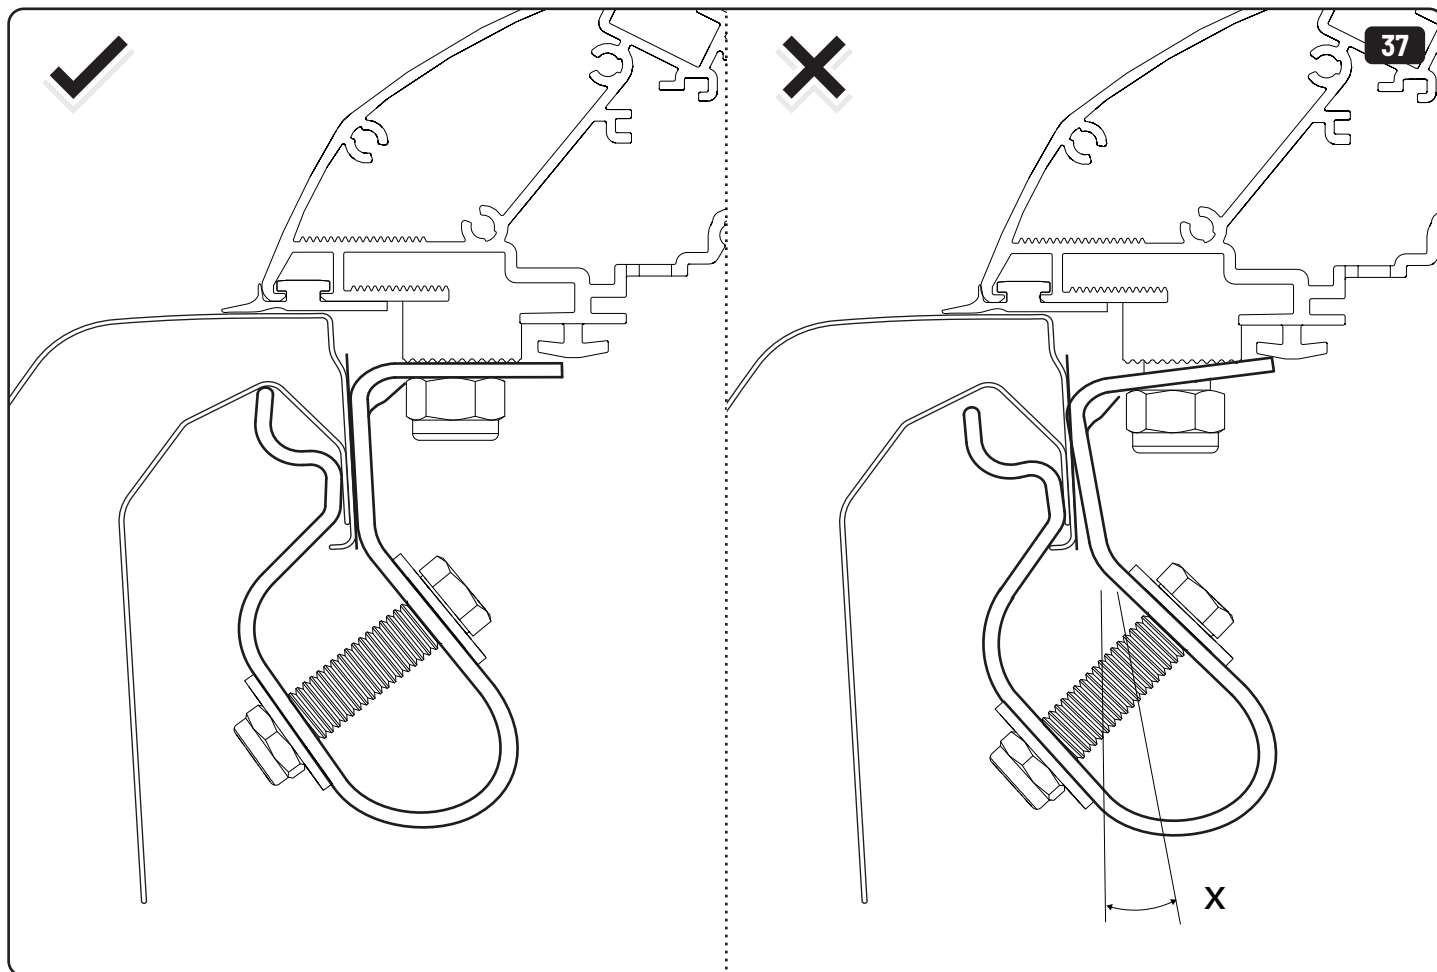
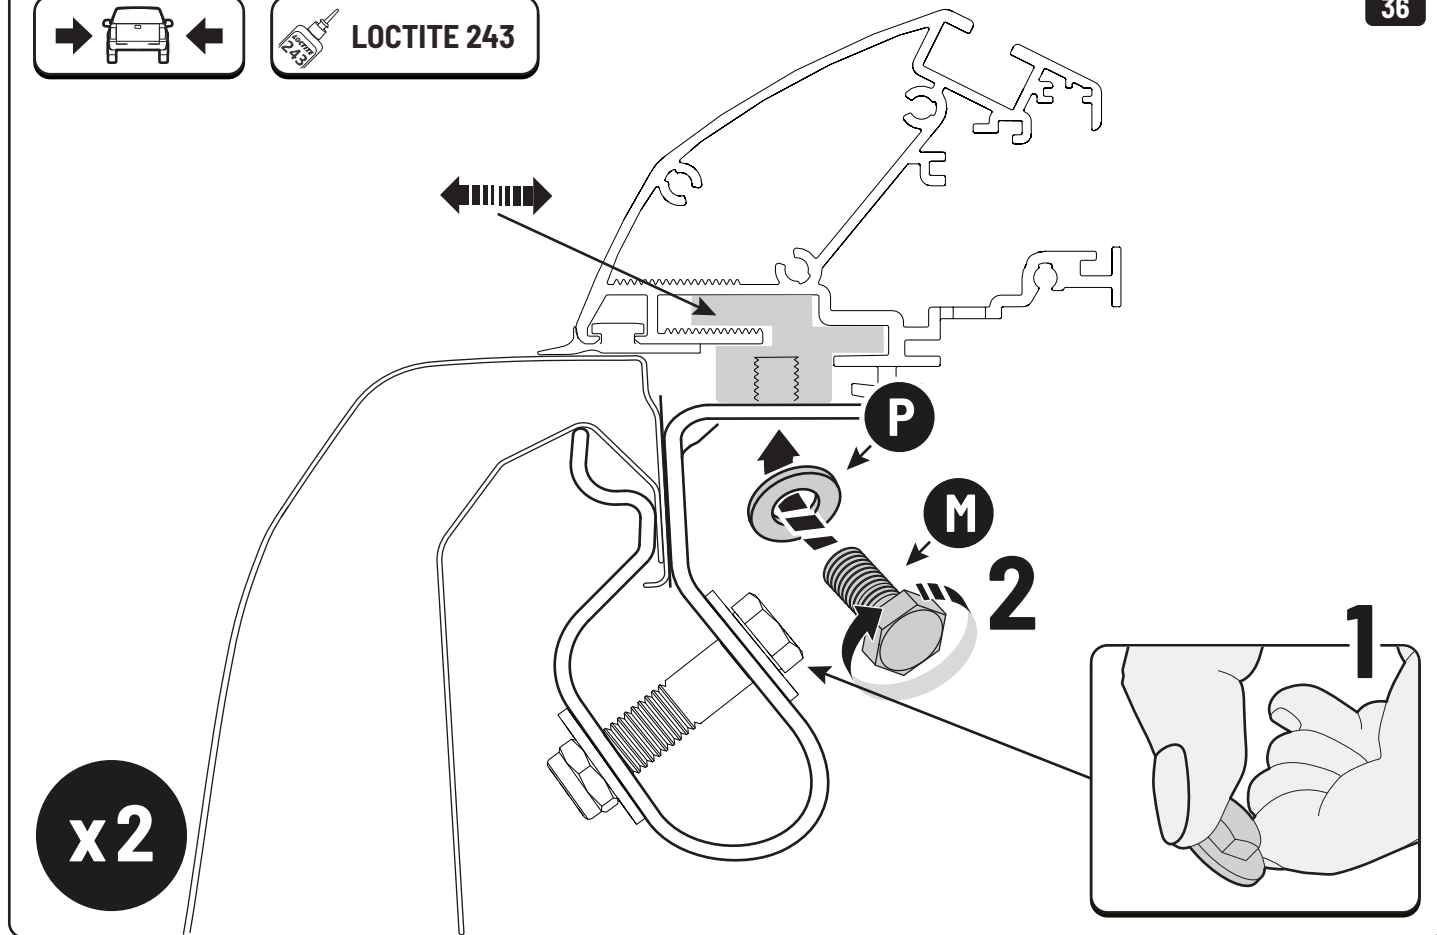




37

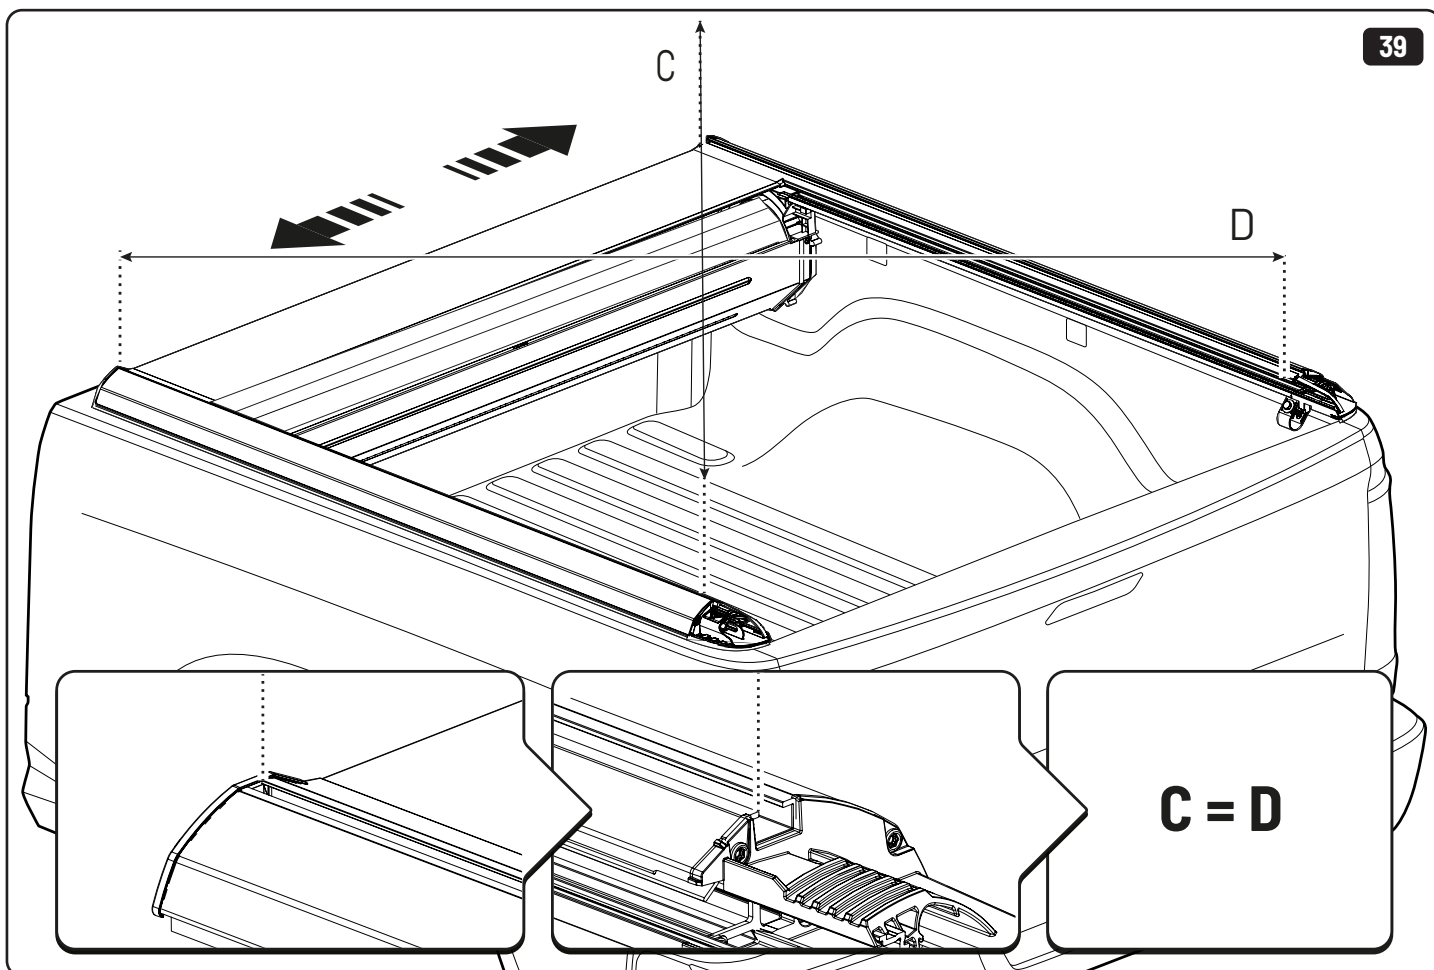
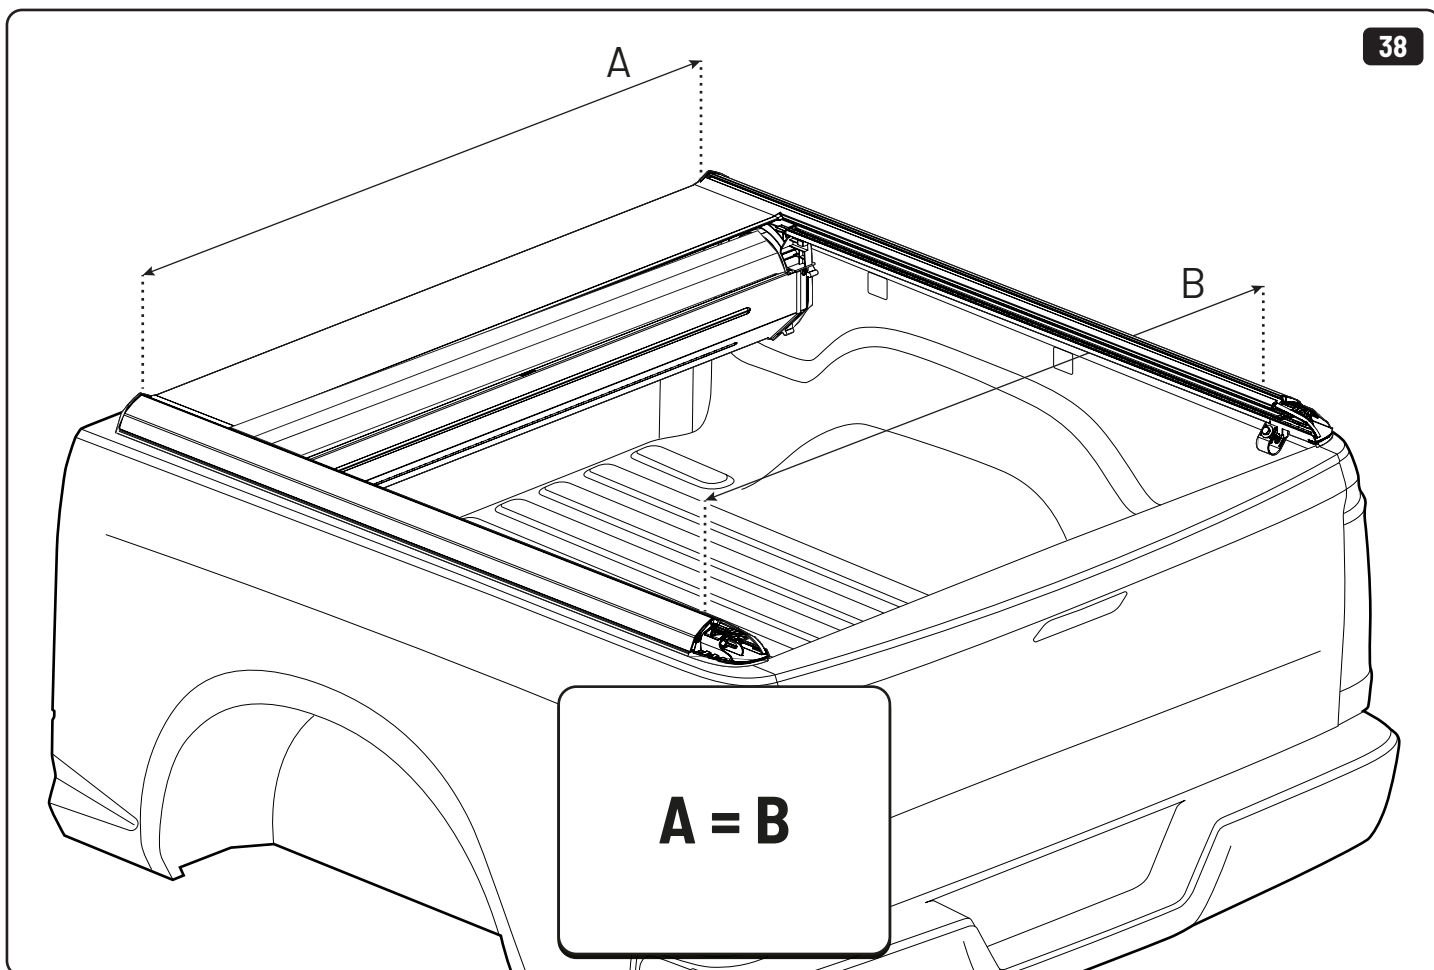


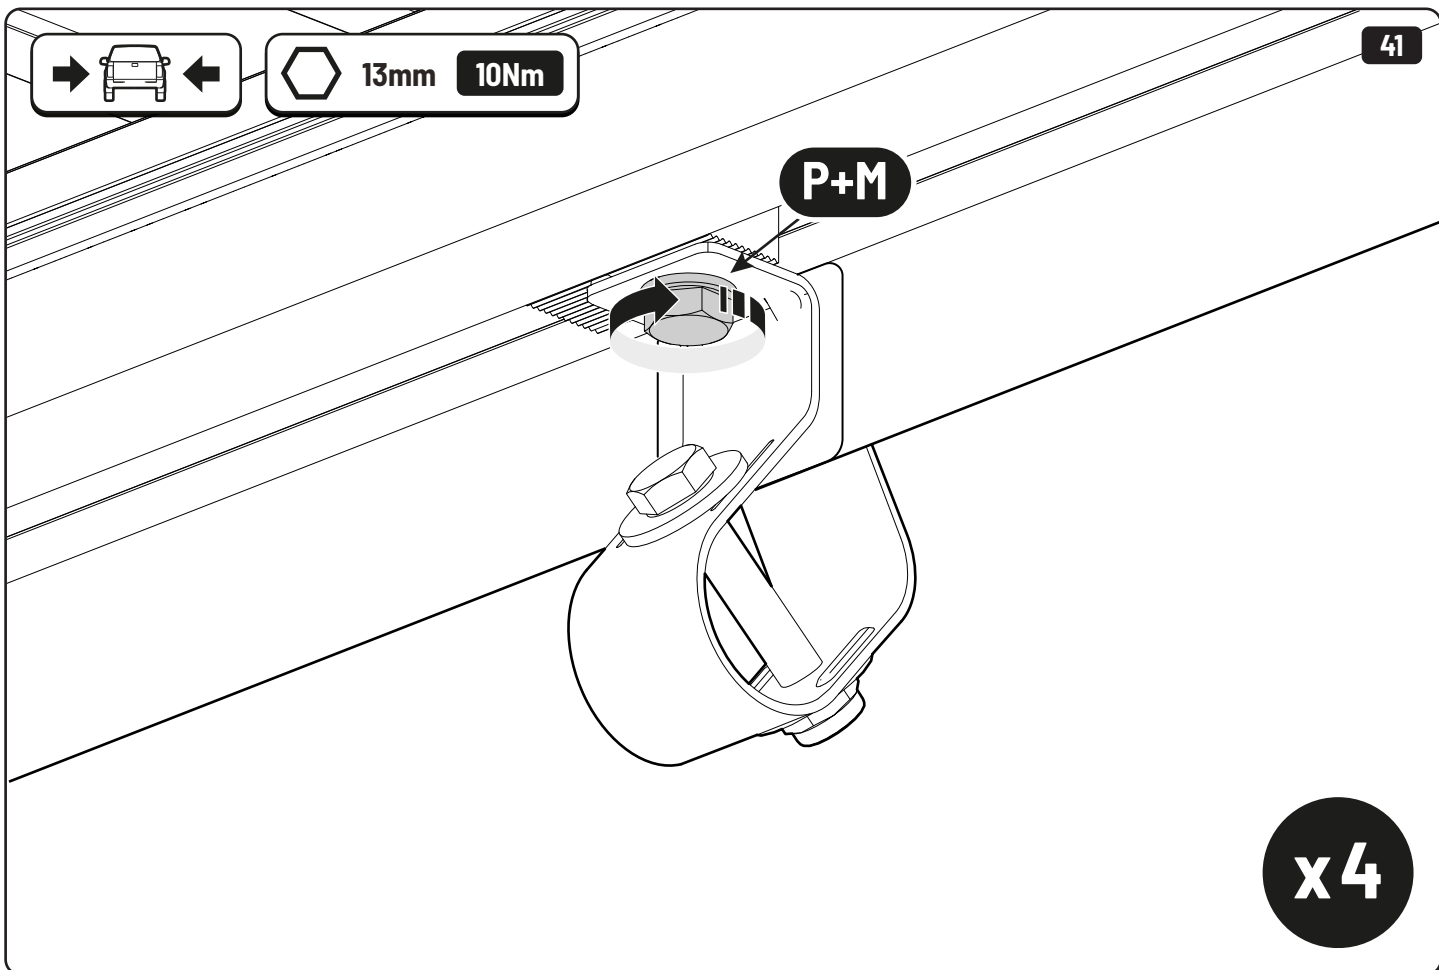
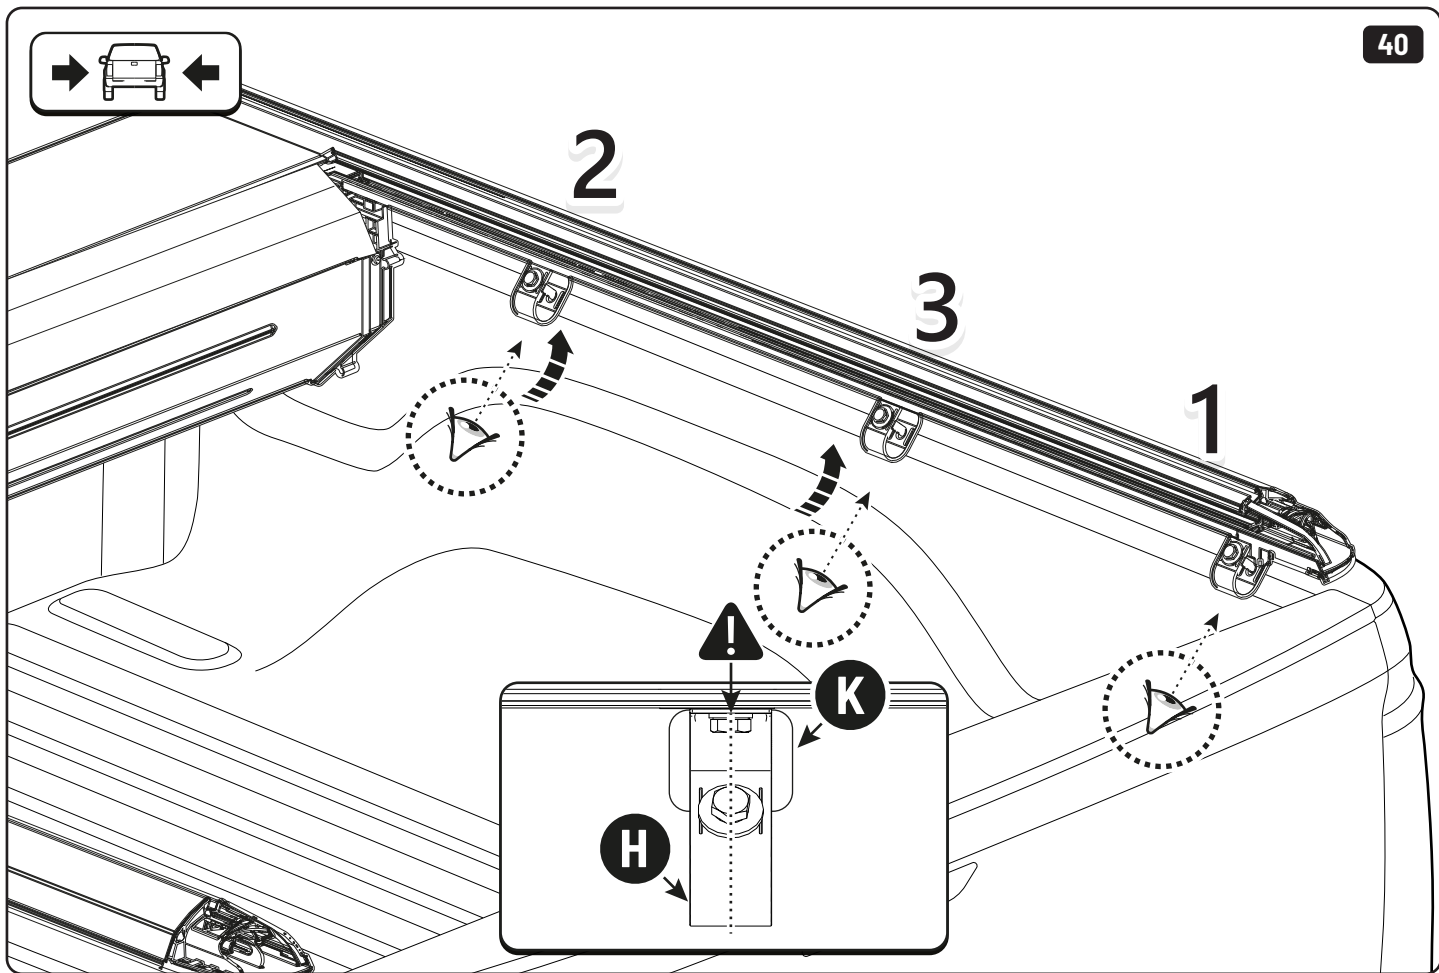


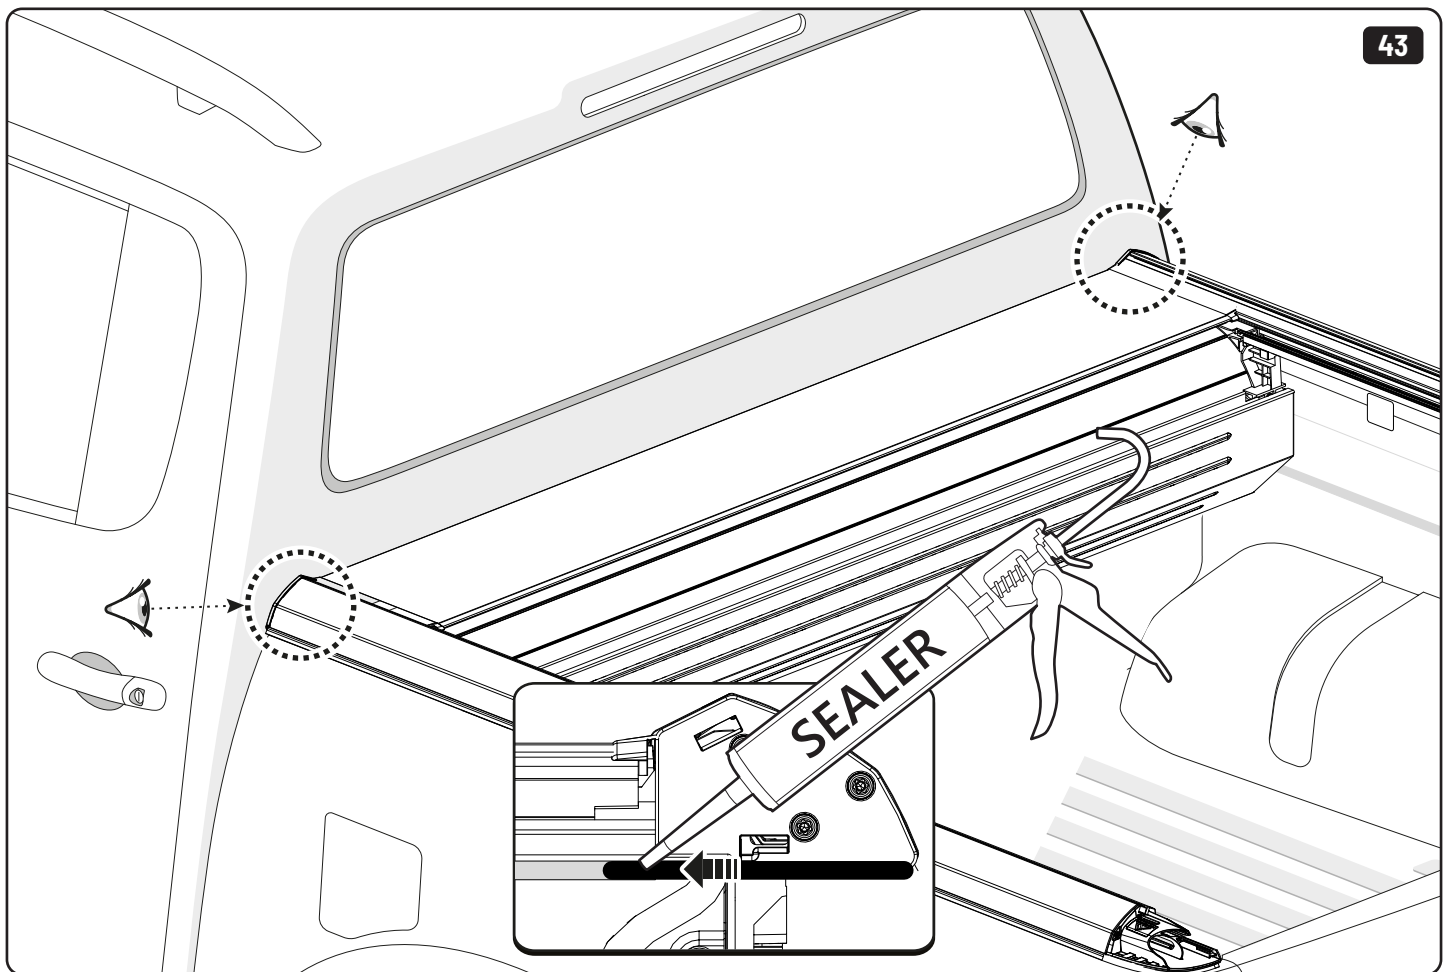
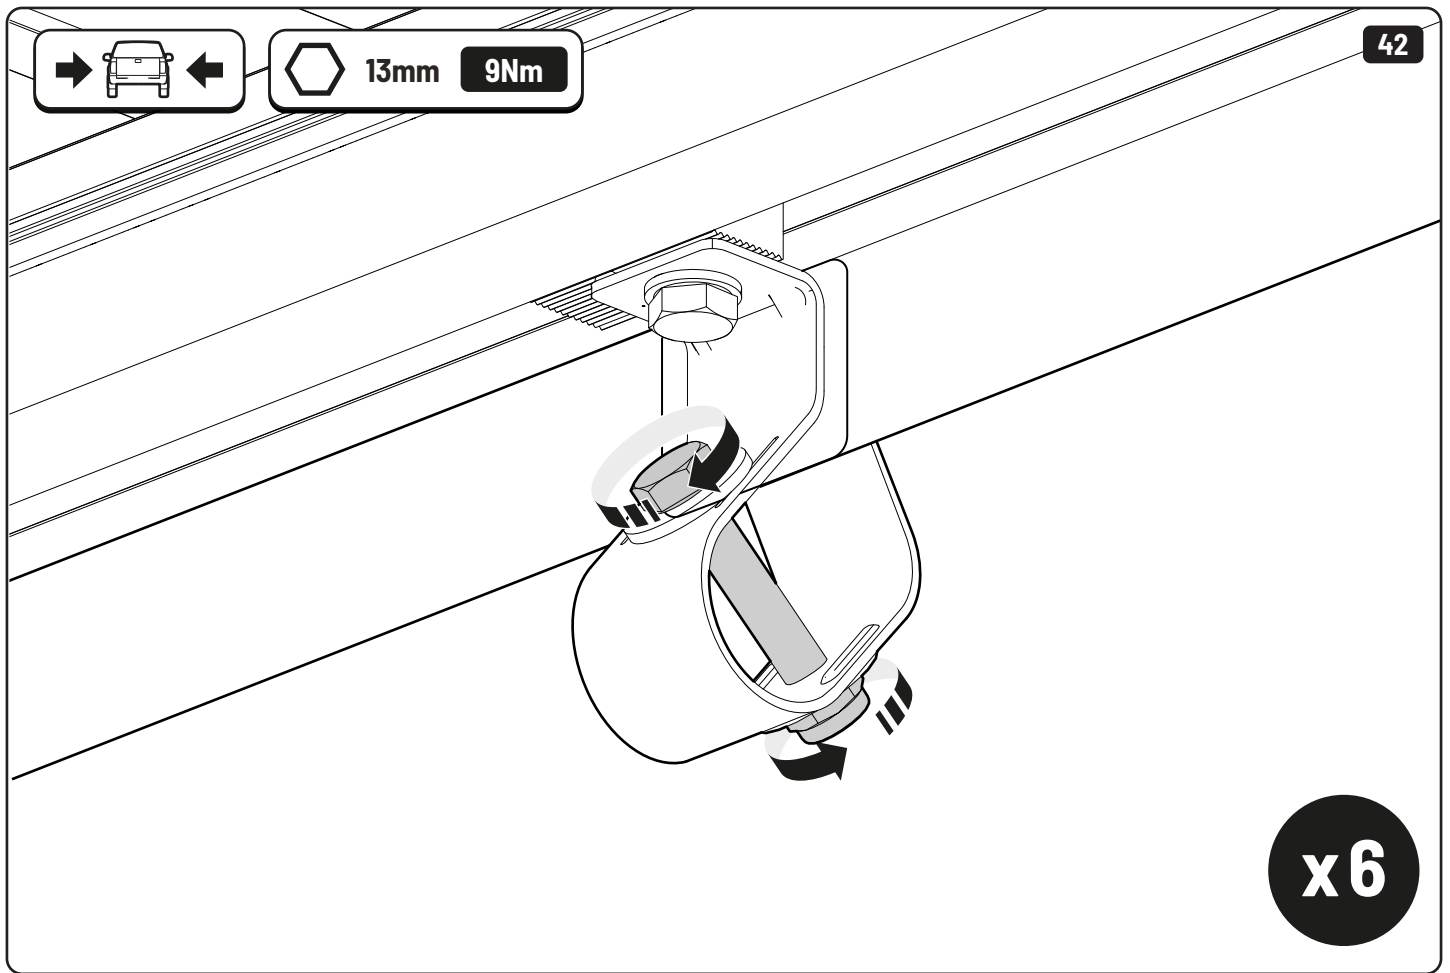


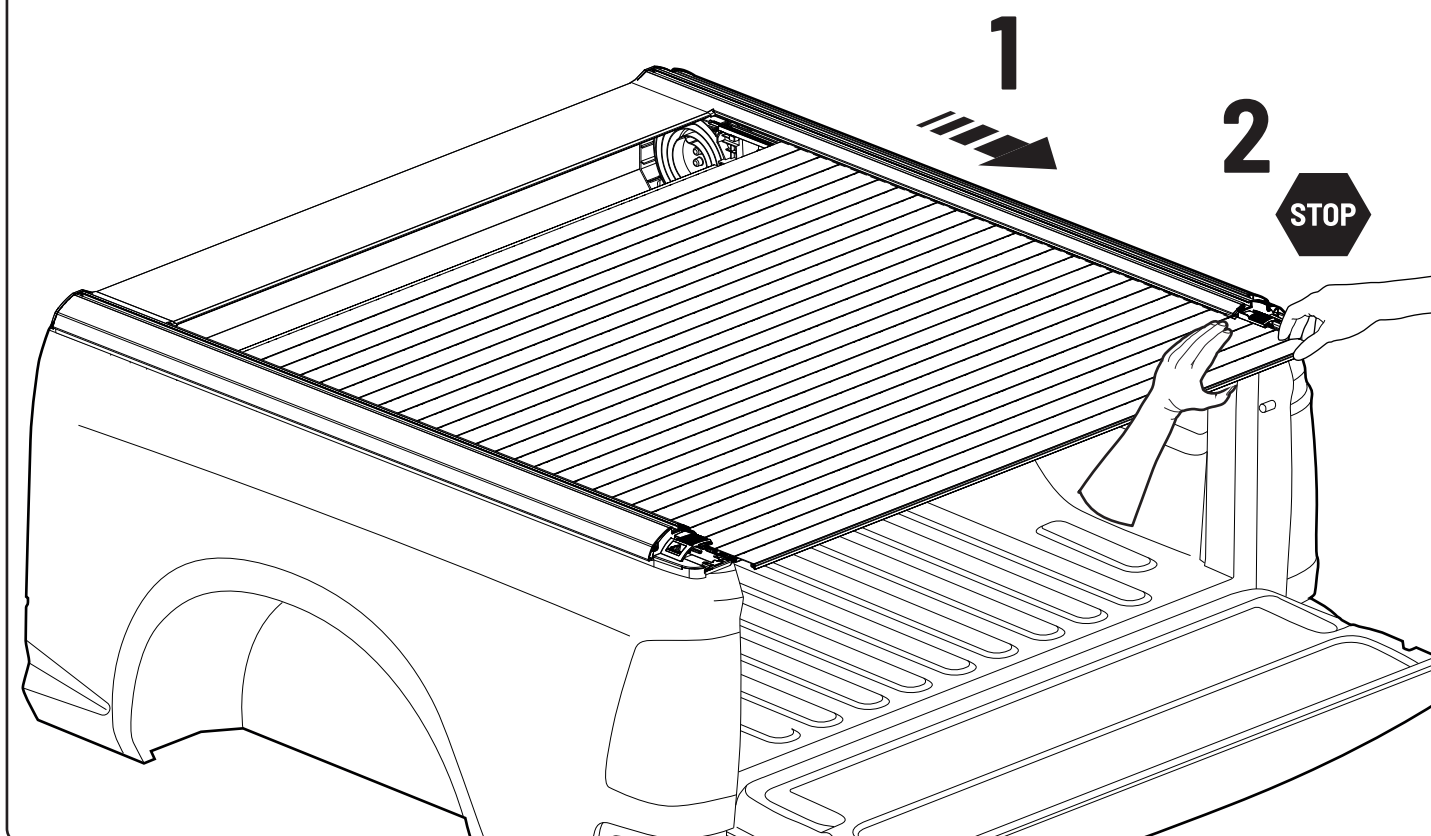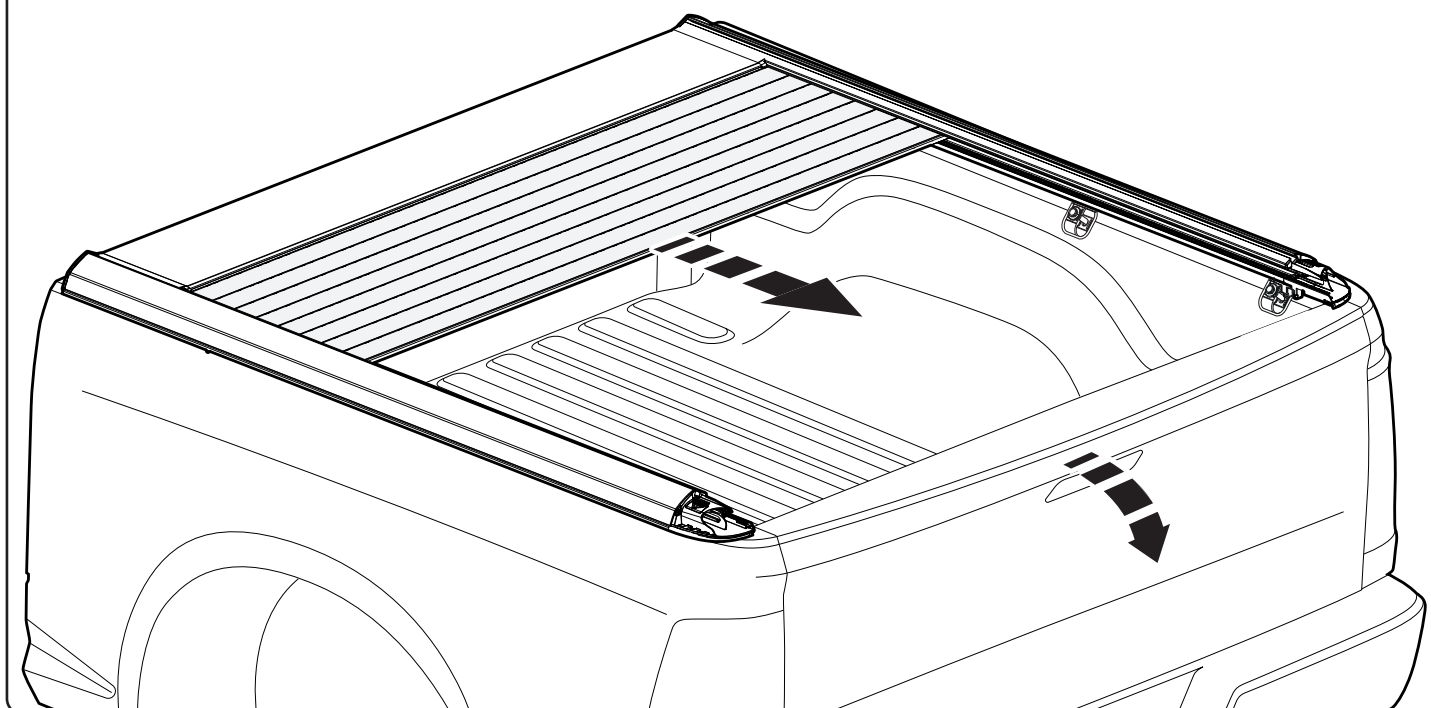


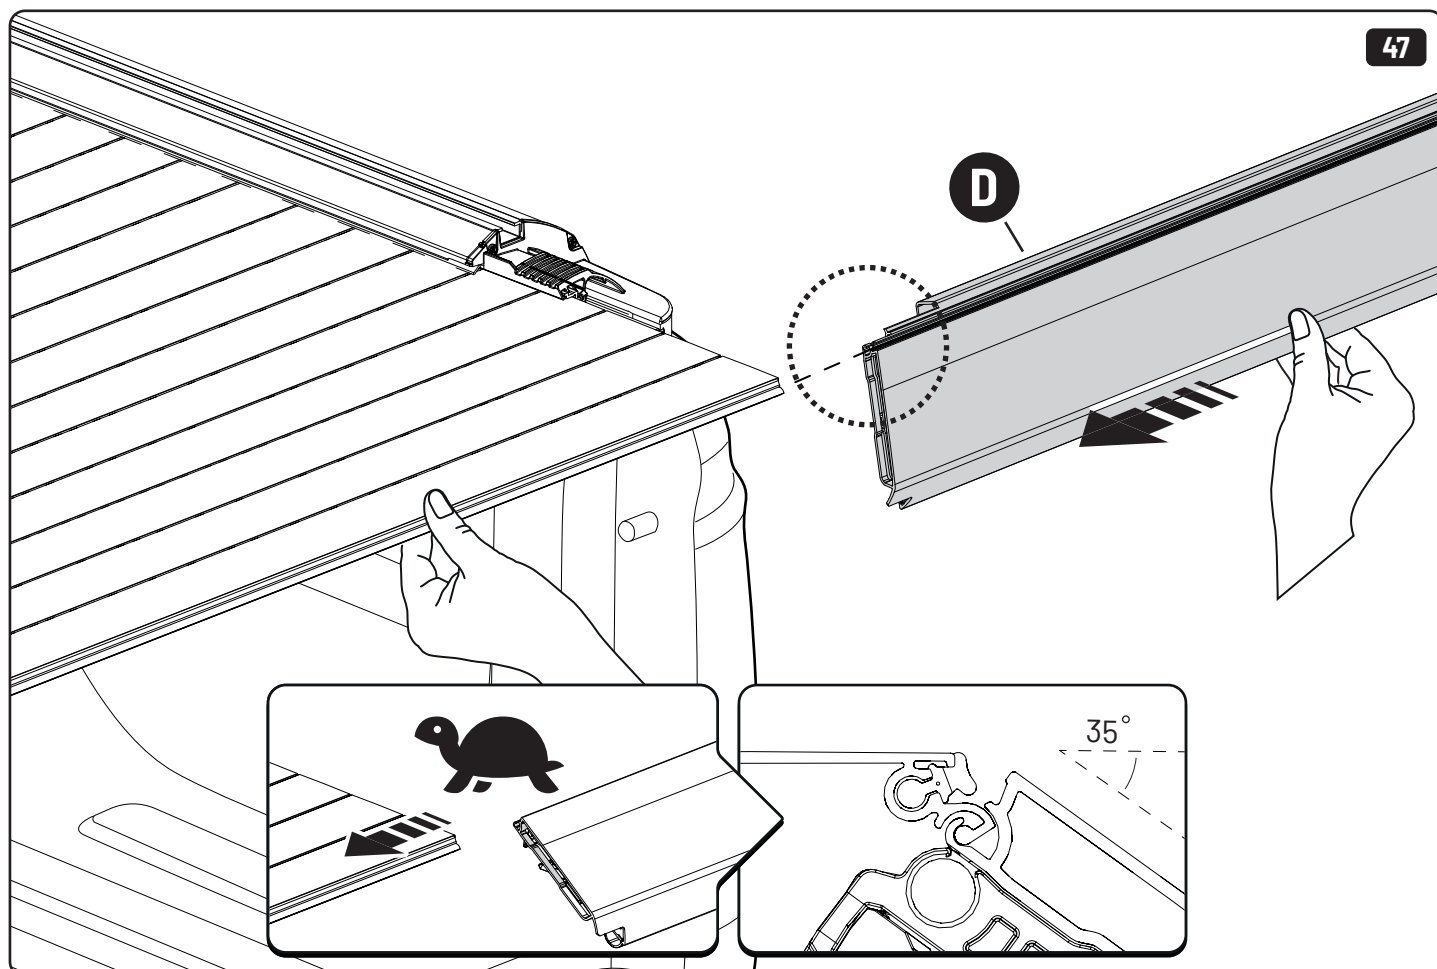
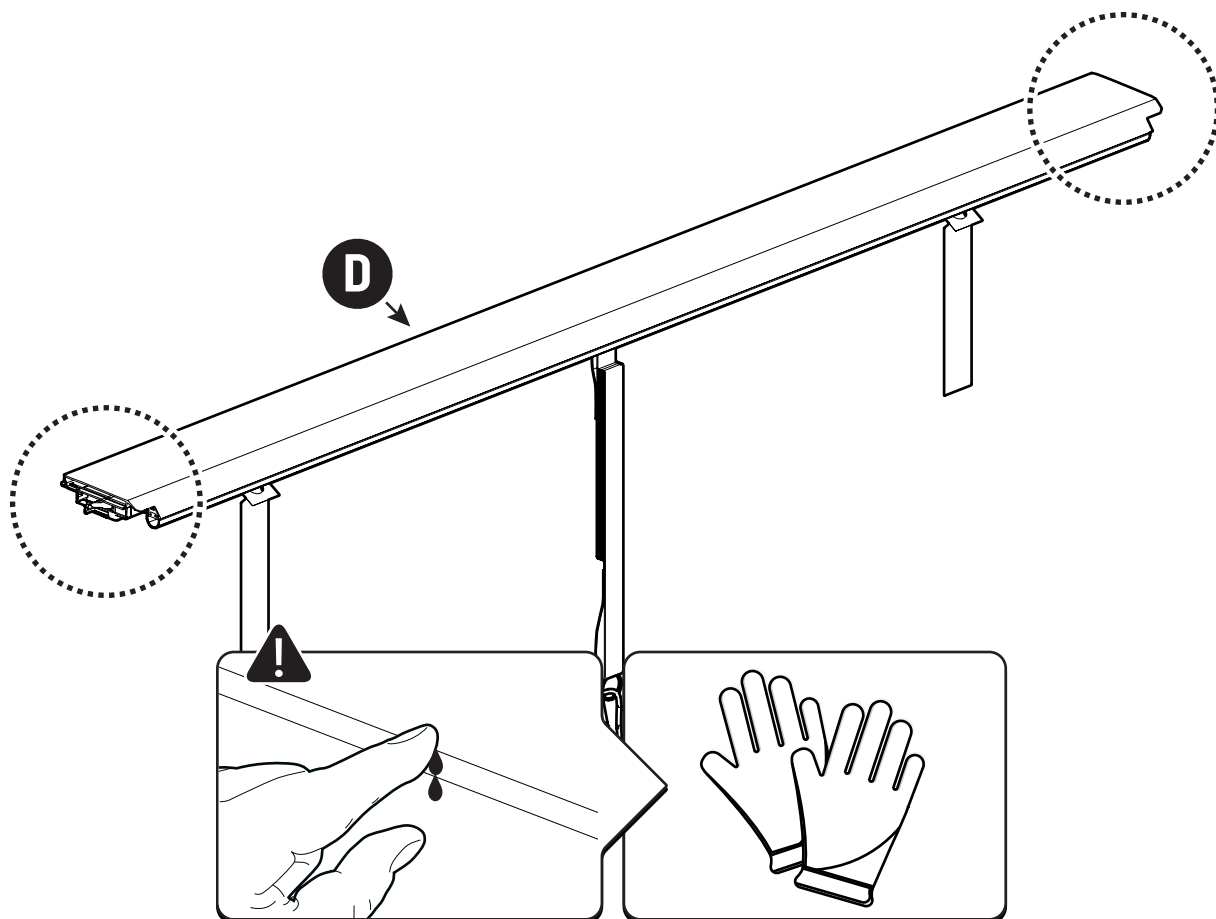


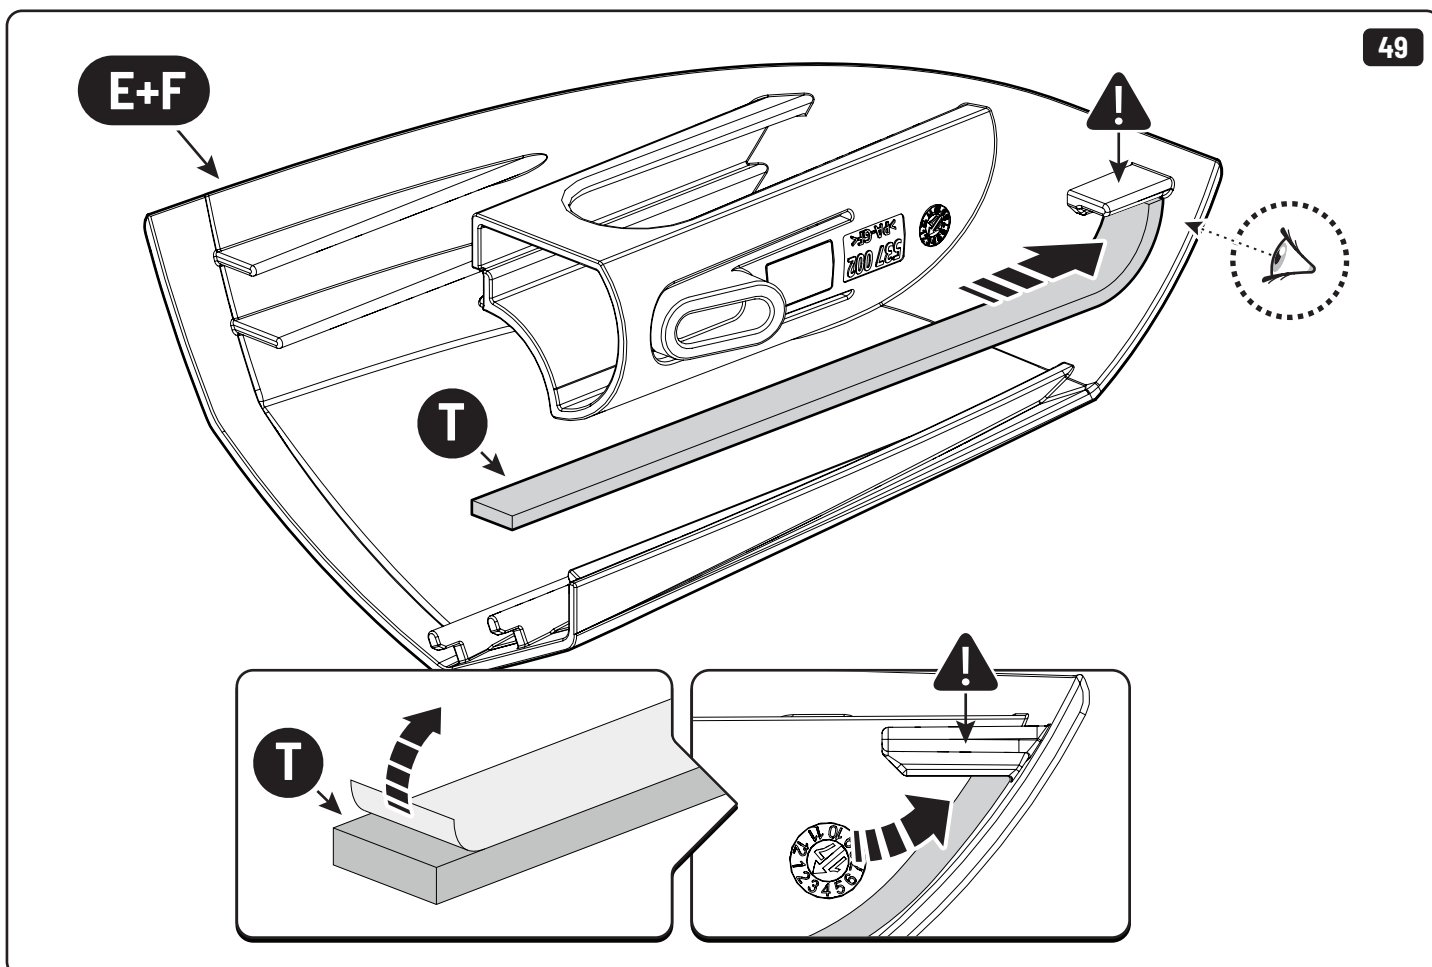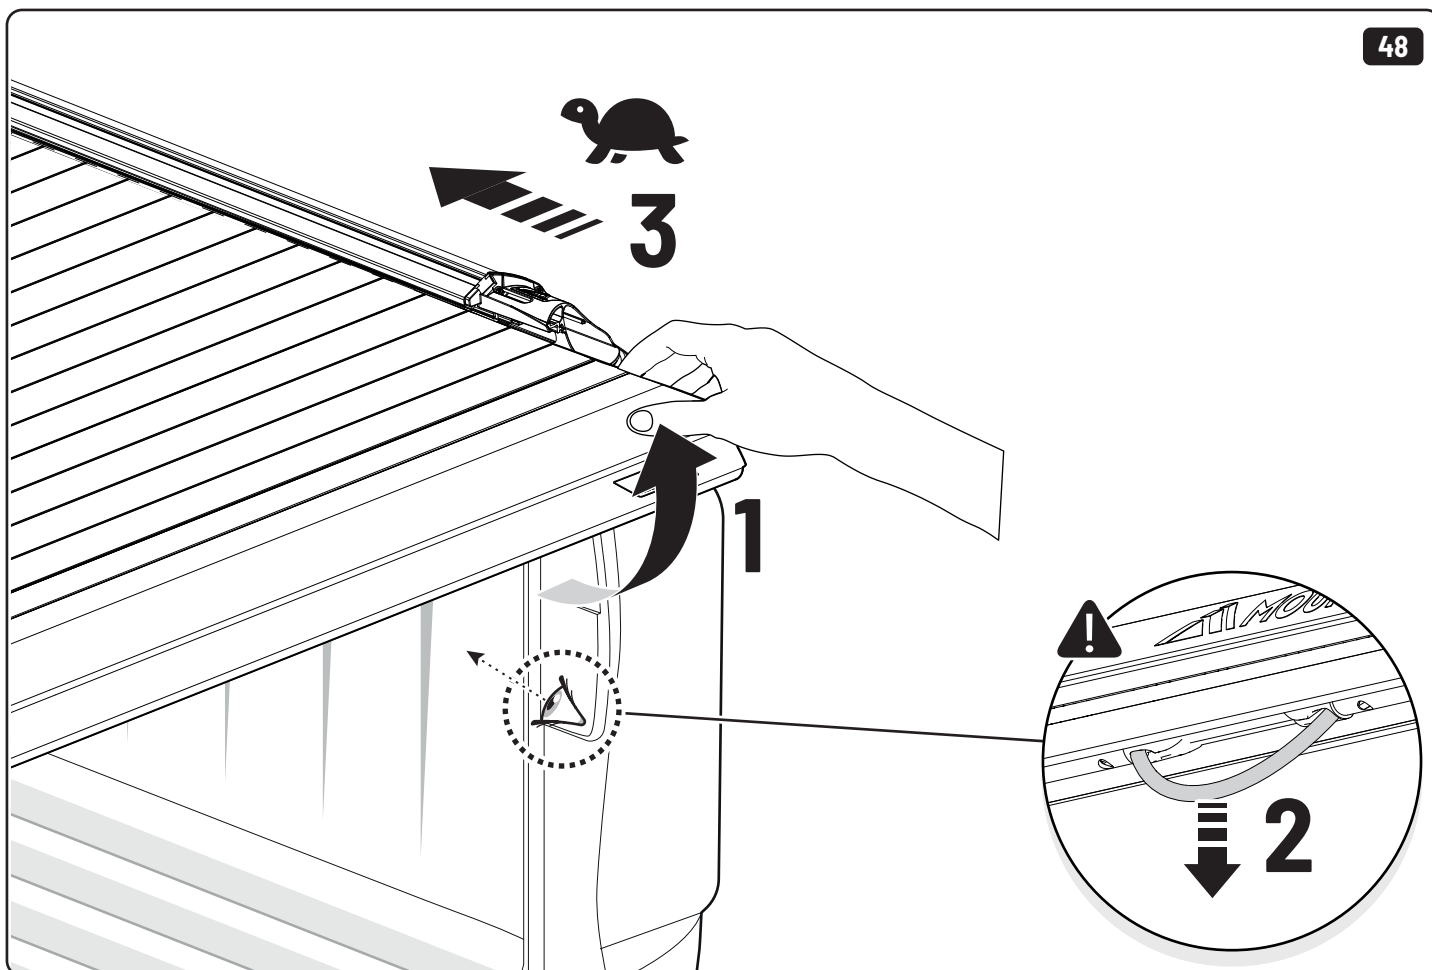


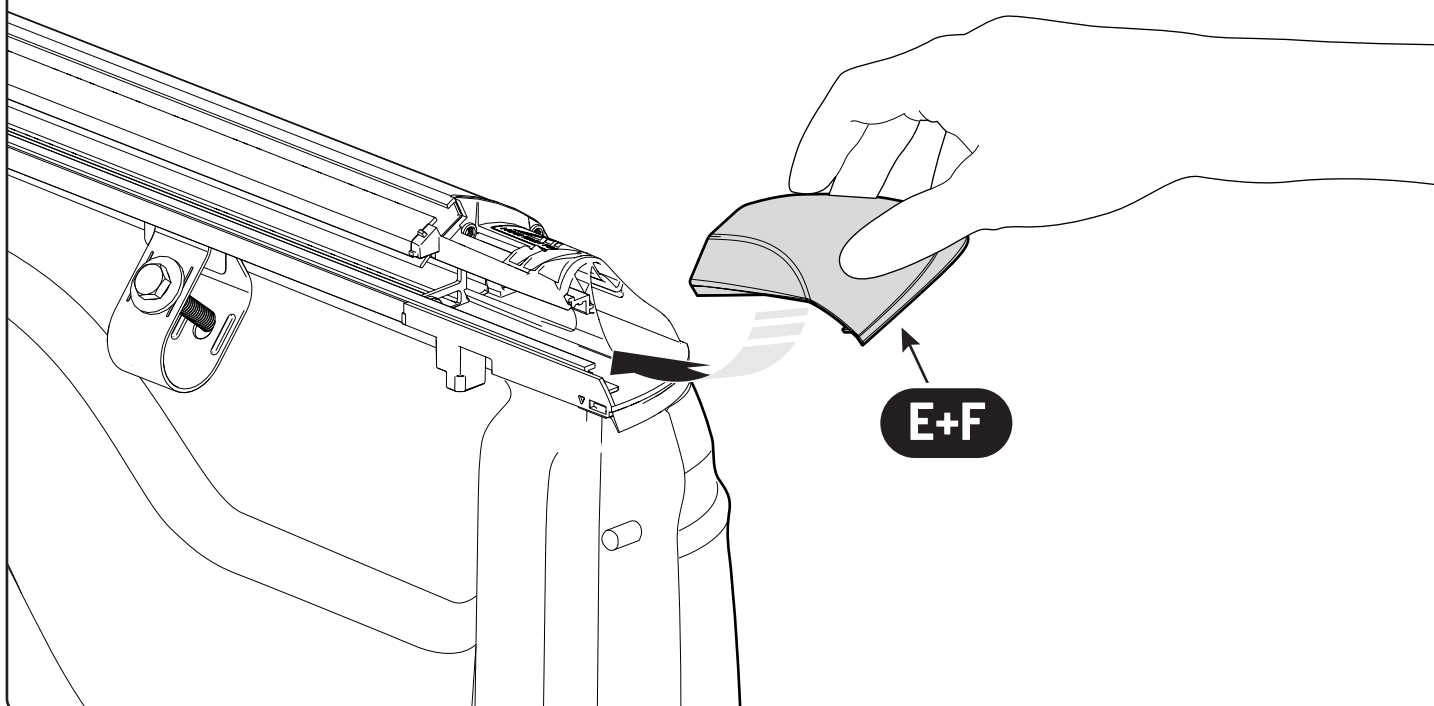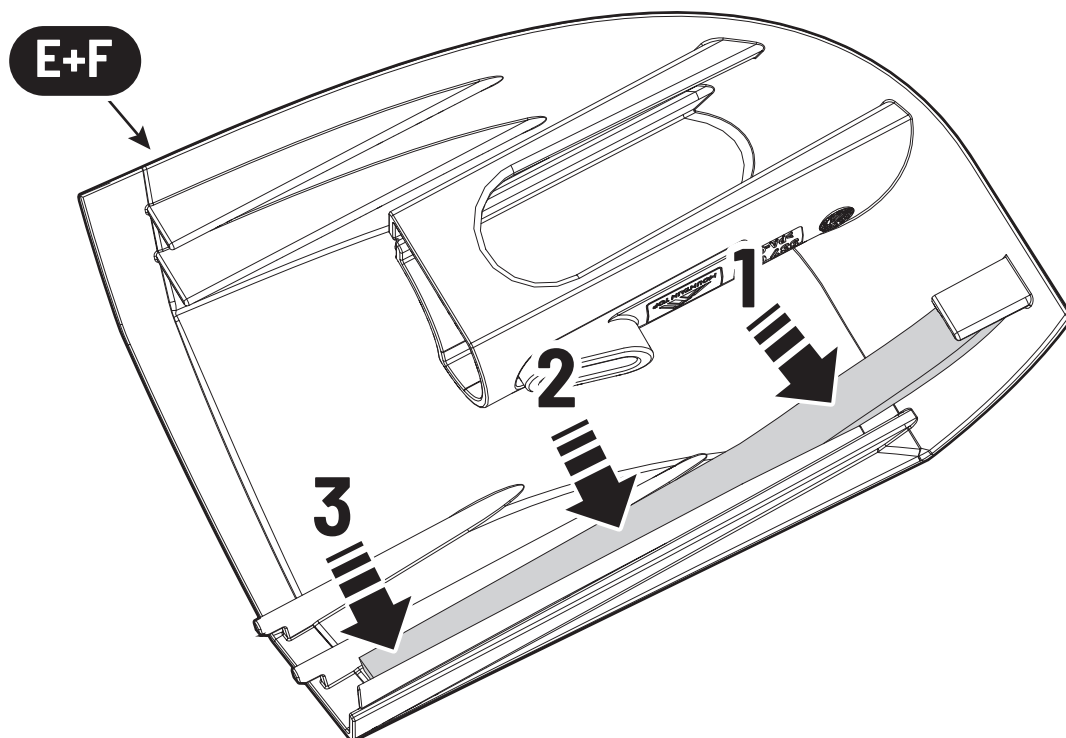

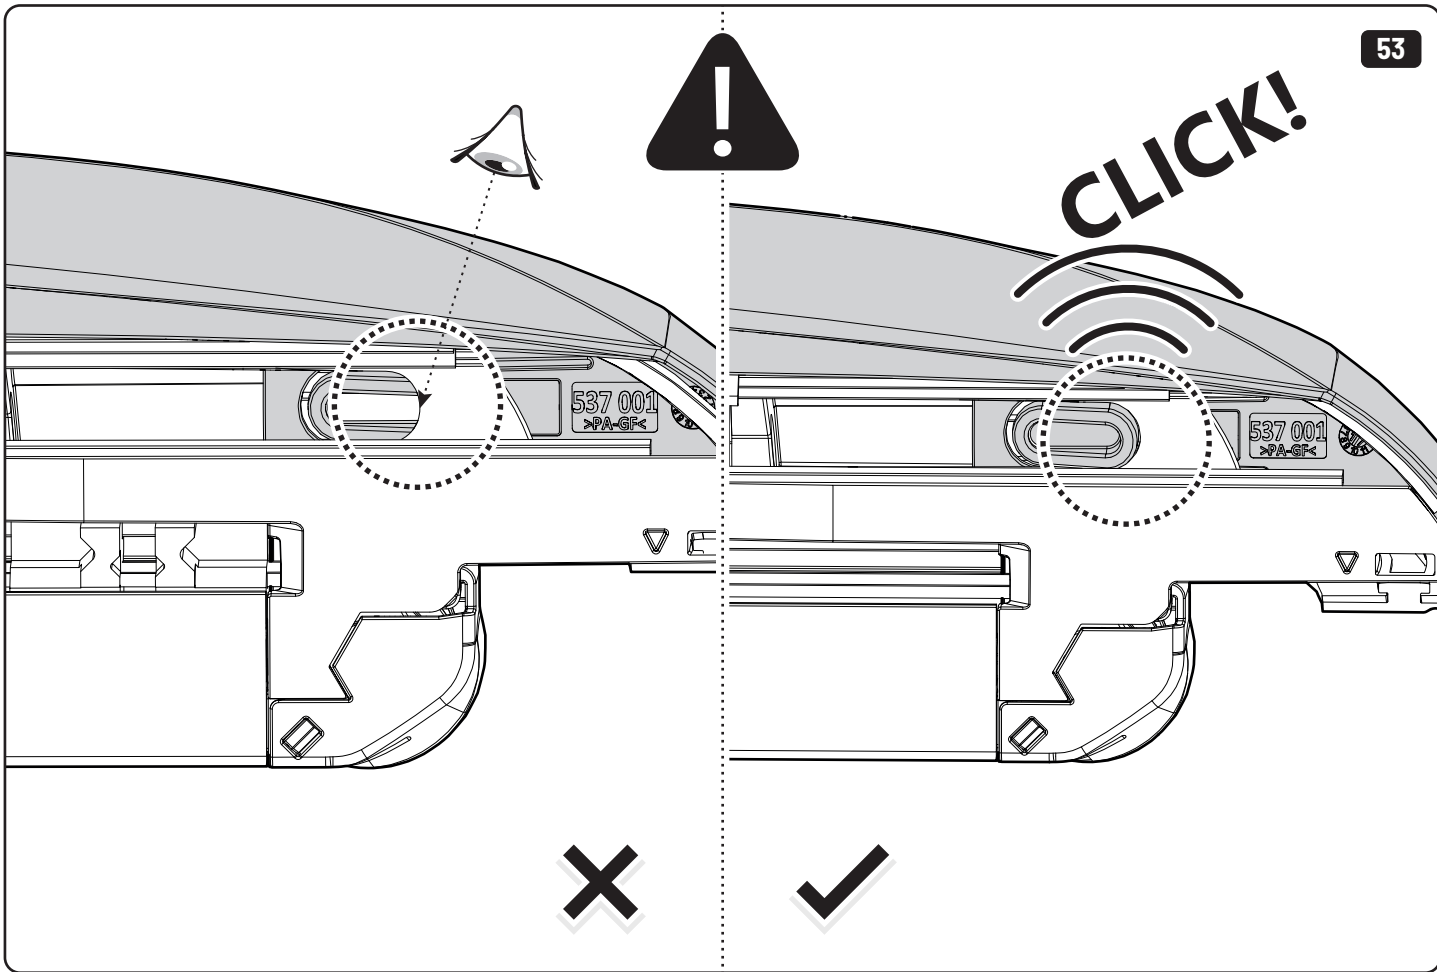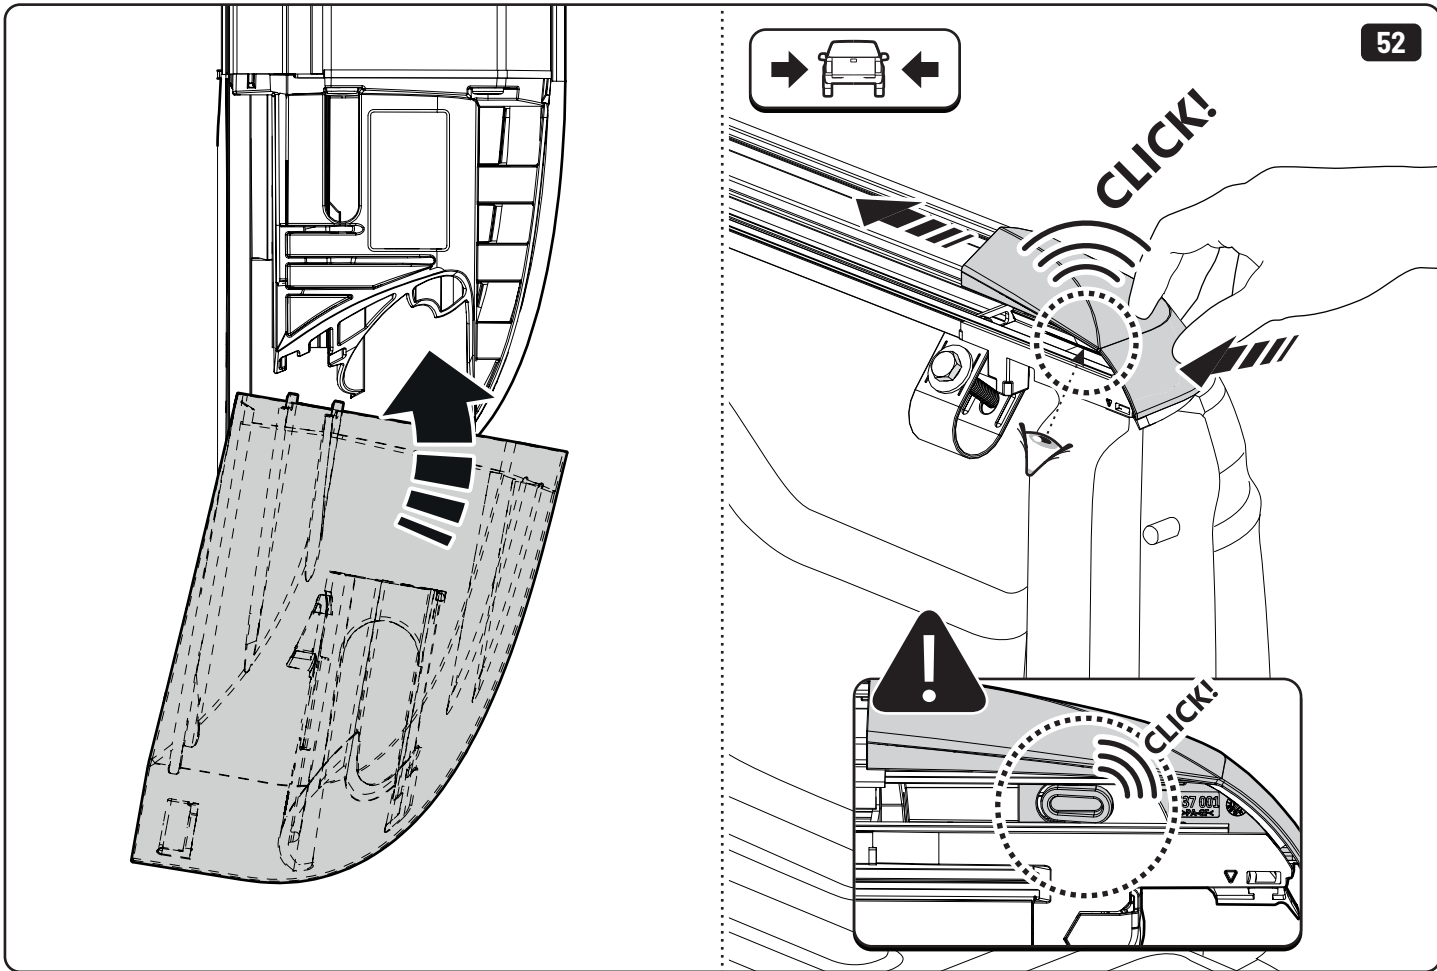

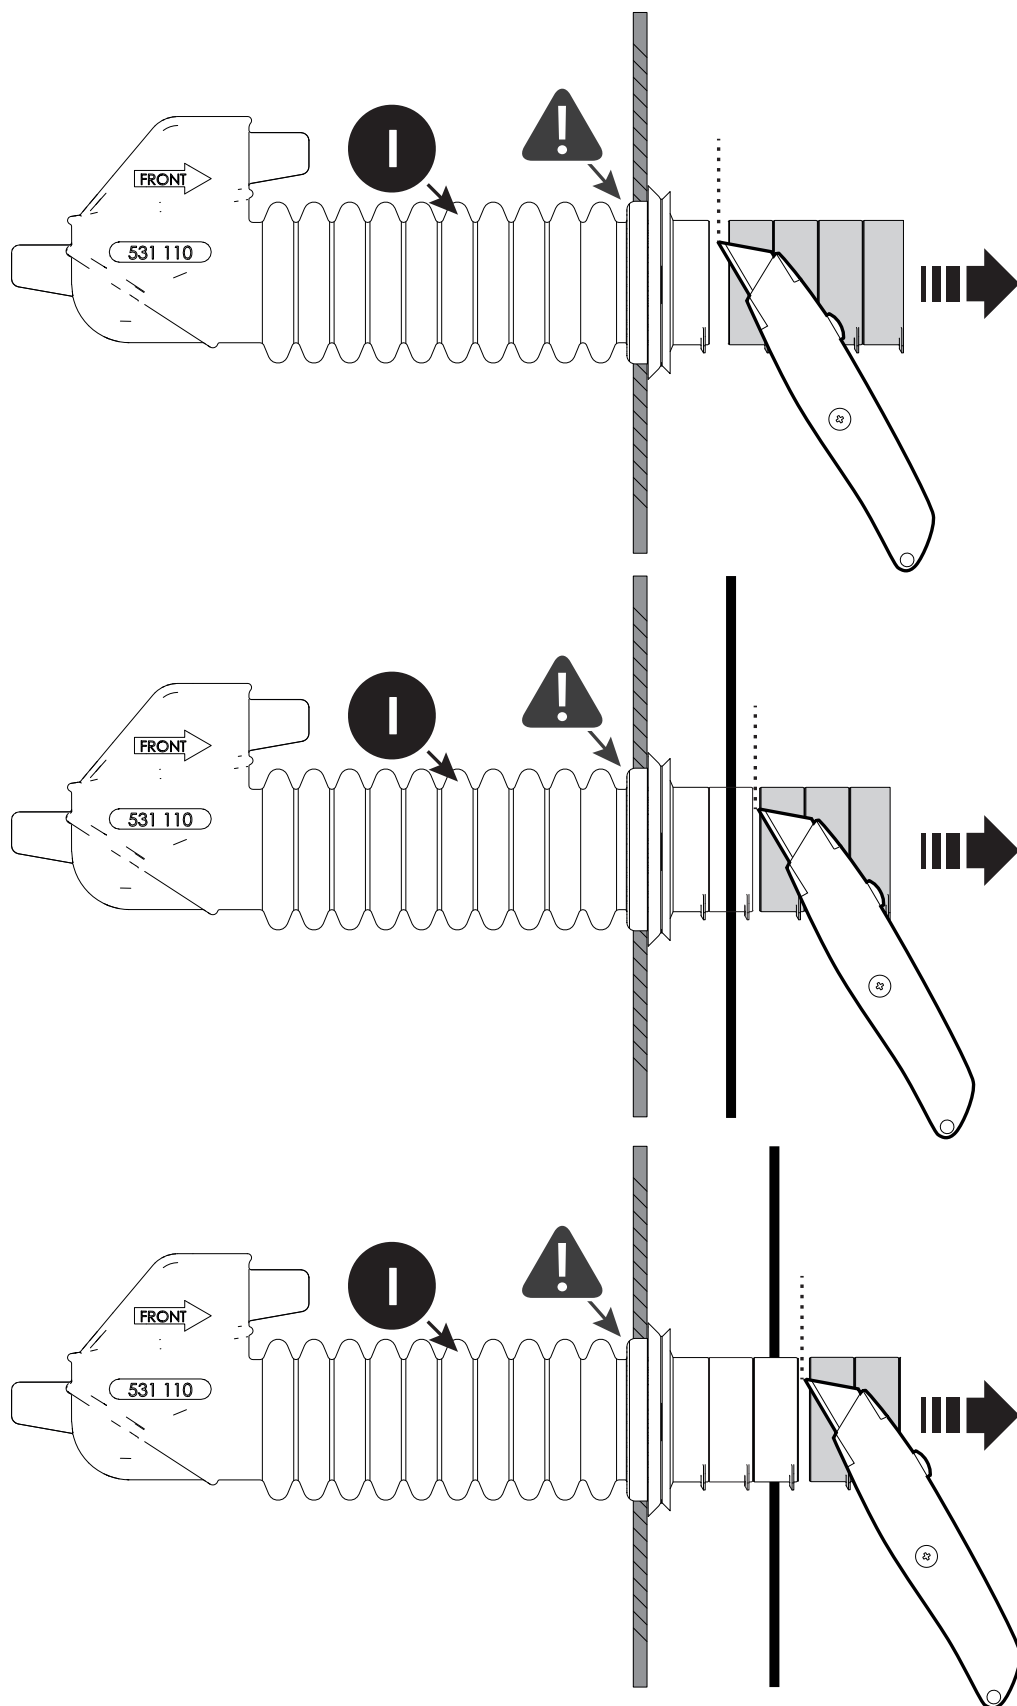

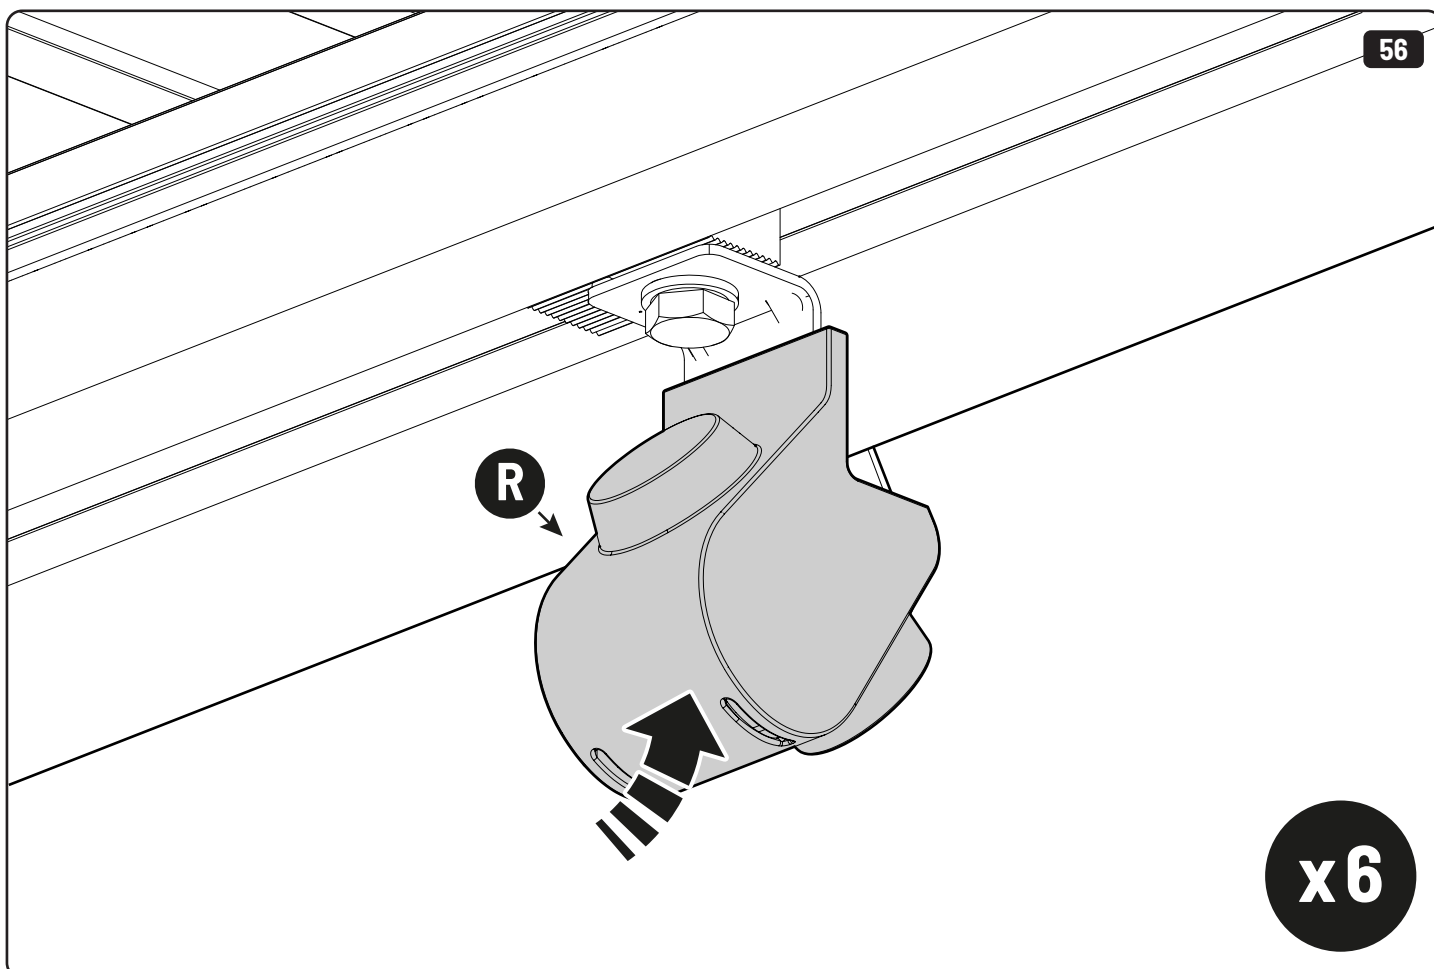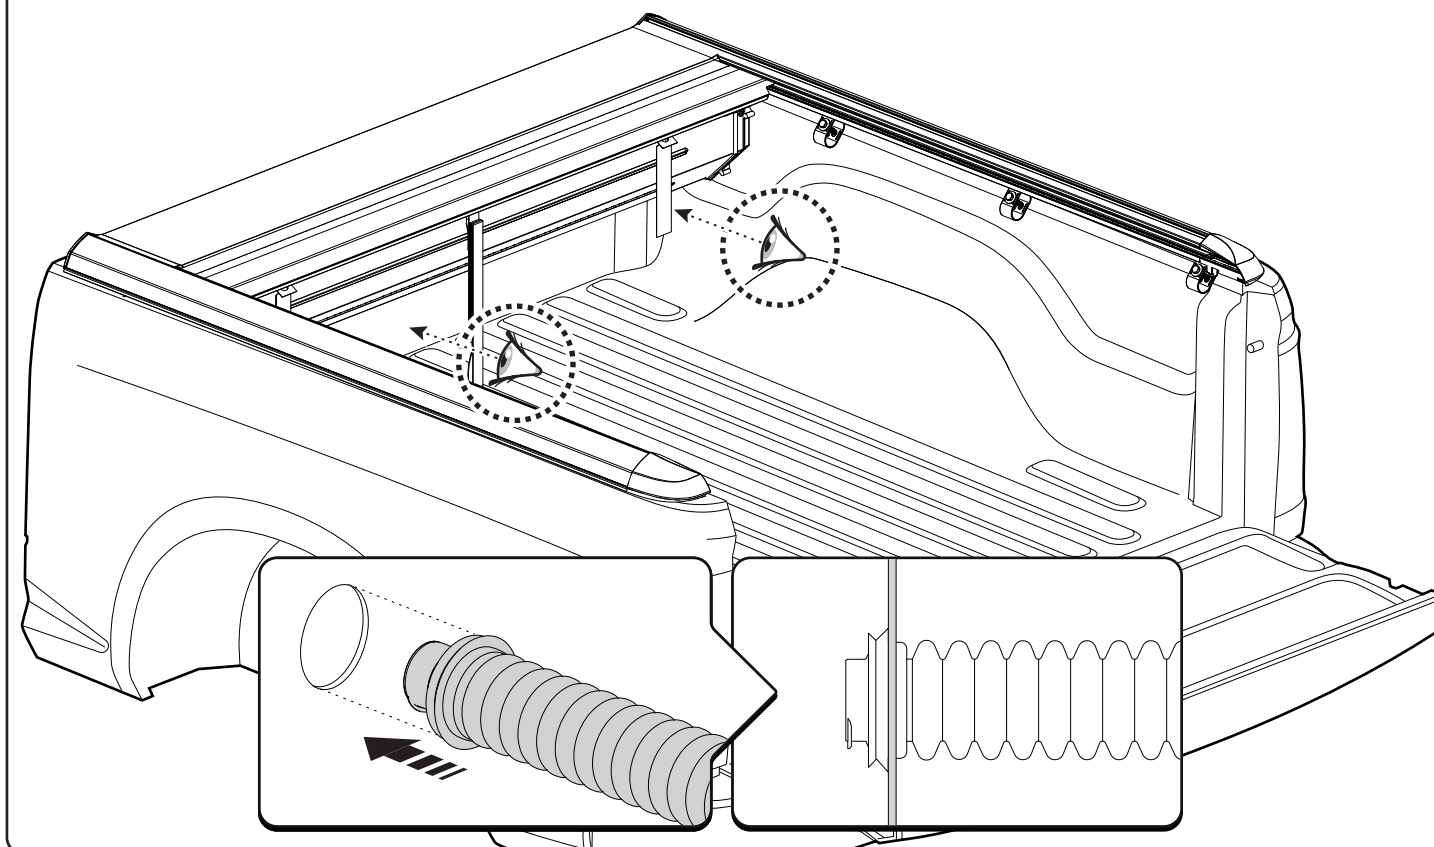

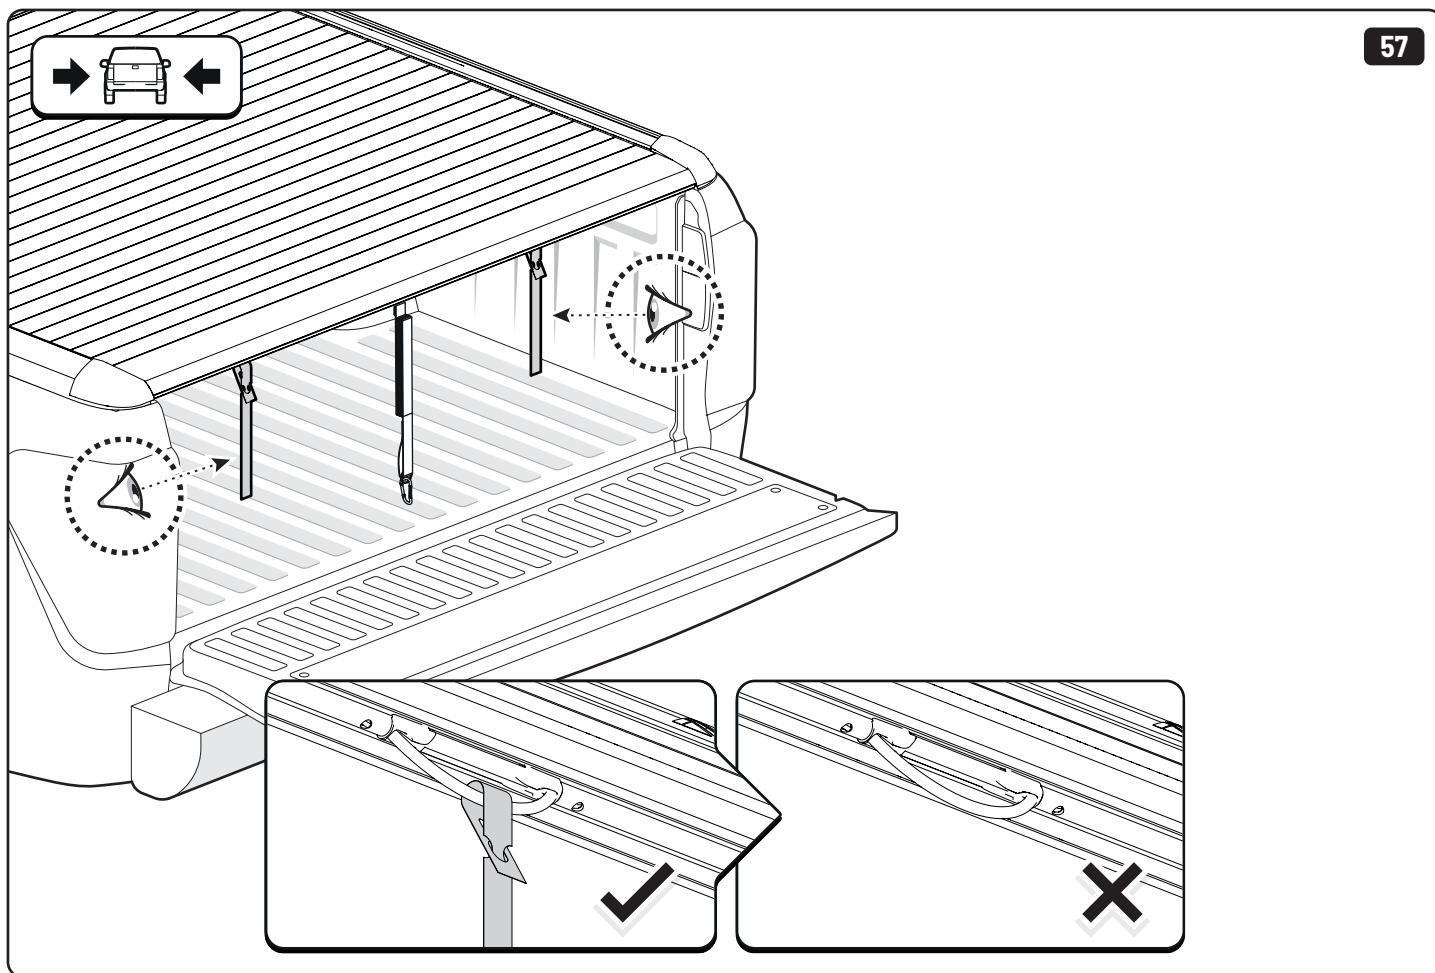



Steps	Page	Done by
Mounting gliding rail in canister	12	
Holes for drain	17-20	
Width + Cross measurement	27	
Tightening the clamp screw	28-29	
Mounting drain	36	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@realtruck.dk
Website www.realtruck.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EV0m IS10 AB01	Isuzu / 2020->	Double Cab	1 hour (s)	29 kg
EV0m IS11 AB01	Isuzu / 2020->	Extra Cab	1 hour (s)	33 kg
EV0m F090 AB01	Ranger / 2011->	Double Cab	1 hour (s)	29 kg
EV0m F091 AB01	Ranger / 2011->	Extra Cab	1 hour (s)	33 kg
EV0m MX20 AB01	Maxus / 2022->	Crew Cab	1 hour (s)	29 kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni di montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare