




QwikRak Installation Guide







Chevrolet Silverado / GMC Sierra

2014 - 2018

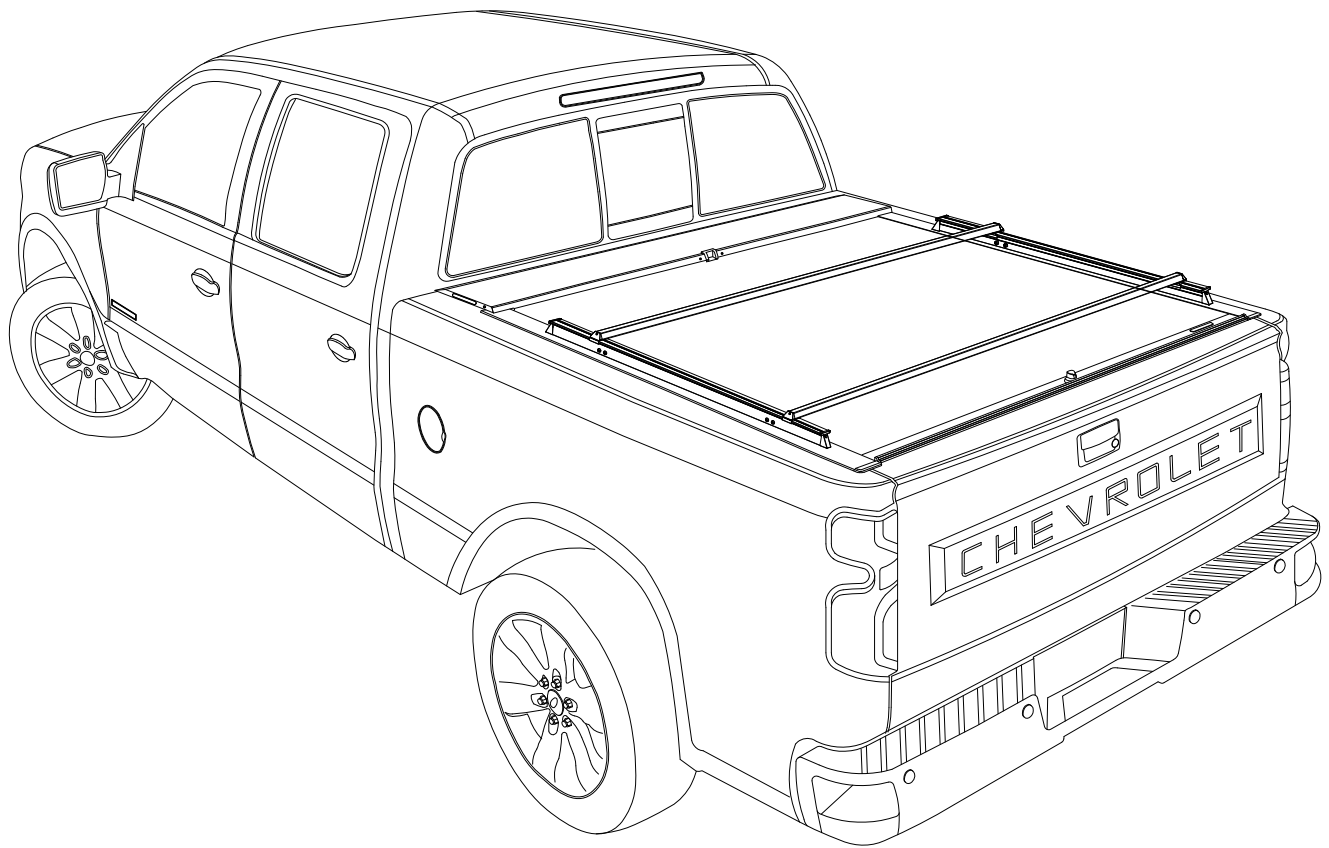

Product Code
QR220 - QR221

Item	Part Name	Qty.	Item	Part Name	Qty.	Item	Part Name	Qty.
A	Qwikrak Track	2	E	1/4" Lock Washer	2	I	#10-24 X 3/8" Screw	2
B	Cross Bar	2	F	1/4"-28 x 1/2" Socket Cap Screw	2	J	Cargo Nut	2
C	5/16" x 1 1/4" Socket Cap Screw	6	G	5/16" x 3/4" Socket Cap Screw	4	K	1/4" Allen Wrench	1
D	5/16" Lock Washer	6	H	5/16" Nylon Lock Nut	4	L	3/16" Allen Wrench	1

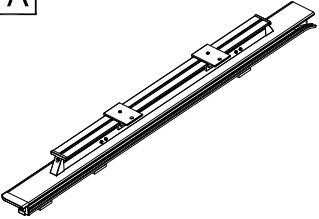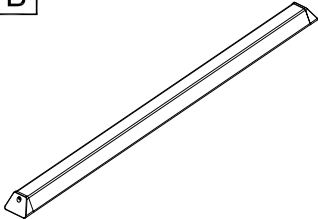A 	B 	C 	D 	E 	F 
G 	H 	I 	J 	K  1/4"	L  3/16"


Tools Needed


P2


25'



1/2"

1 LHS = RHS

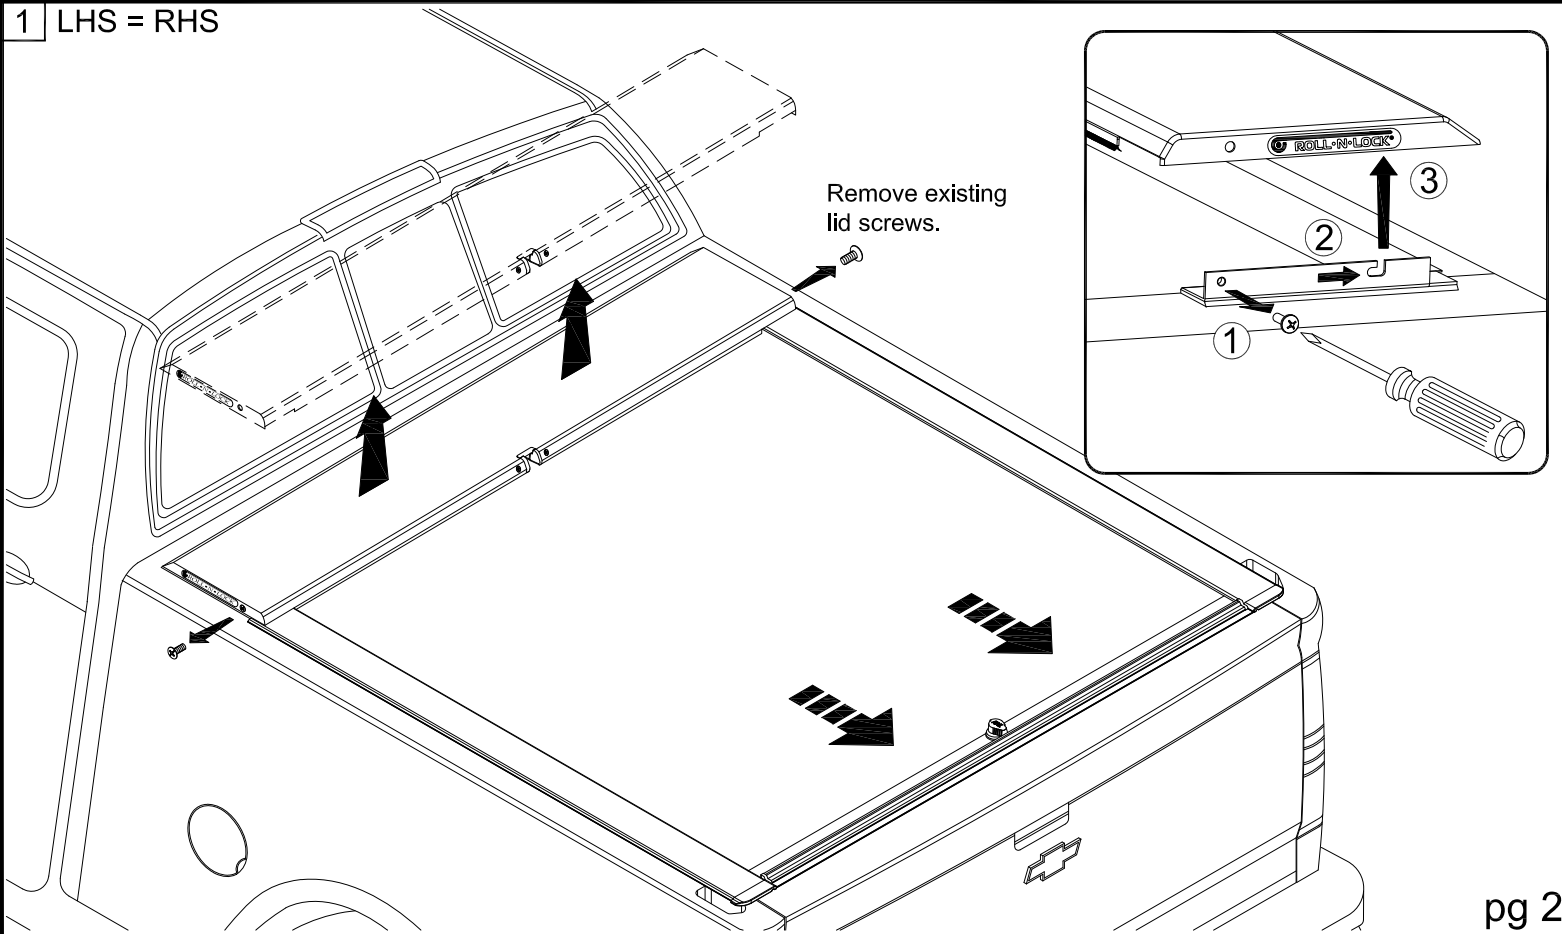



2 LHS = RHS

Place a buffer between the housing and cover to prevent the cover from rolling back.

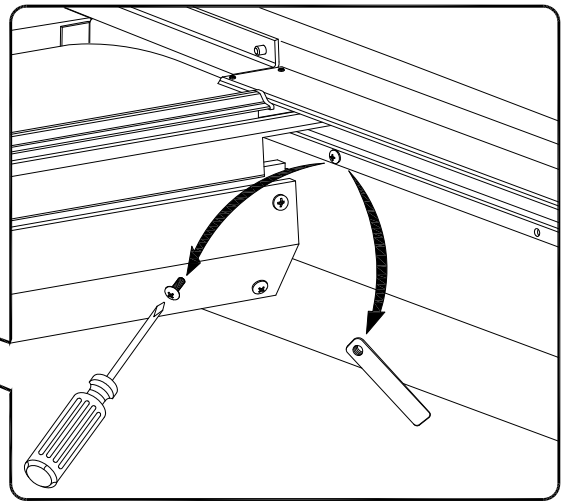


3 LHS = RHS

Remove existing clamps.

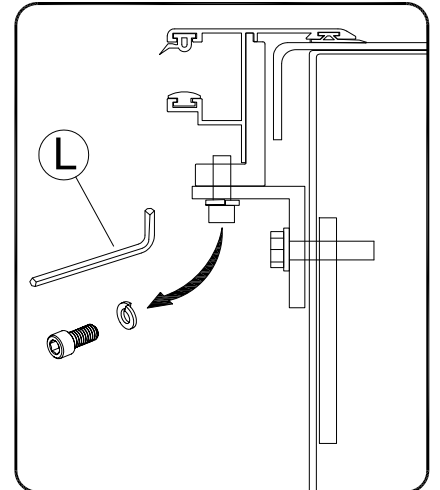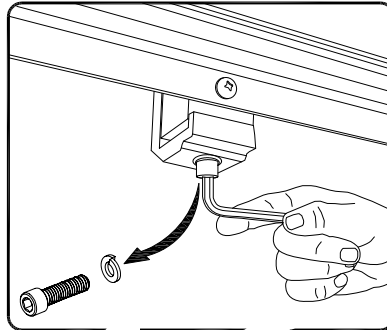


4 LHS = RHS

Remove existing tracks.

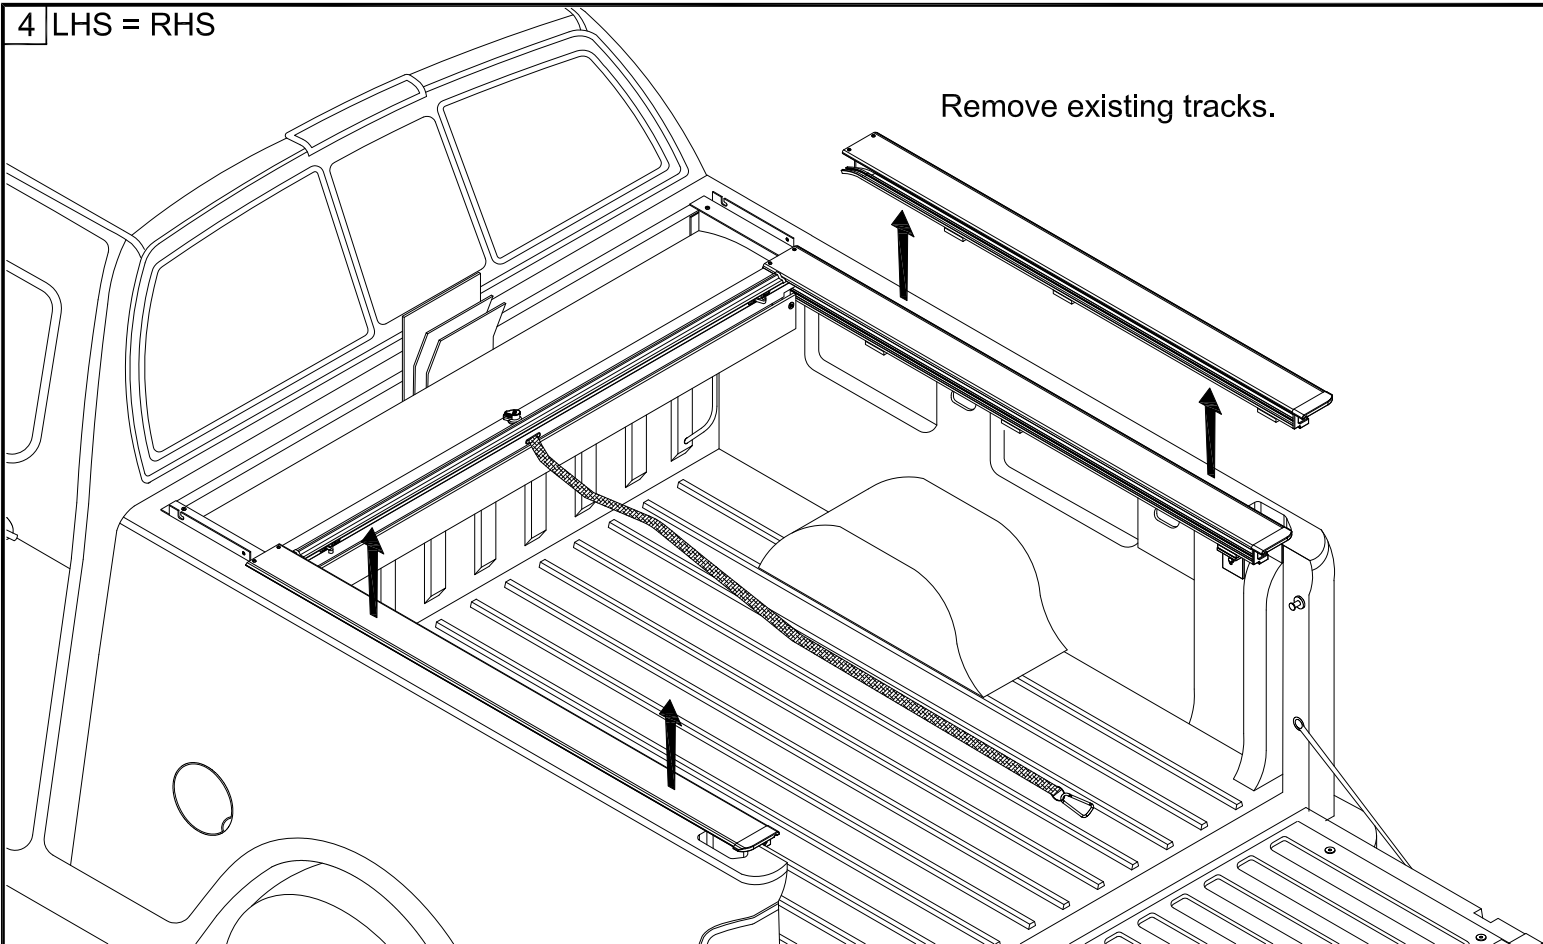



5 LHS = RHS

Replace with Qwikrak tracks.

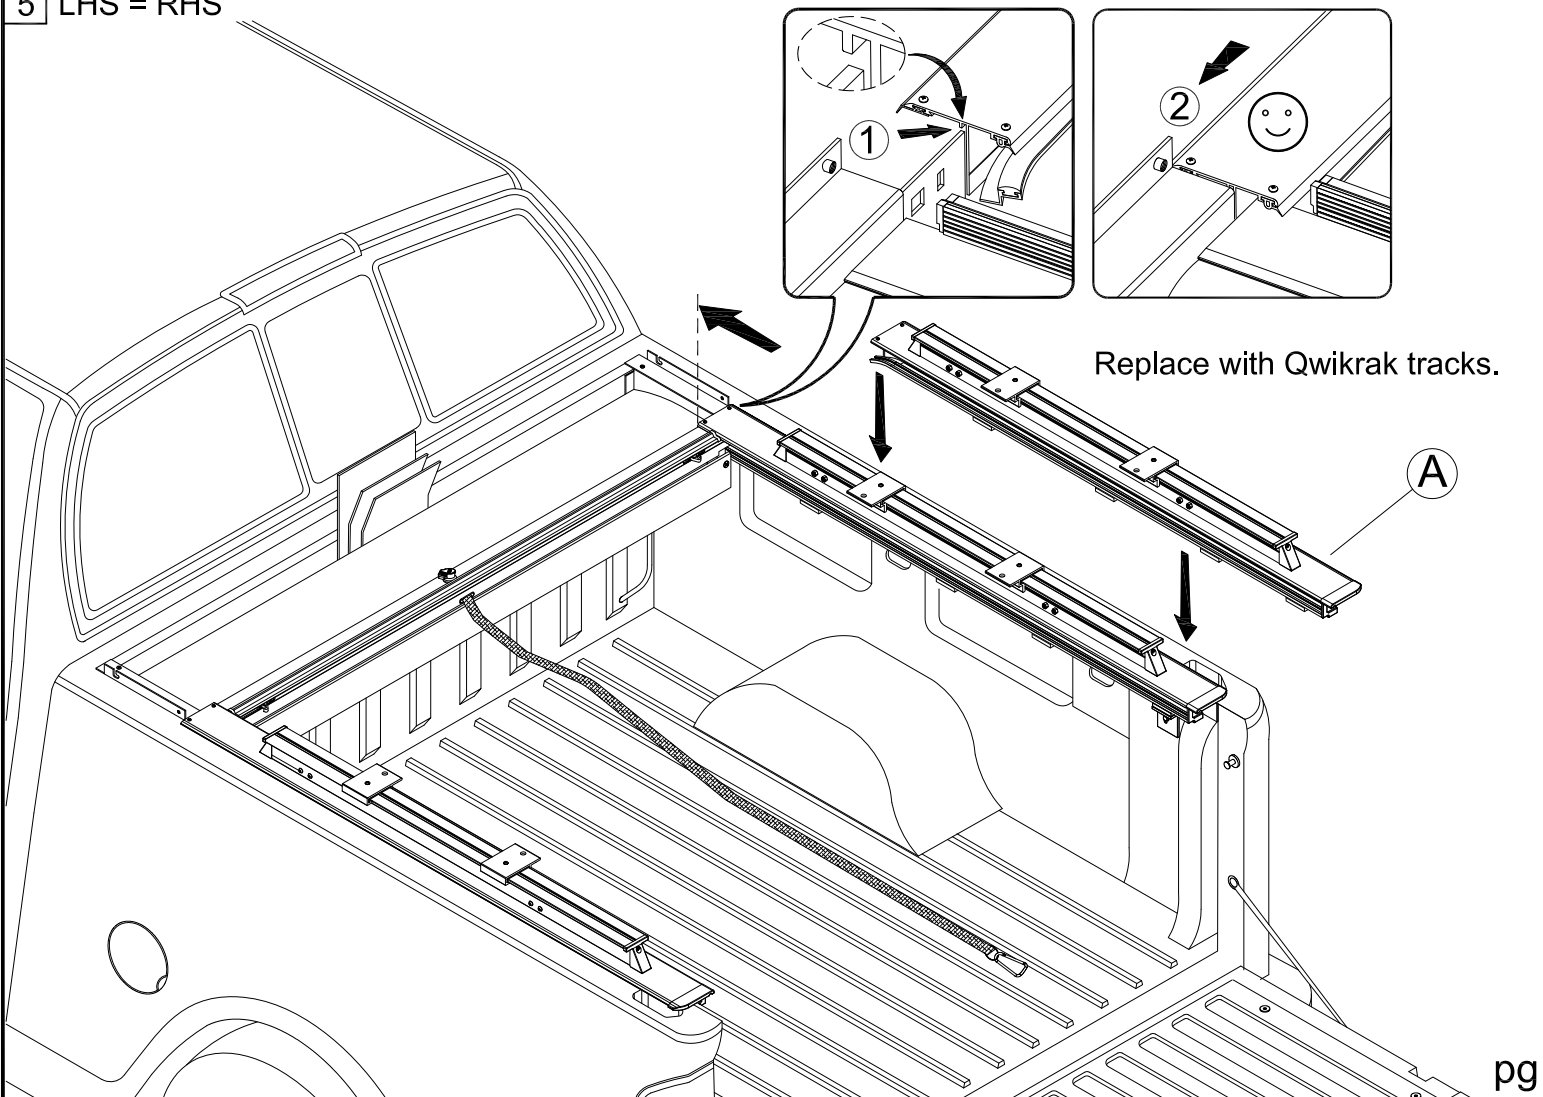


6 LHS = RHS


Use new hardware.

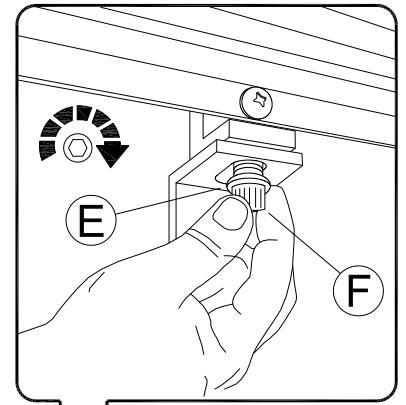
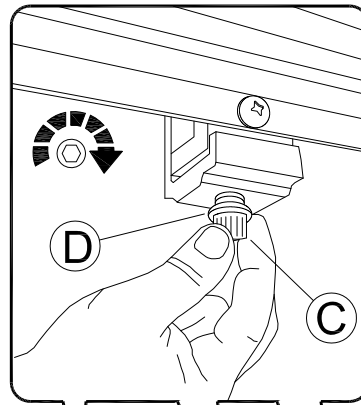


Use existing clamps.

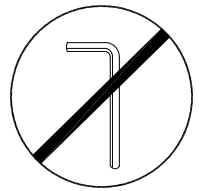



7 LHS = RHS

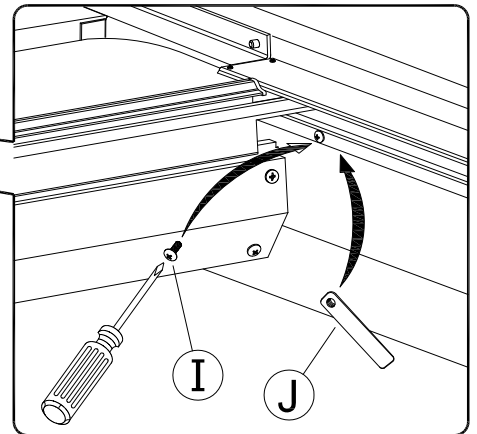

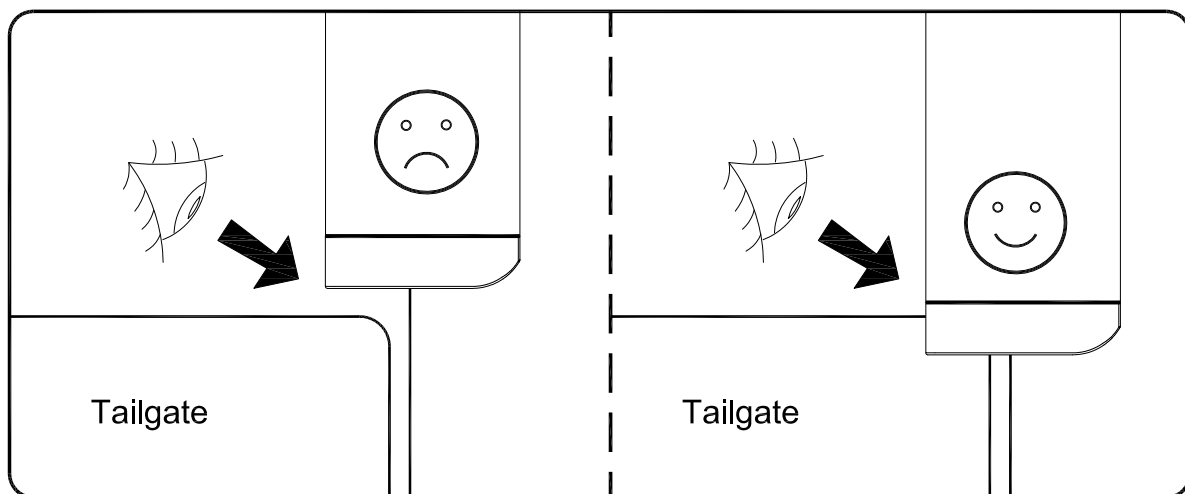
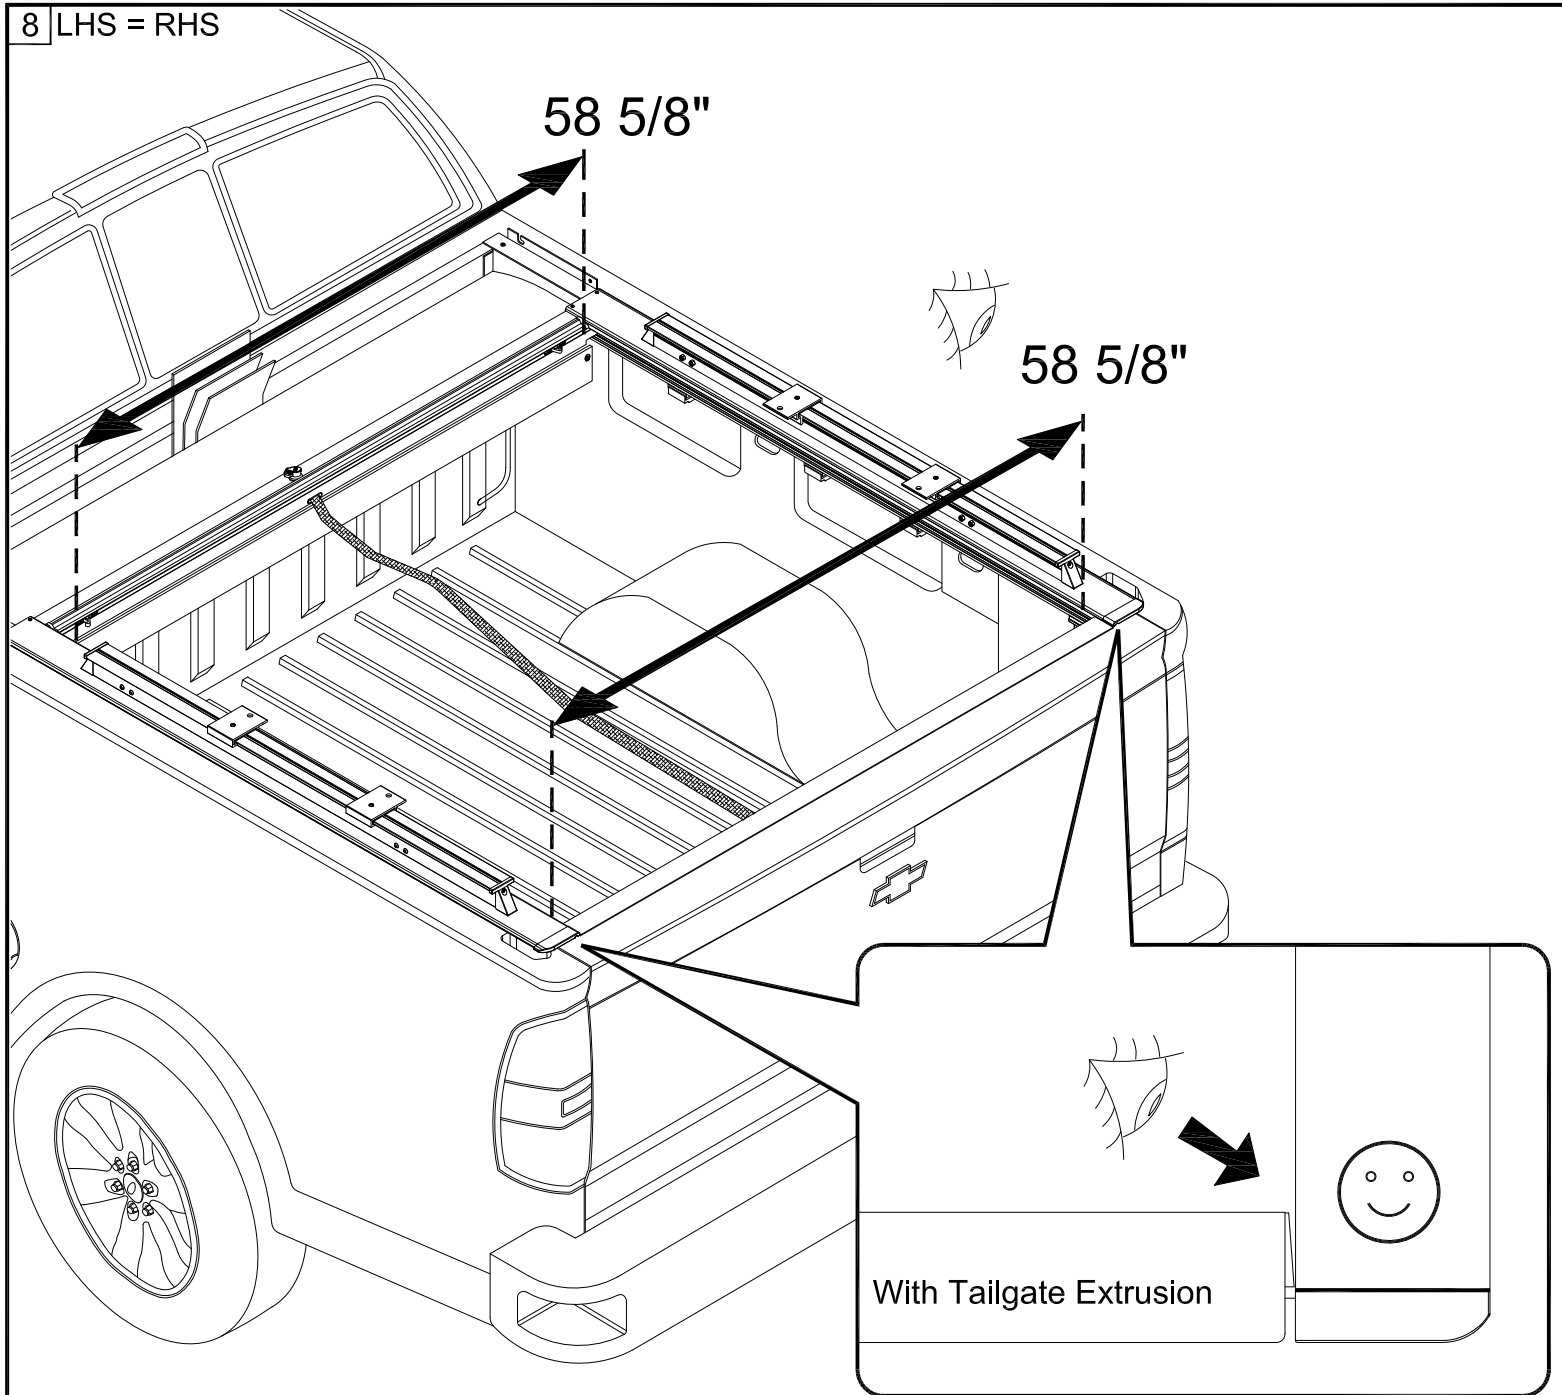


Without Tailgate Extension


9 LHS = RHS

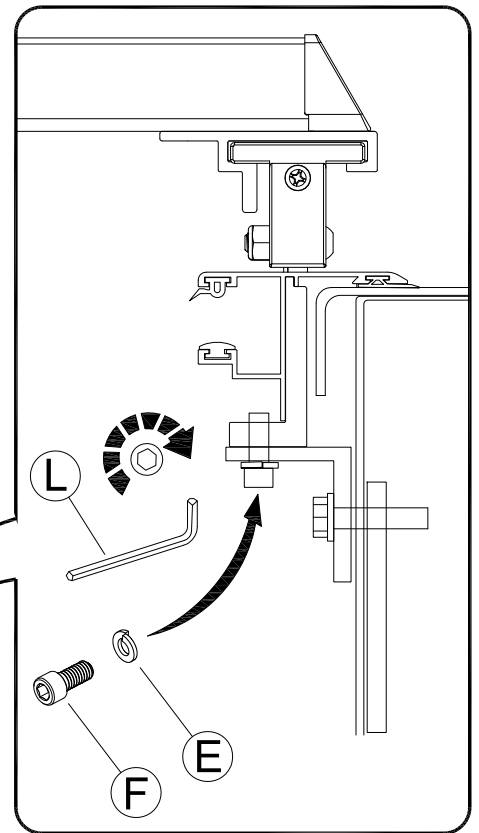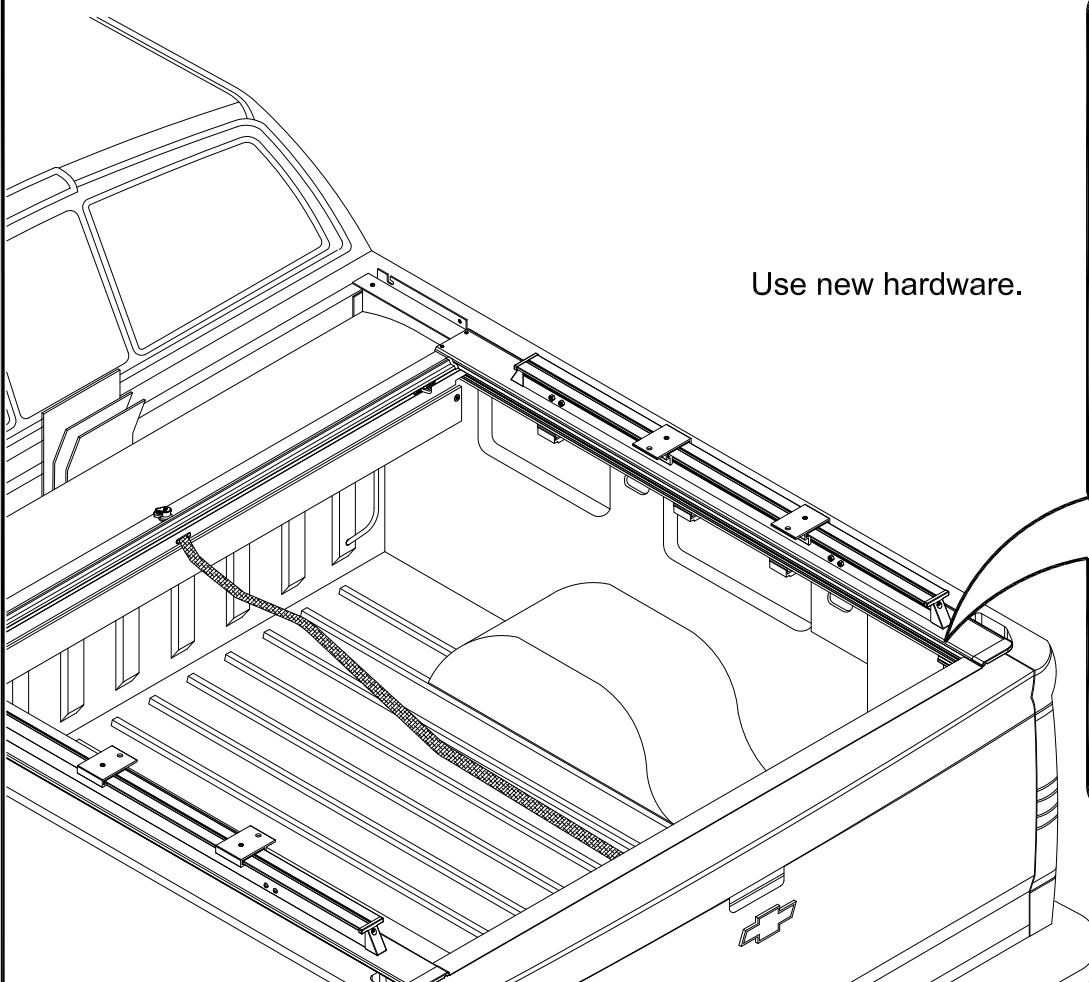


10 LHS = RHS

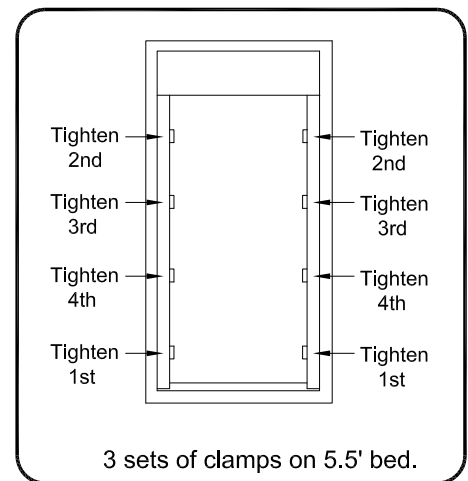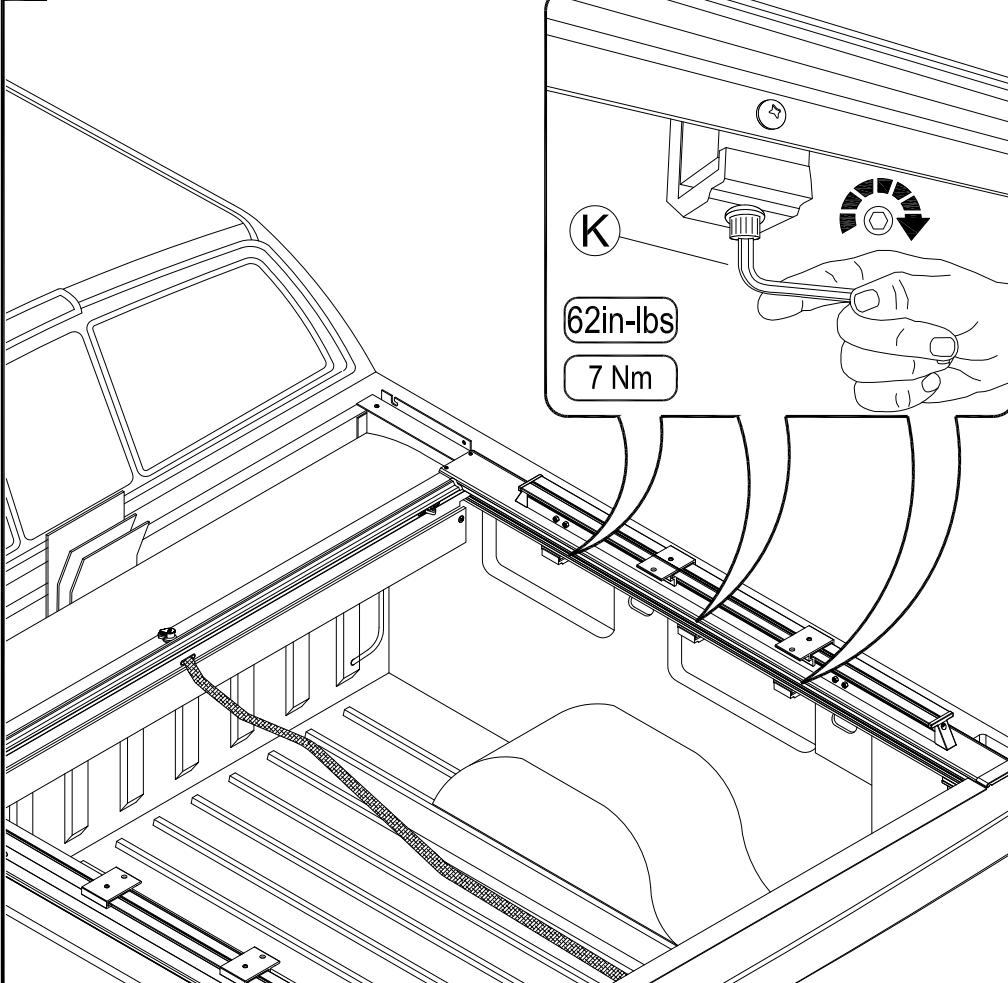


11

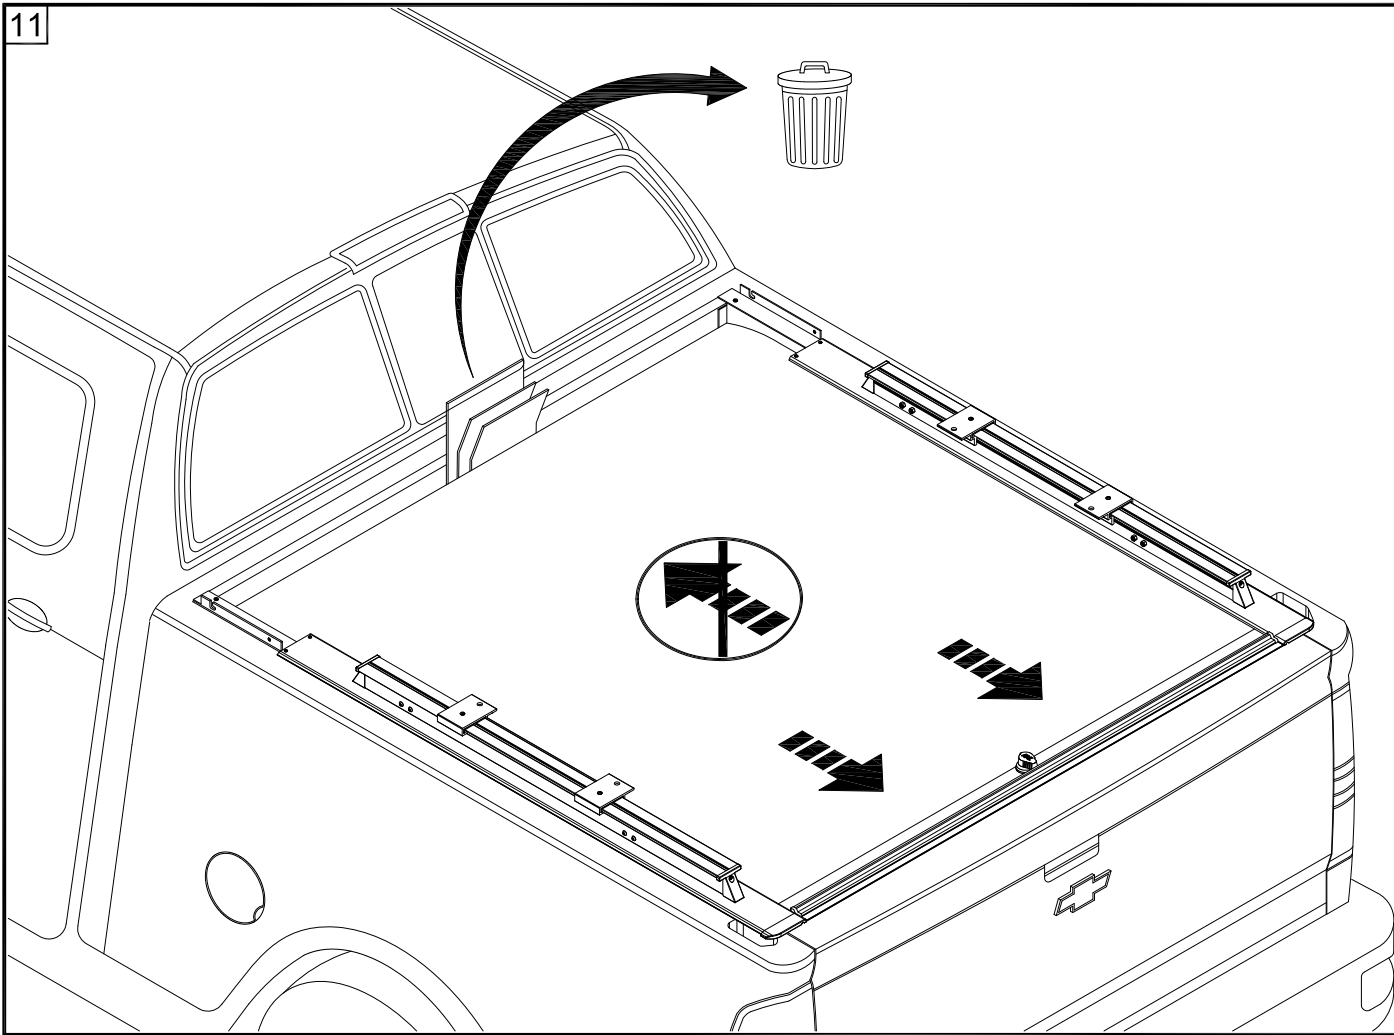


12 LHS = RHS

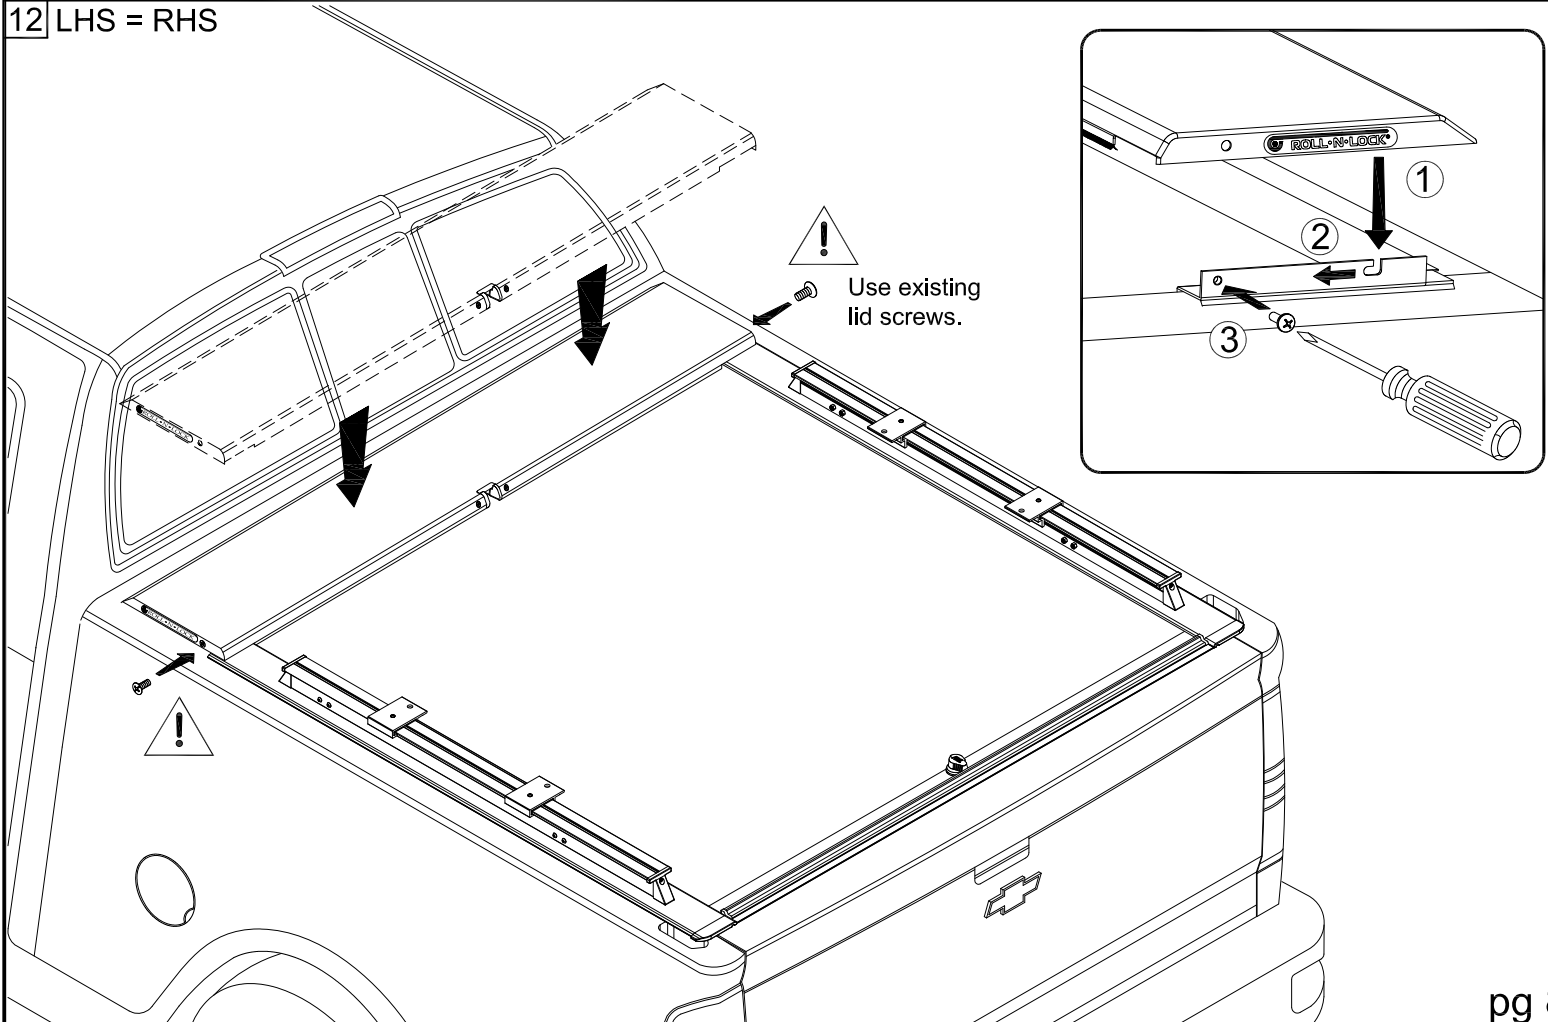


13

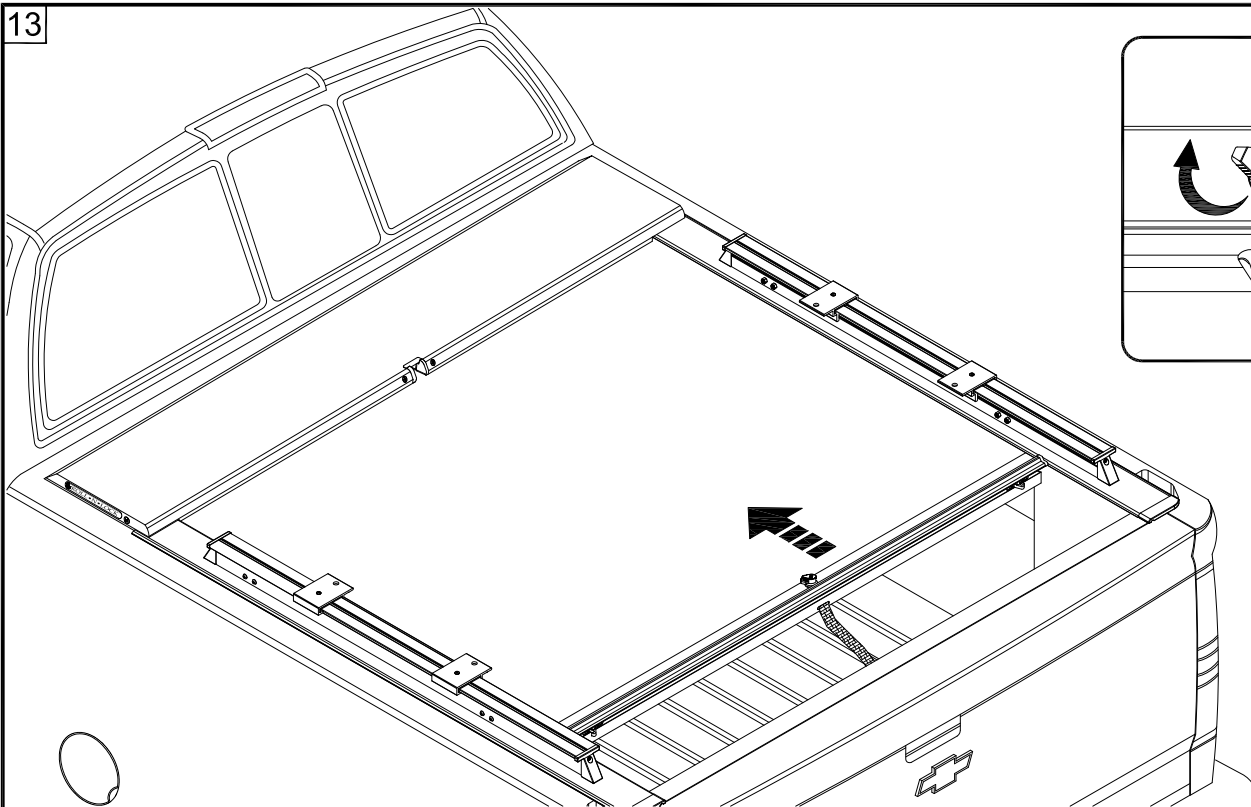

14 LHS = RHS

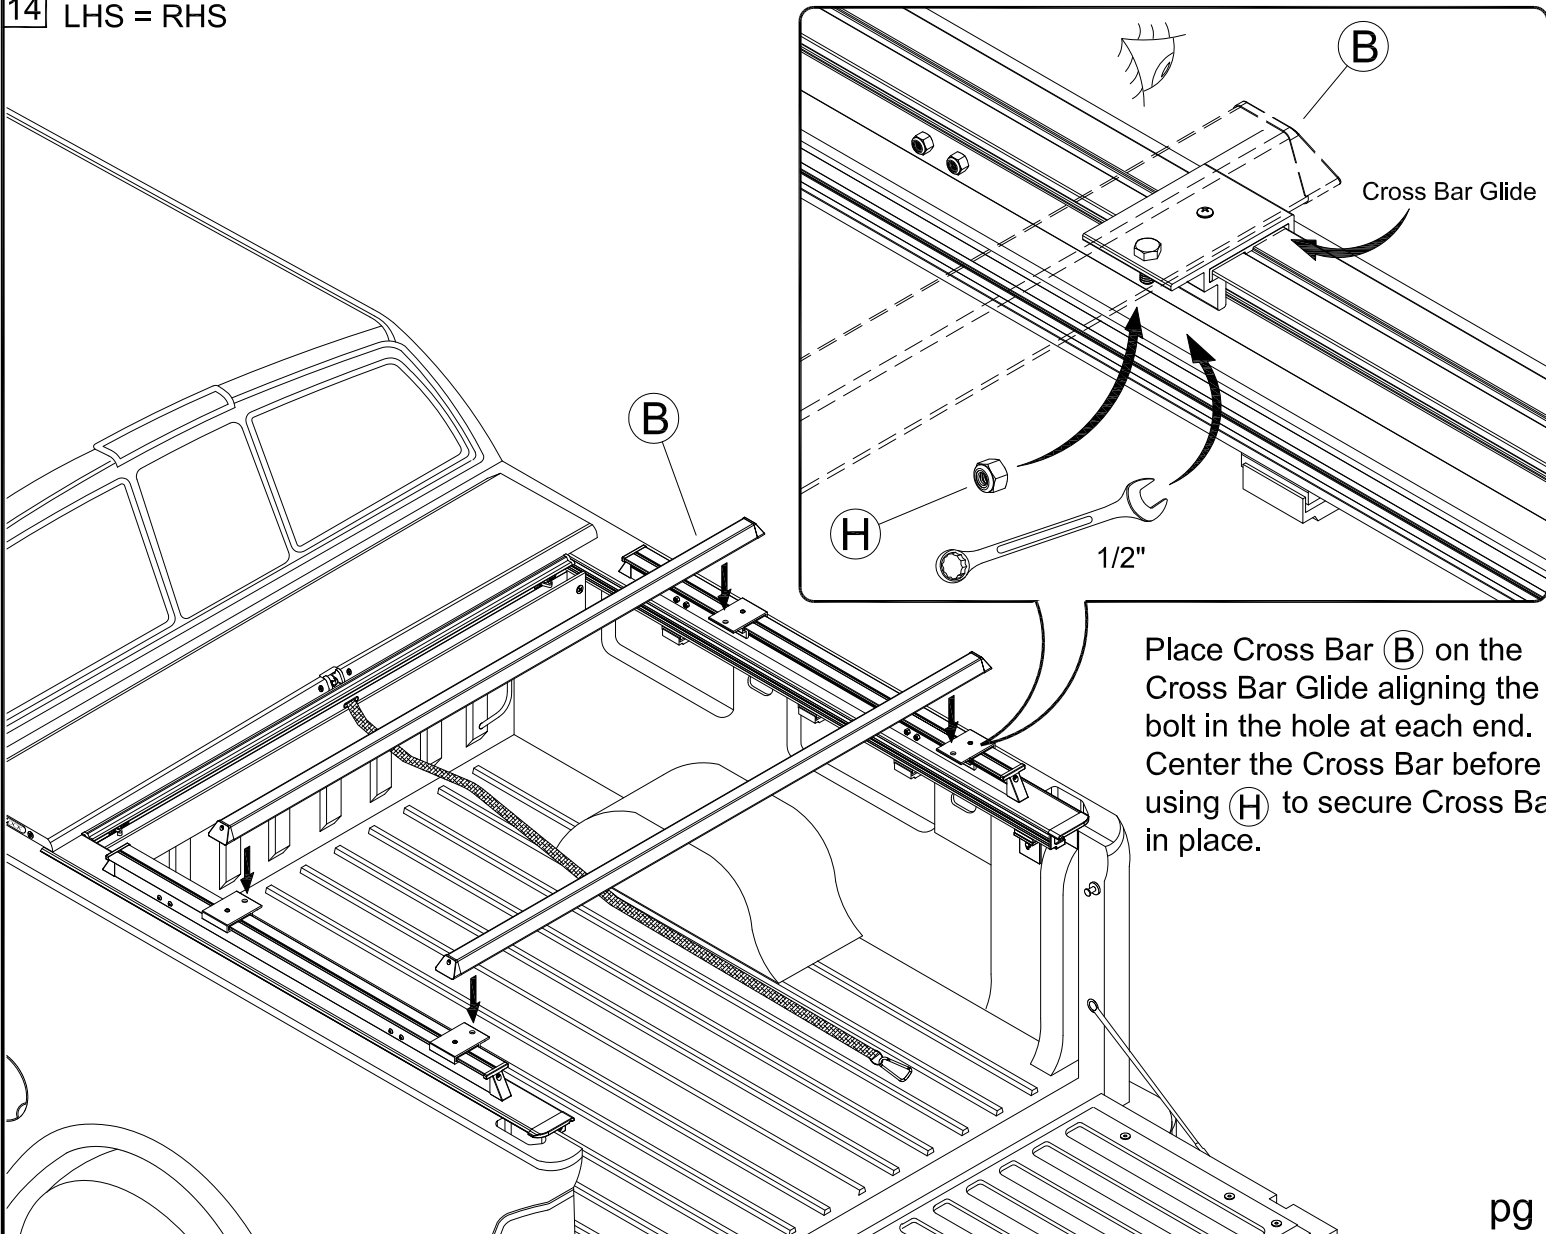

Once a desired location for the Cross Bar has been determined use (G) to thread through the hole in the Cross Bar Glide. Use supplied (K) to secure Cross Bars in place.

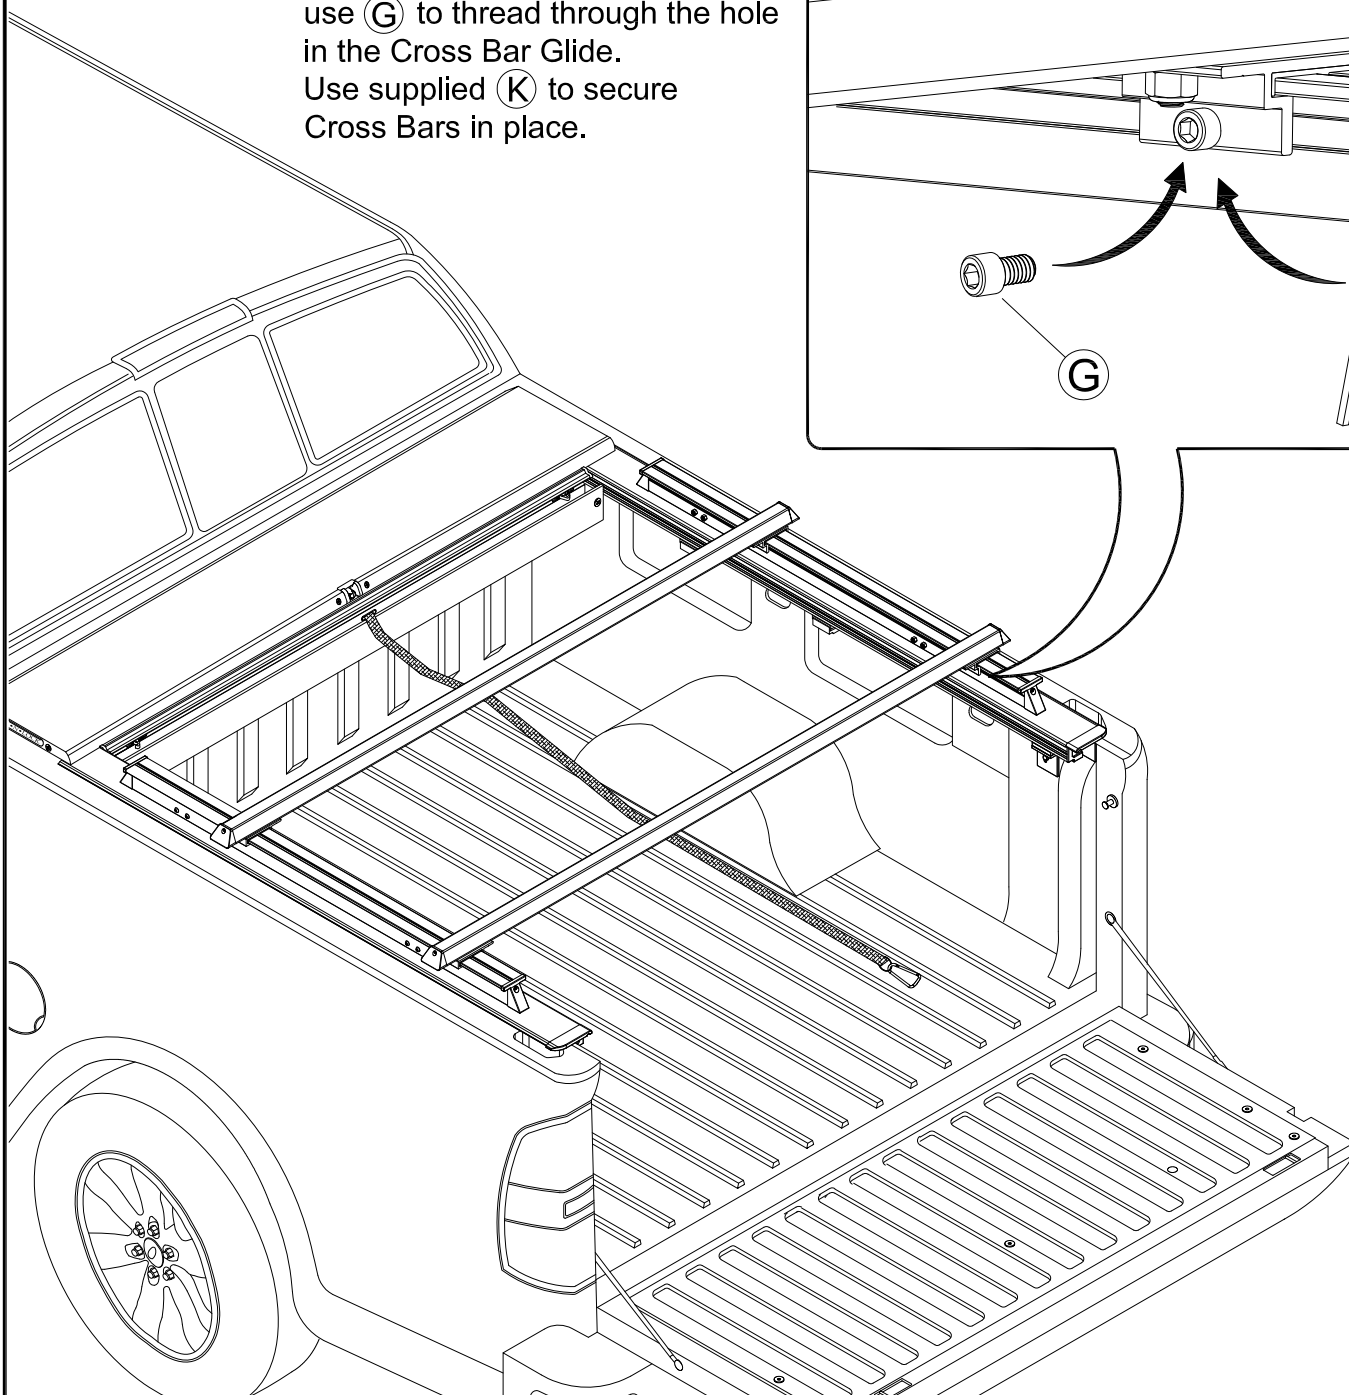

Any questions please call Customer Service at 800-952-7655
or email customerservice@rollnlock.com