
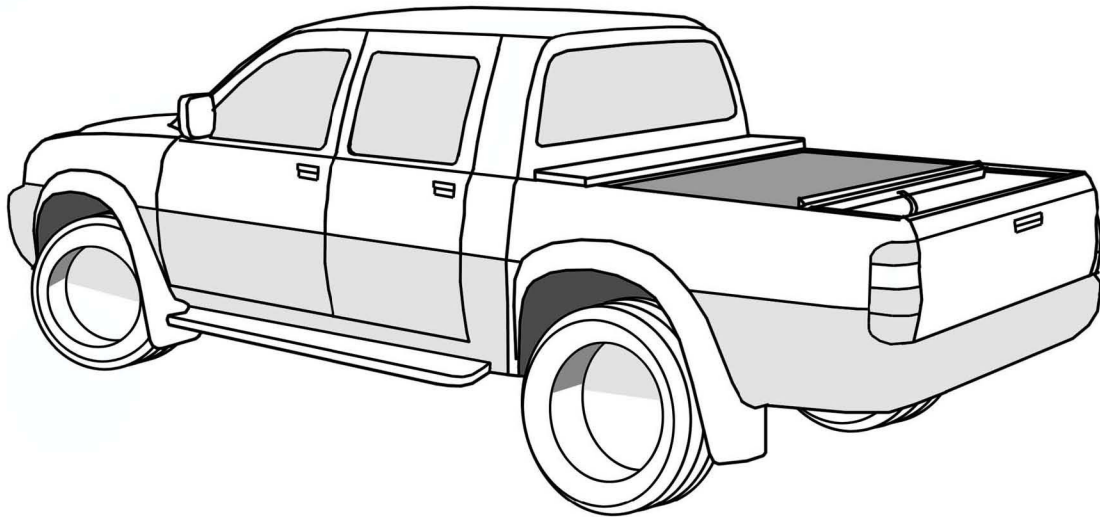
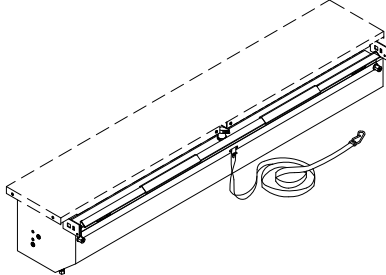
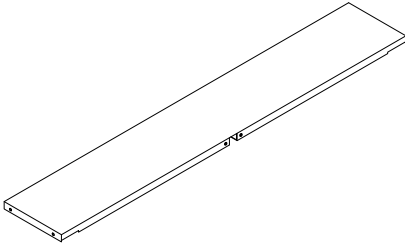
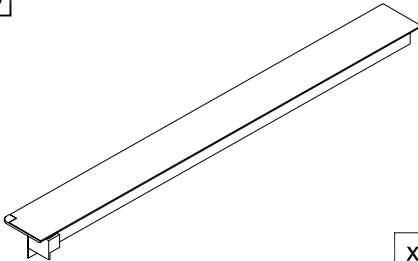
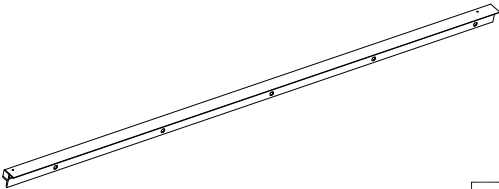
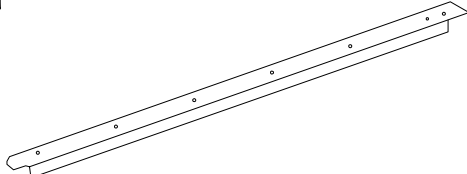
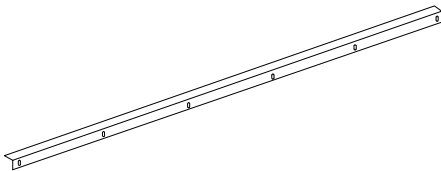
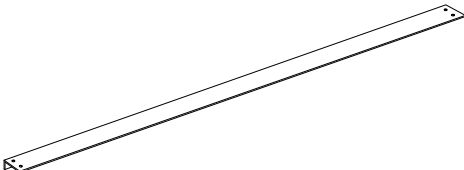
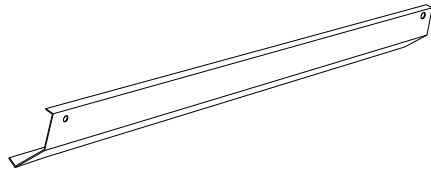
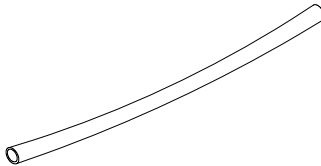





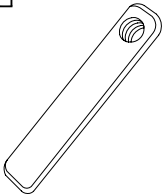
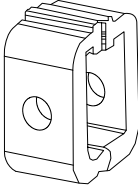
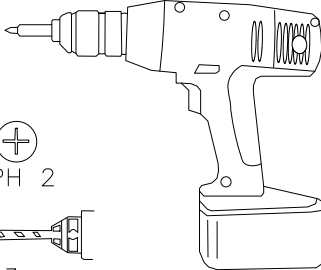

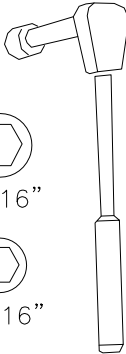


ROLL•N•LOCK®
INSTALLATION GUIDE
TOYOTA-HILUX VIGO




PRODUCT CODE:


511M

 x1	 x1	 x2 L/R			
 x1	 x2 L/R	 x2			
 x1	 x1	 x2			
 x1	 x1	 x4  x16			
 x10	 x6	 x4	 x4	 x16	 x16
 x8	 x8	 x6	 x6	 PH 2 PH 3	
 PH 2  13mm		 9/16" 7/16"		 Vinyl Protector  Cleaner	


Page 2/11




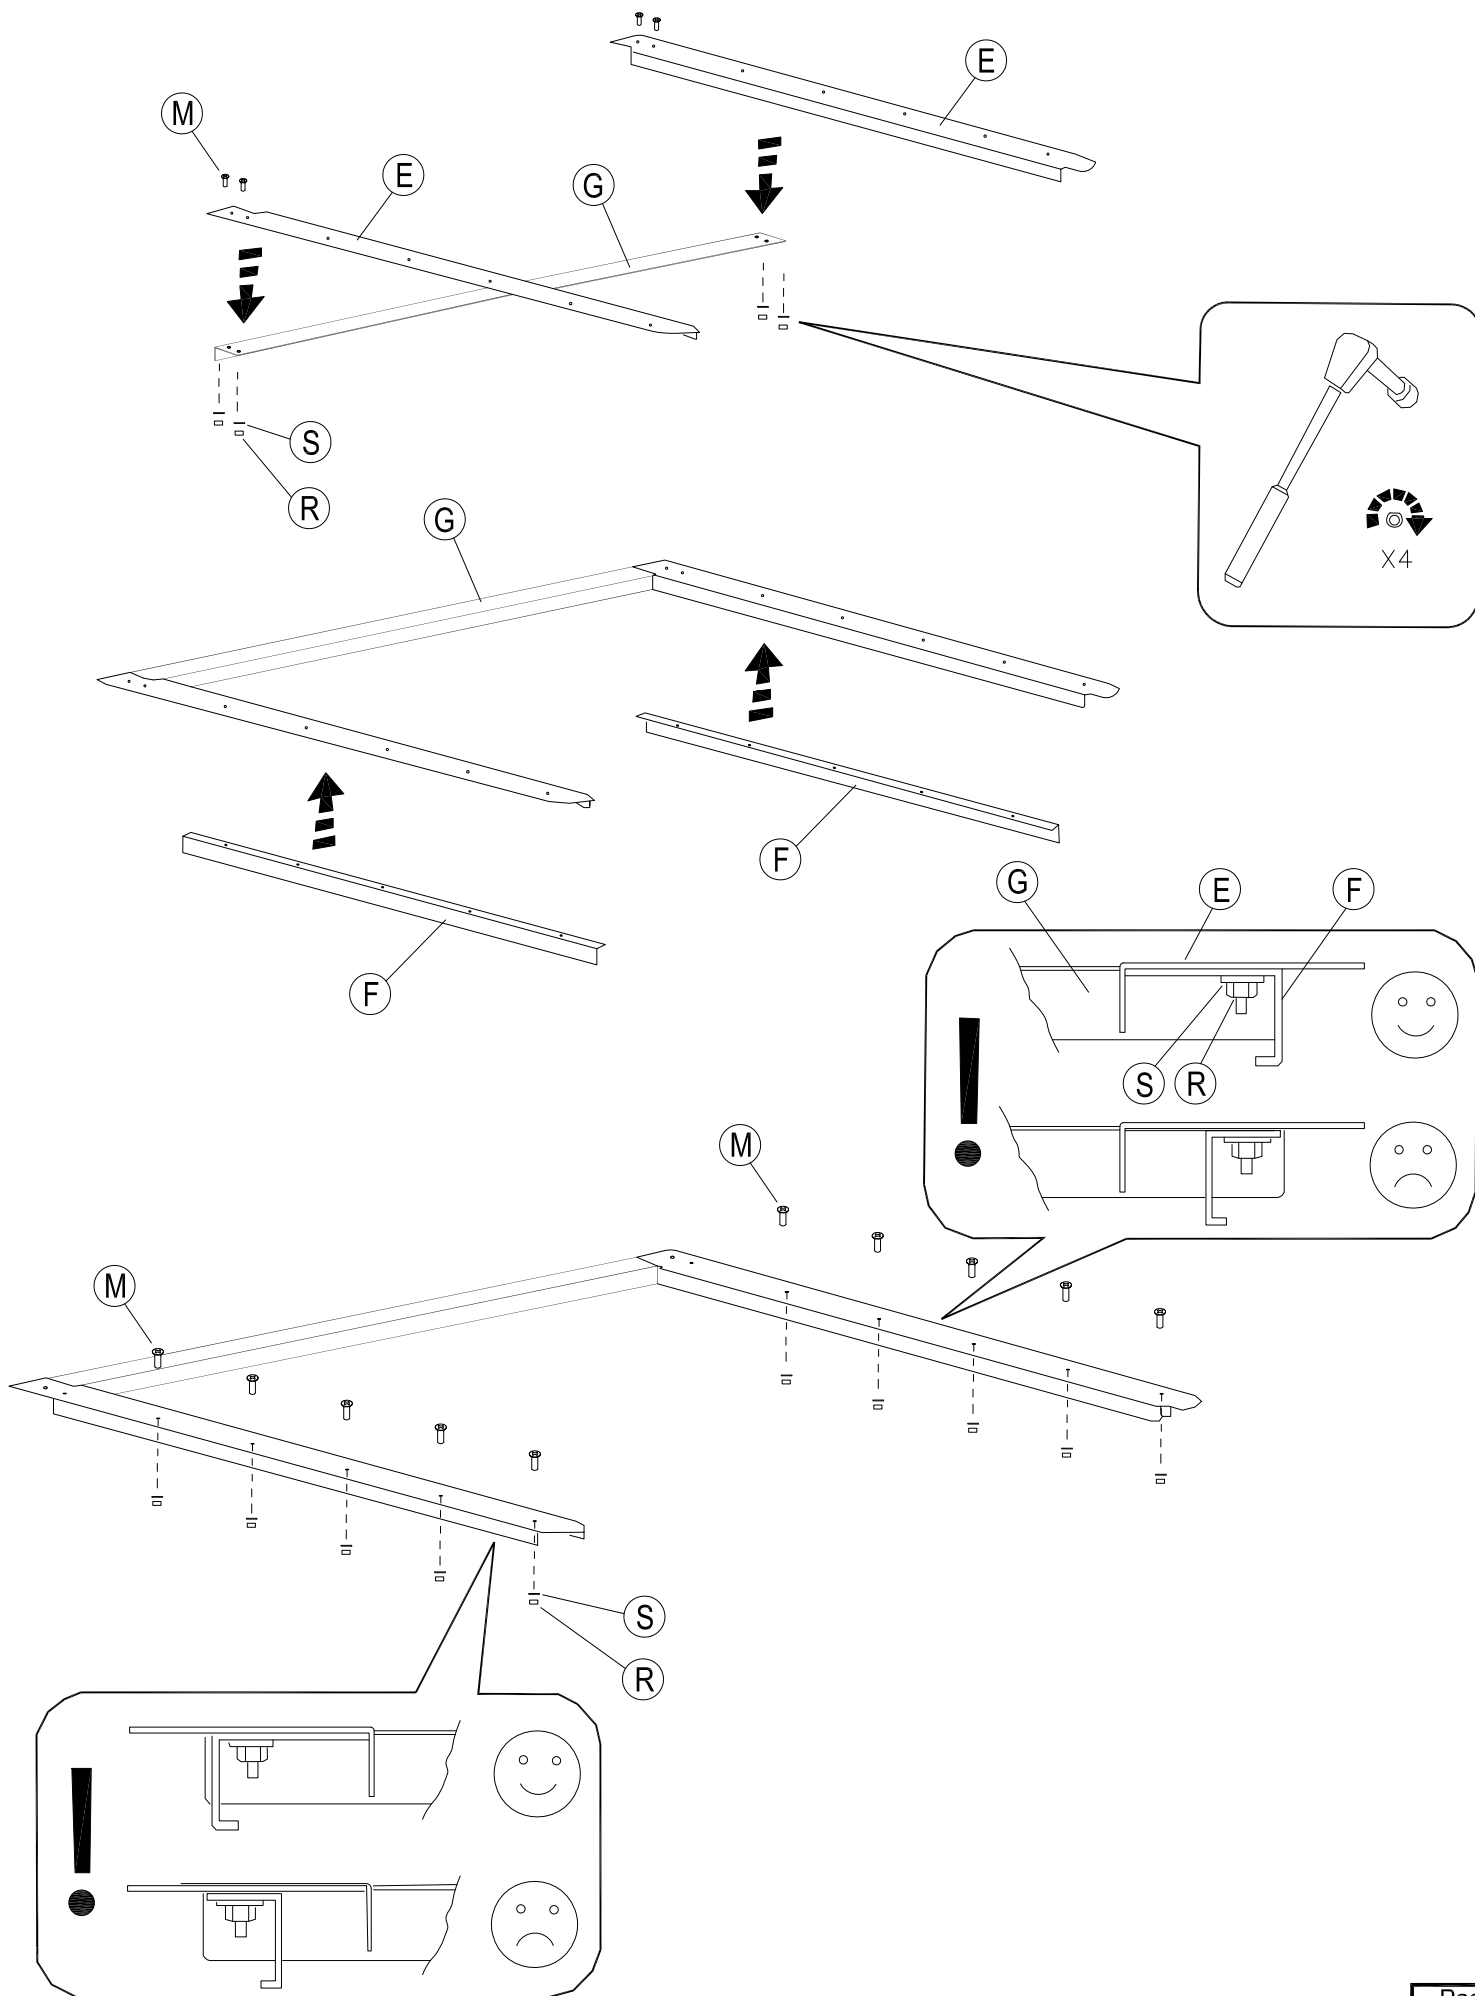


2

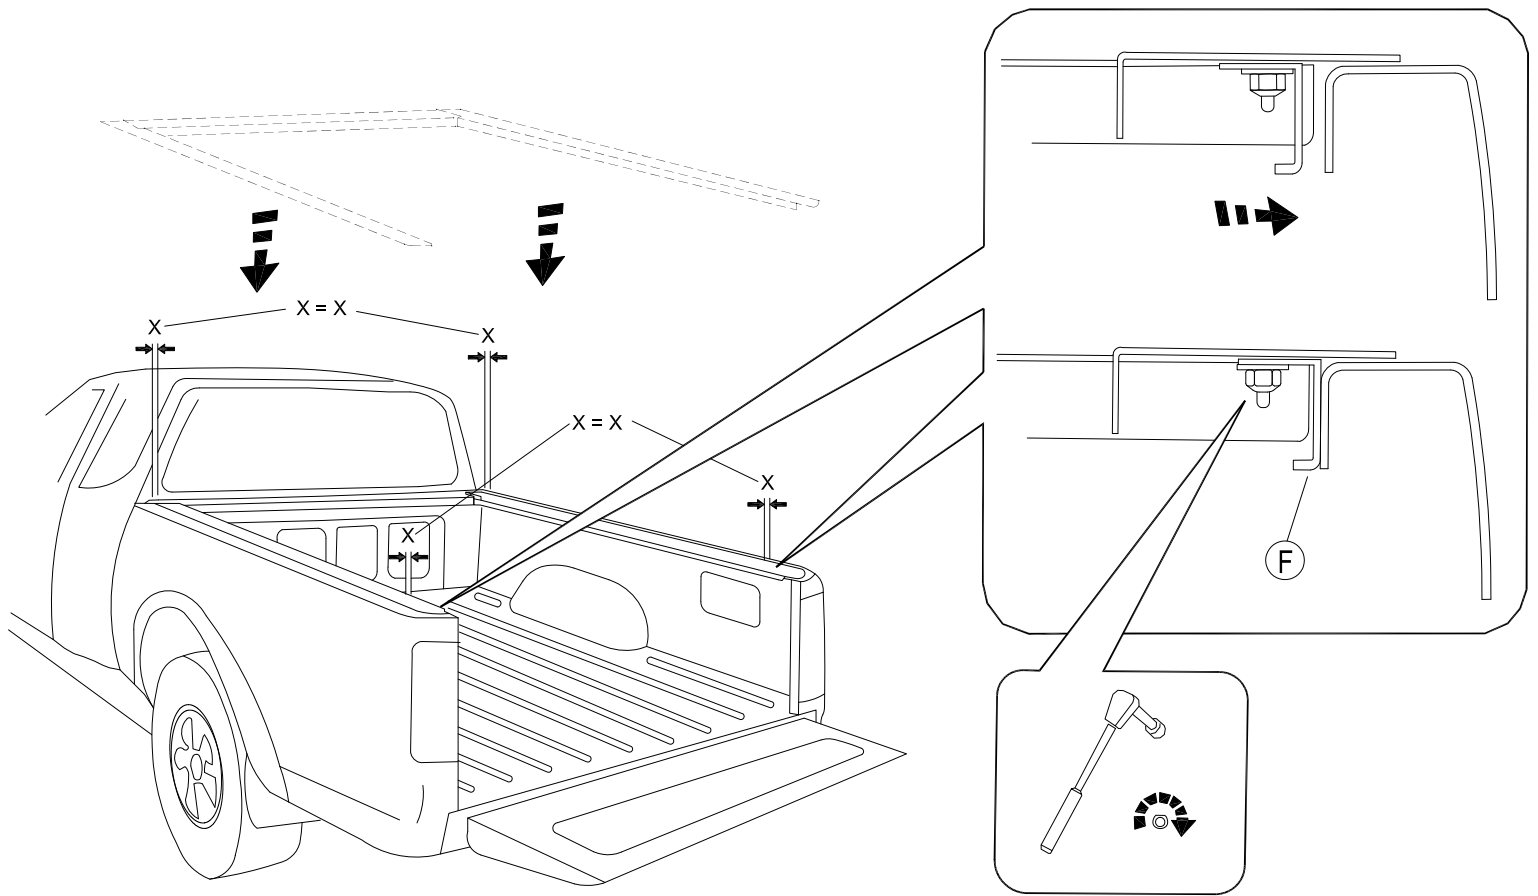


3

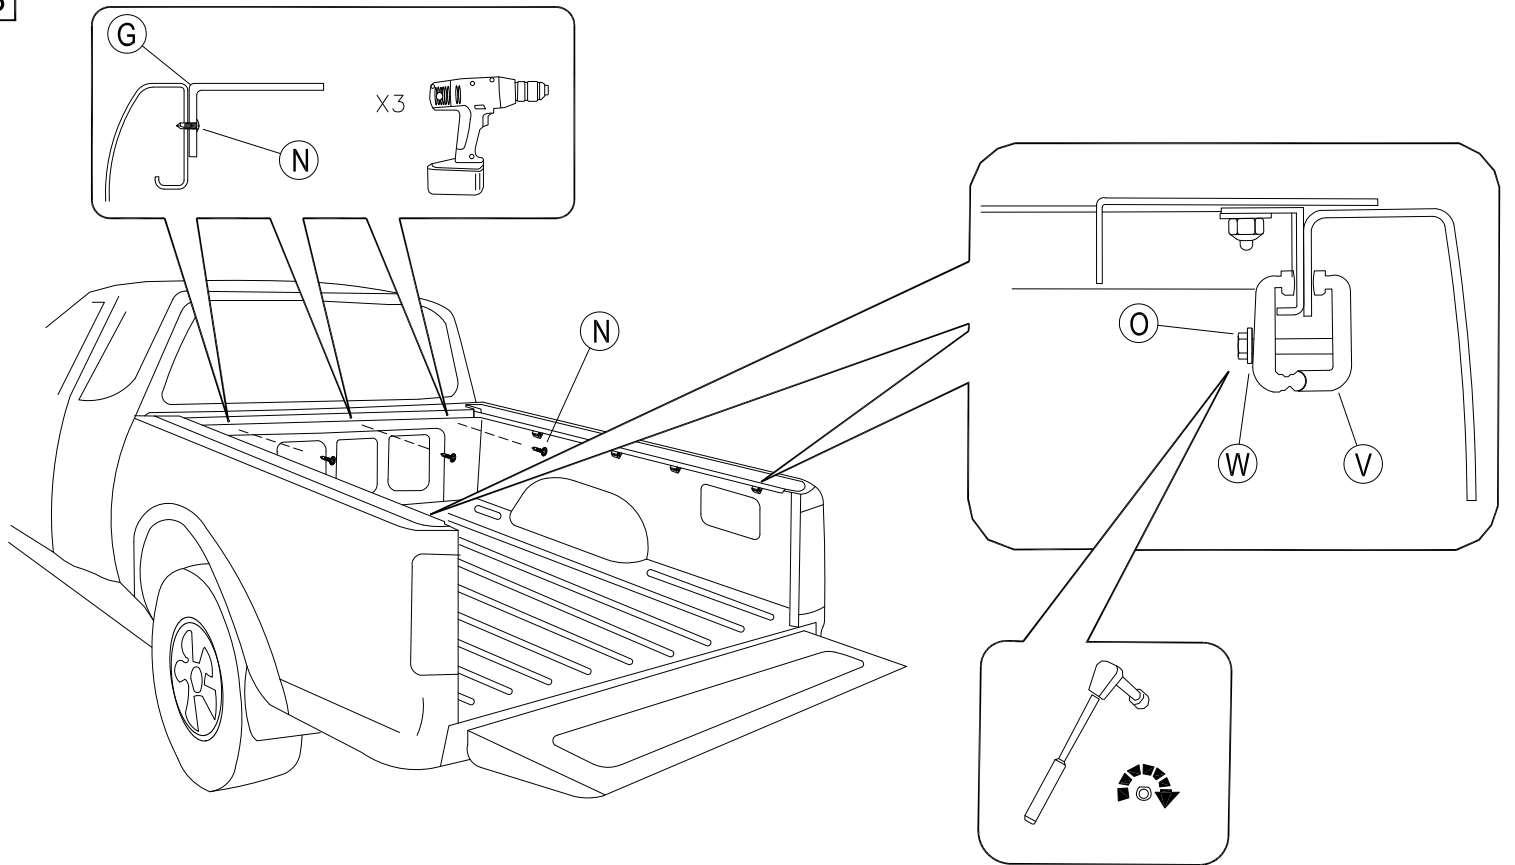

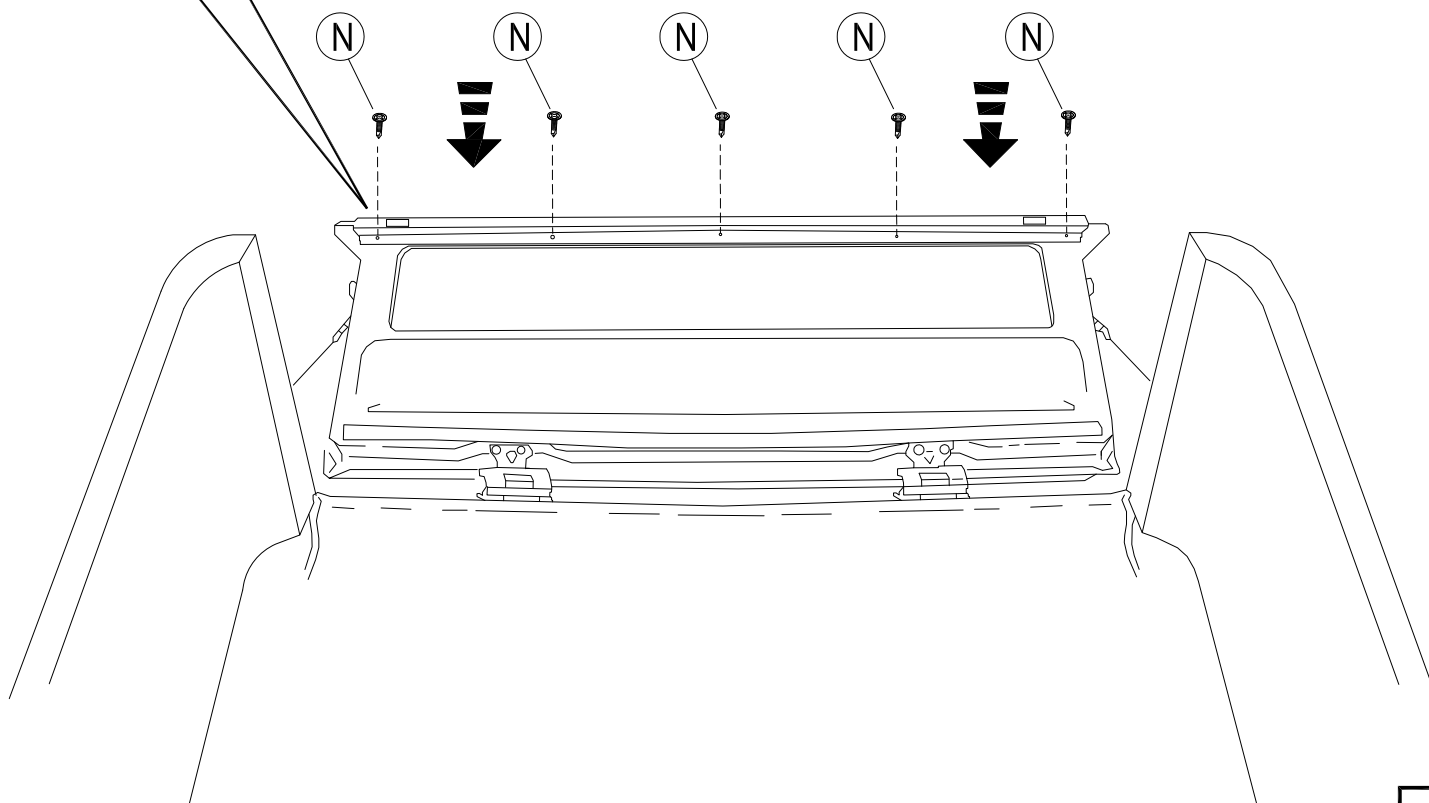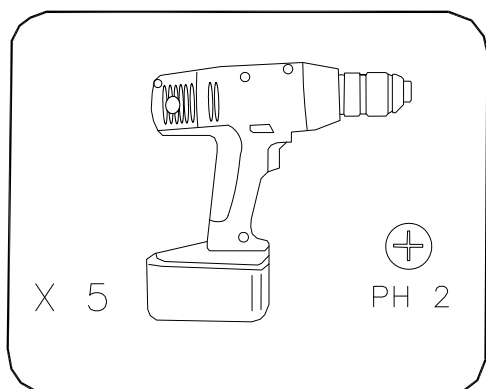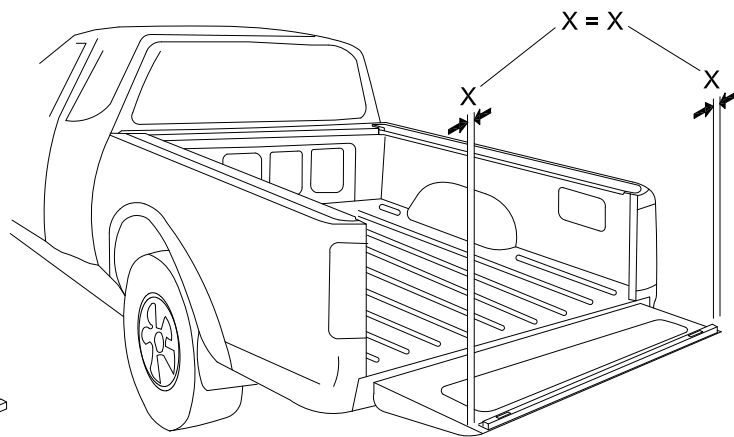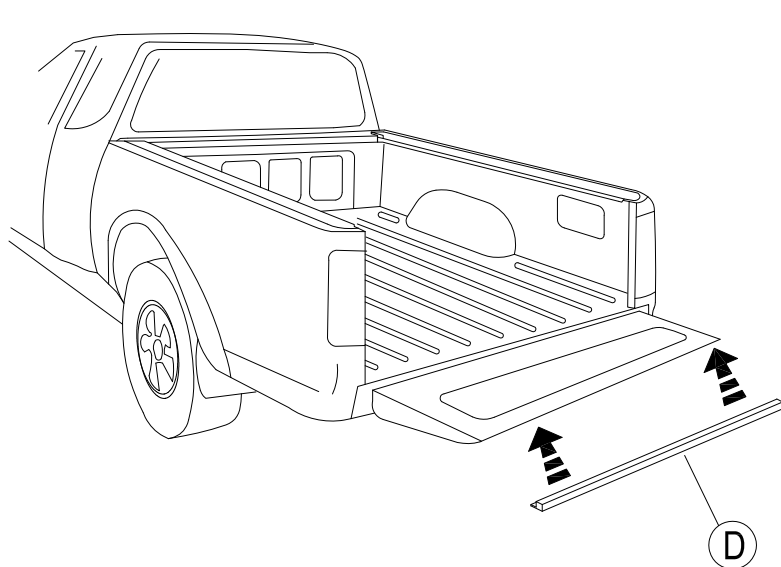


5

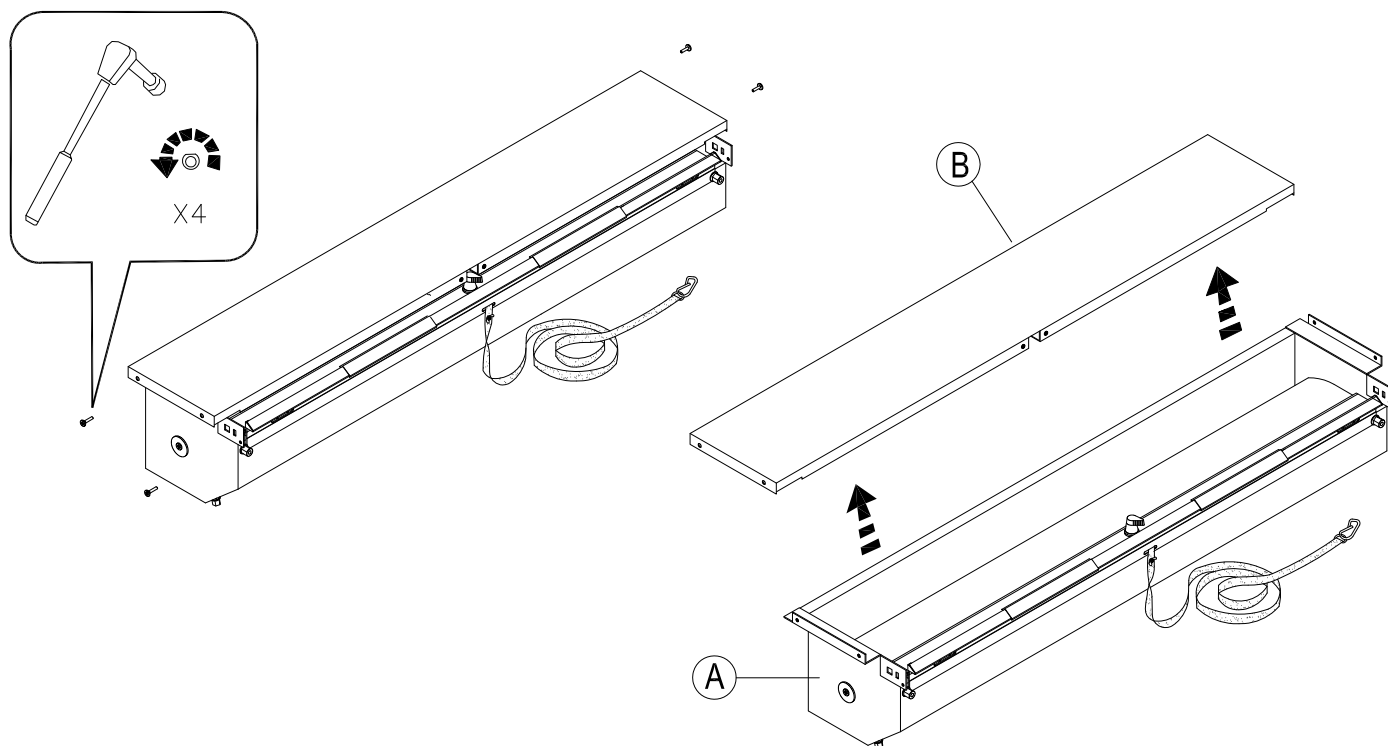


6

NOTE:
WEDGE CARDBOARD PACKAGING
BEHIND CURTAIN BEFORE
REMOVING WING NUT.


NOTA:
PONER EL CARTON DE EMPACAR
DETRAS DE LA CORTINA ANTES
REMOVER LOS ARTICULOS.

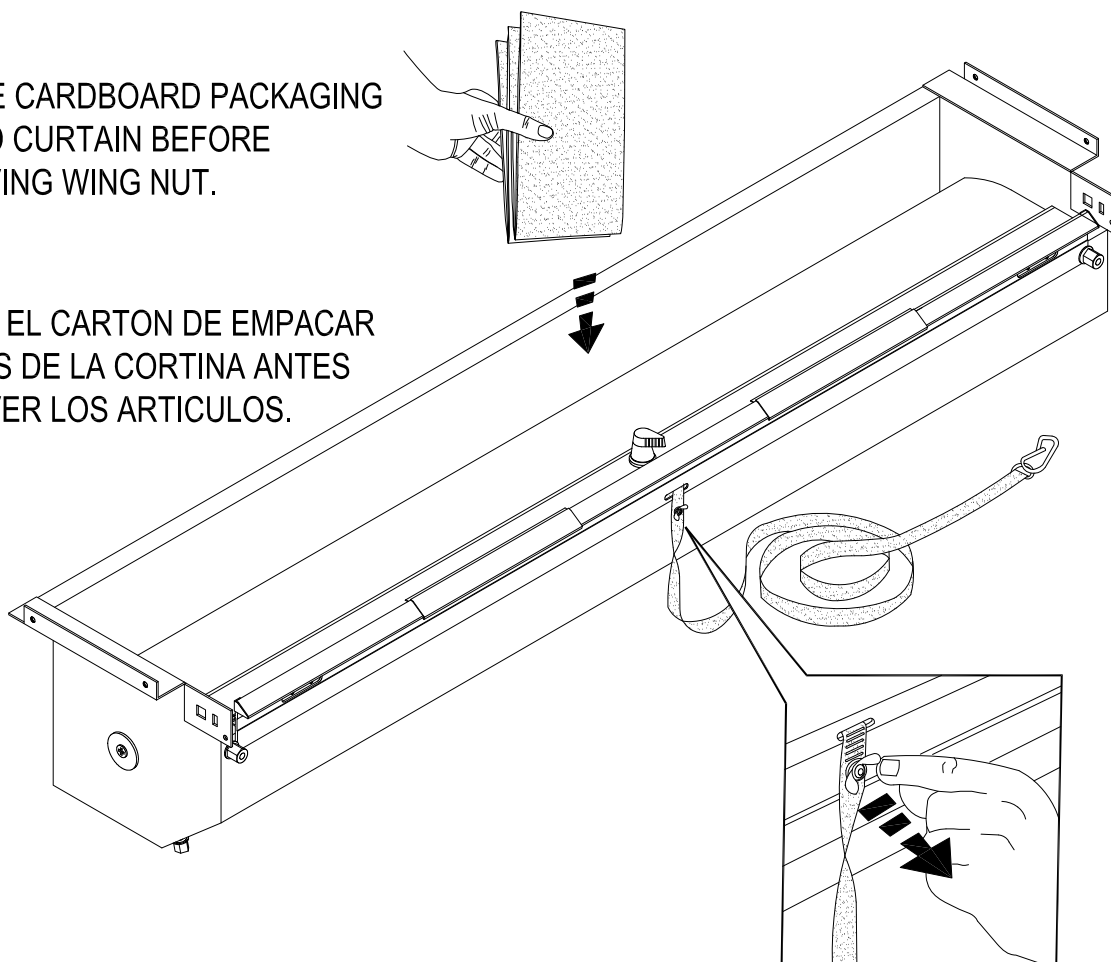


7

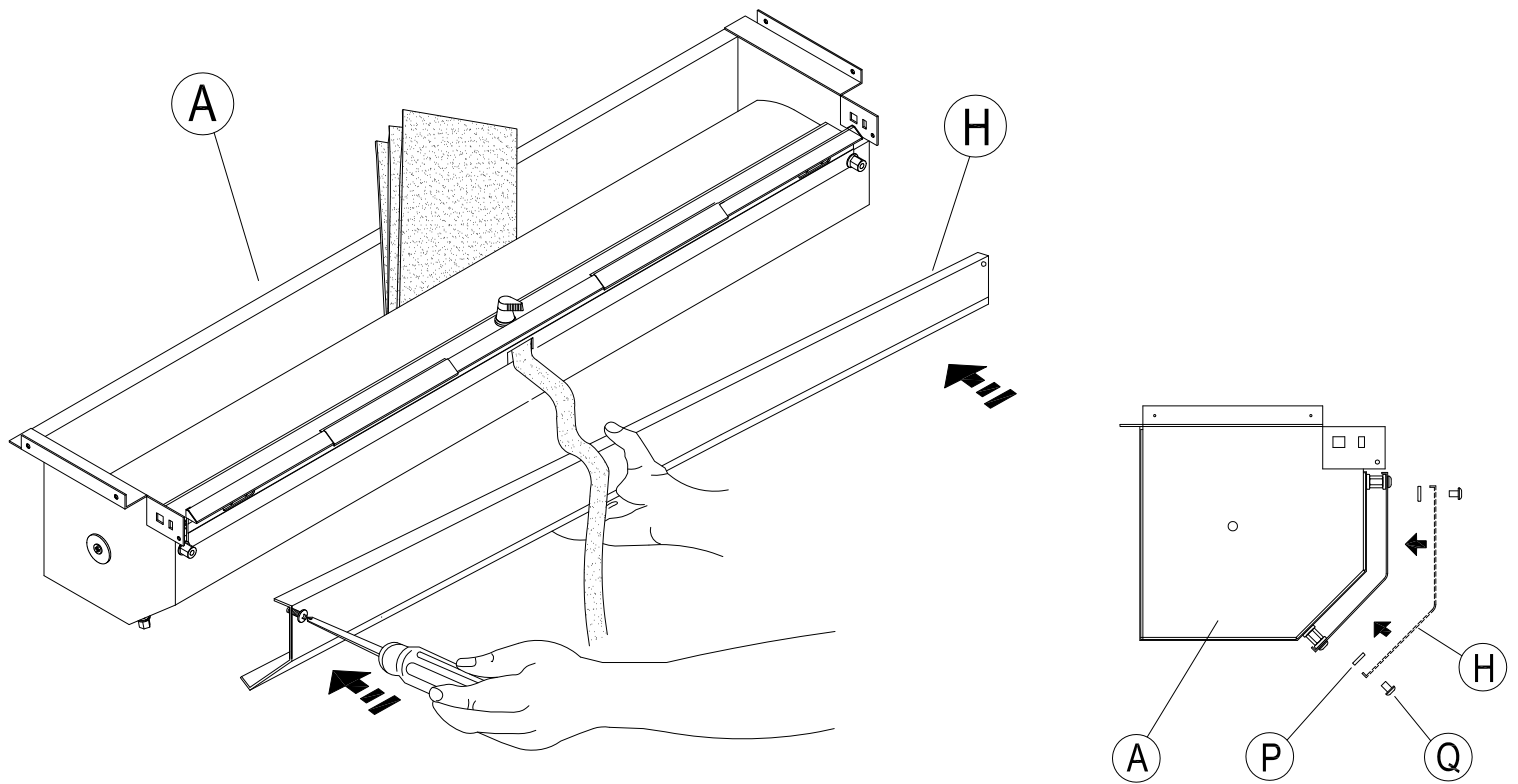


8





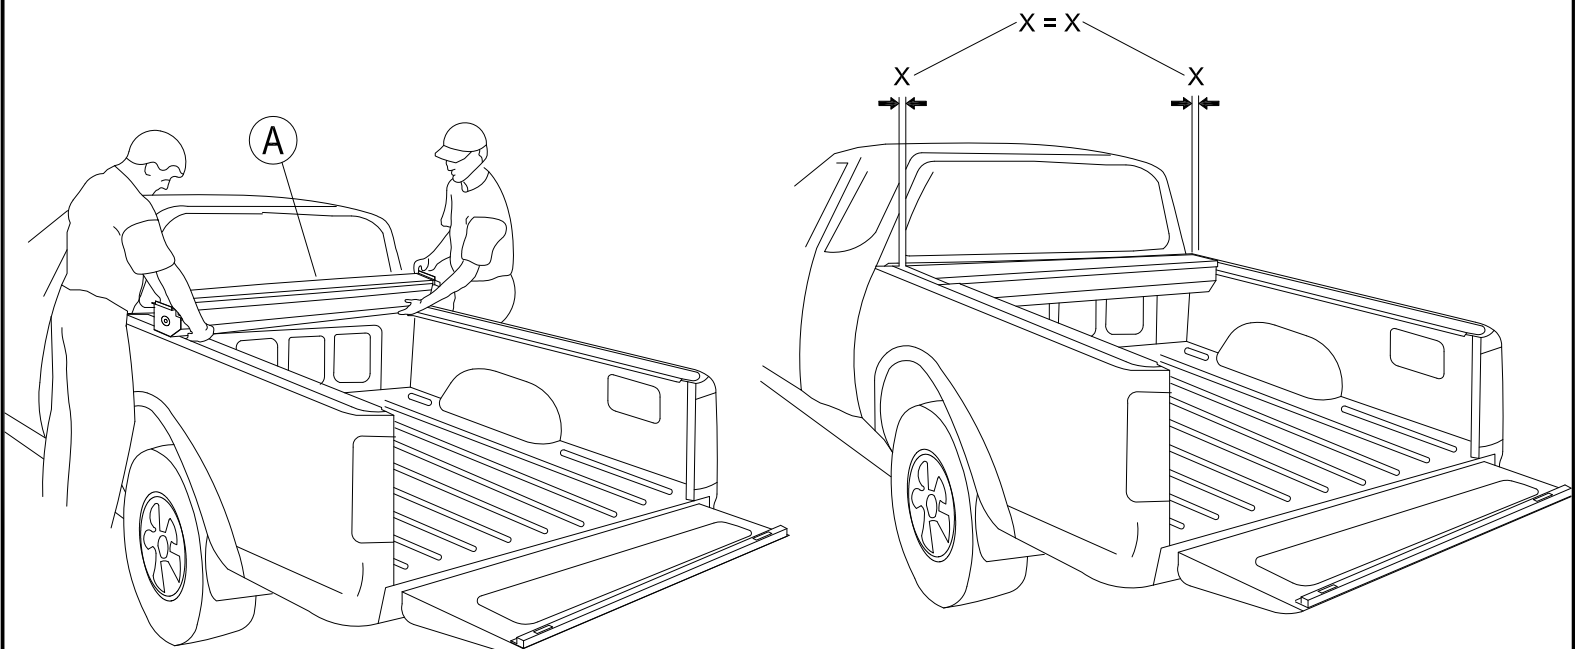






9

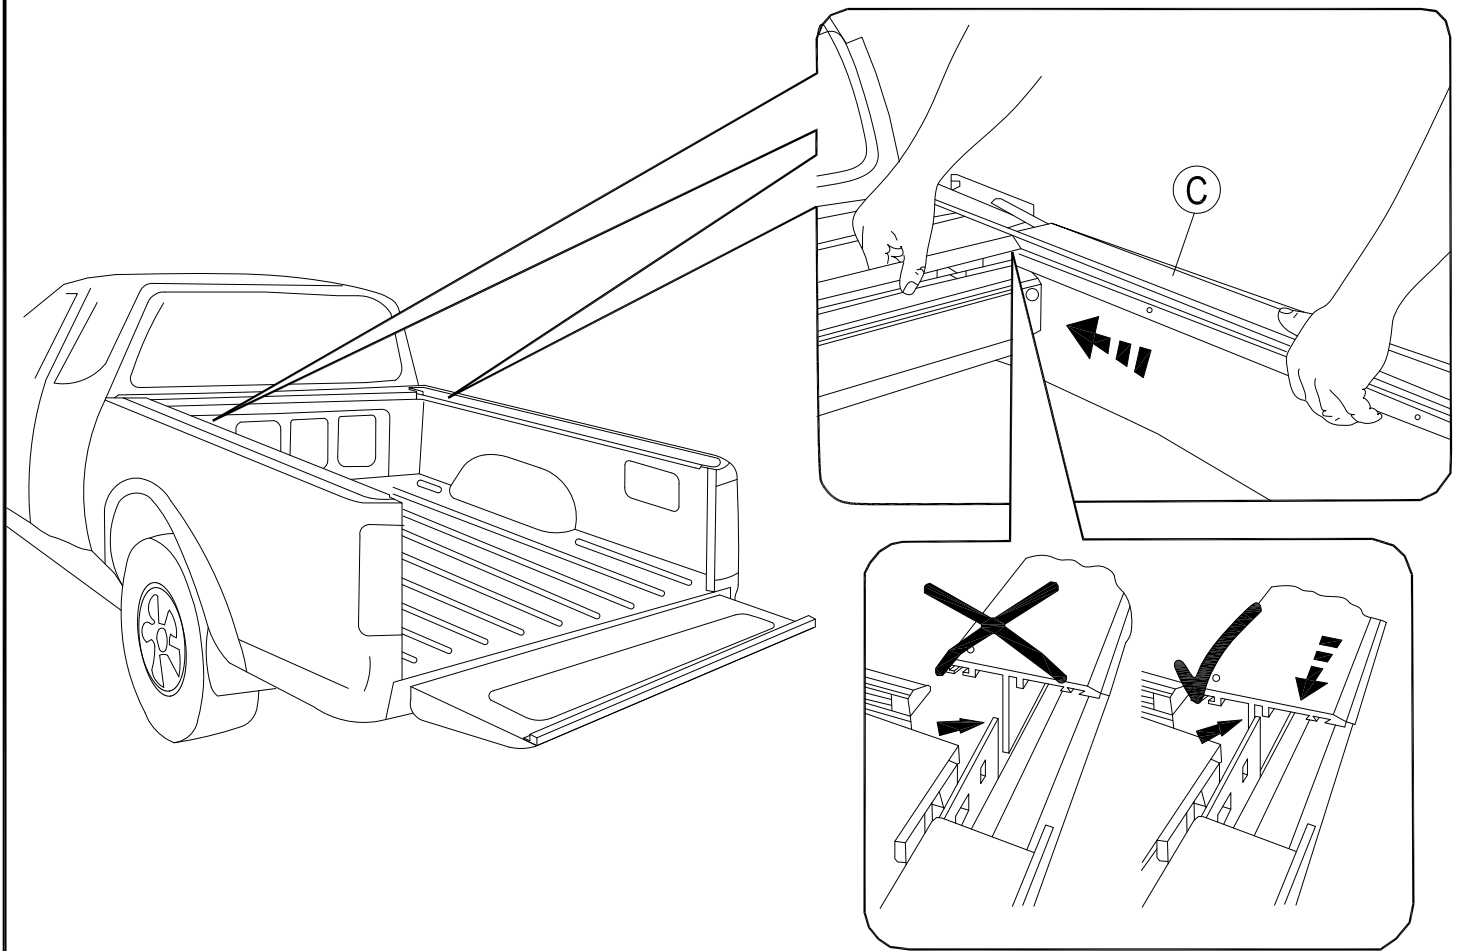


10

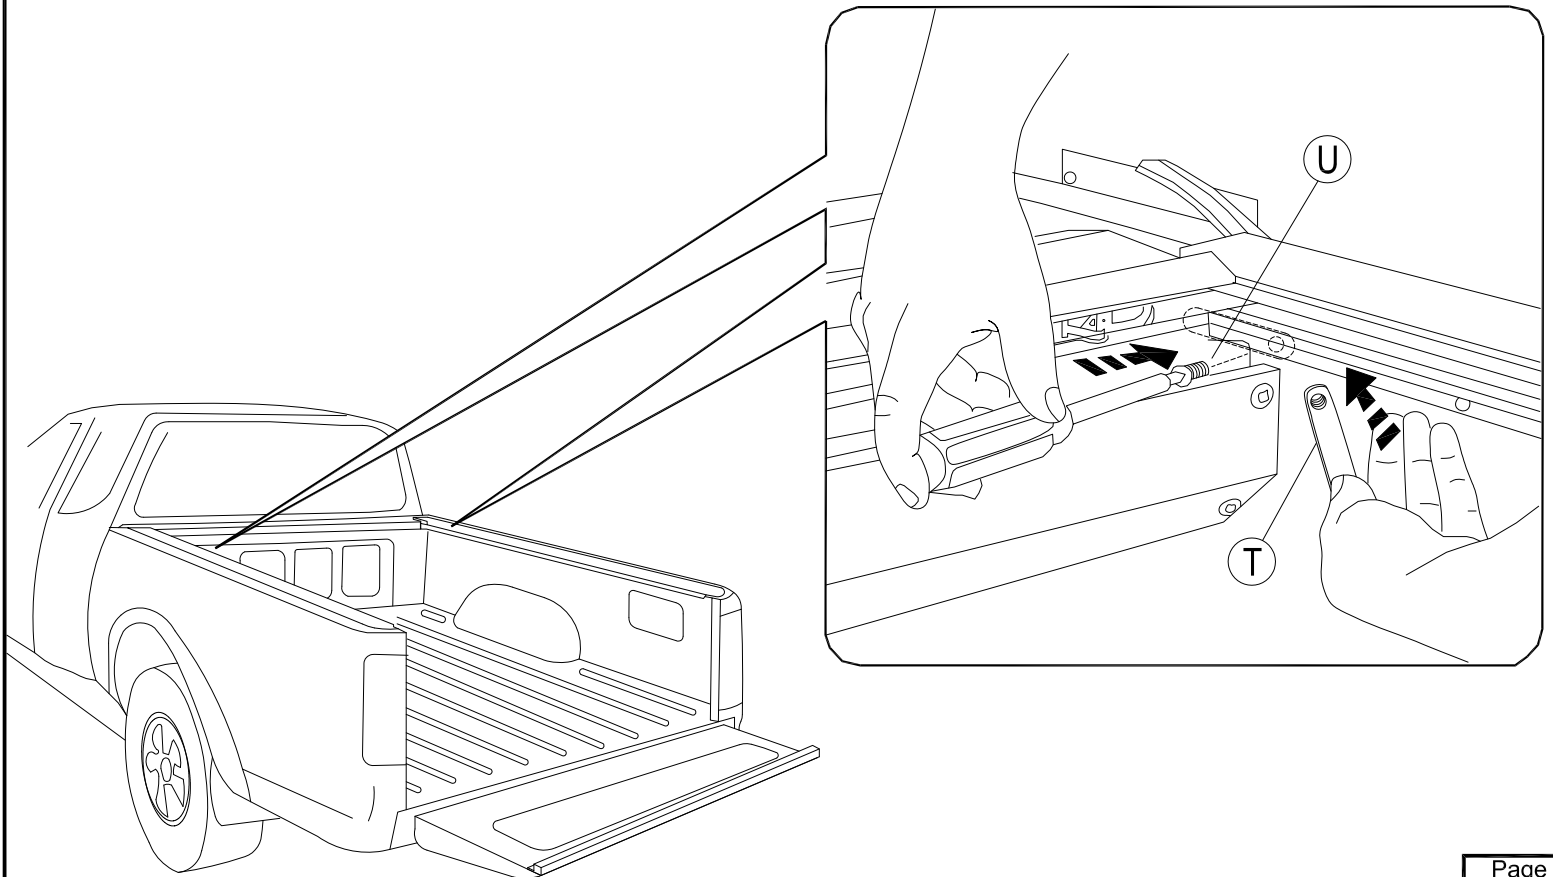

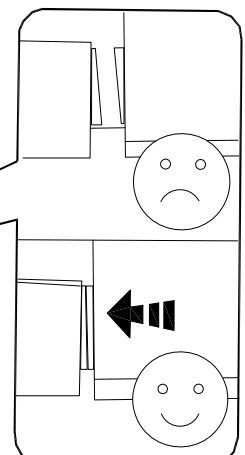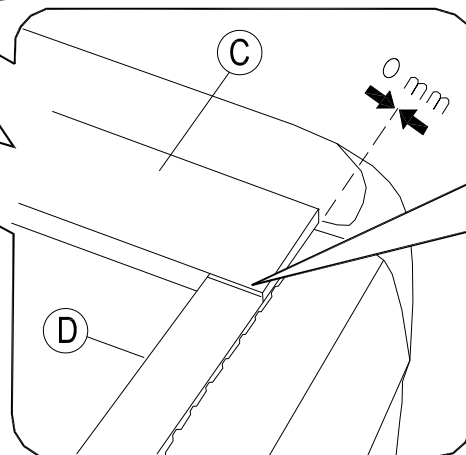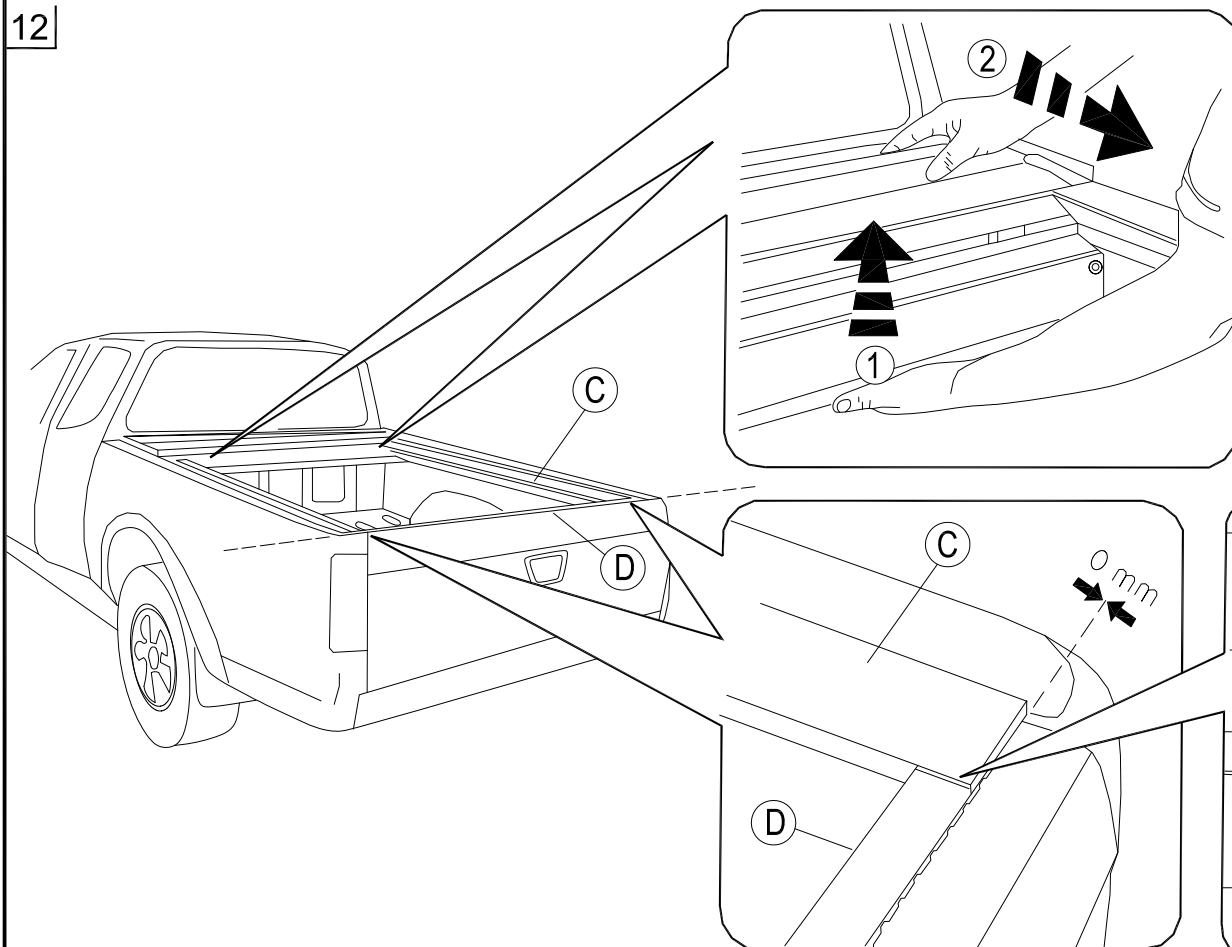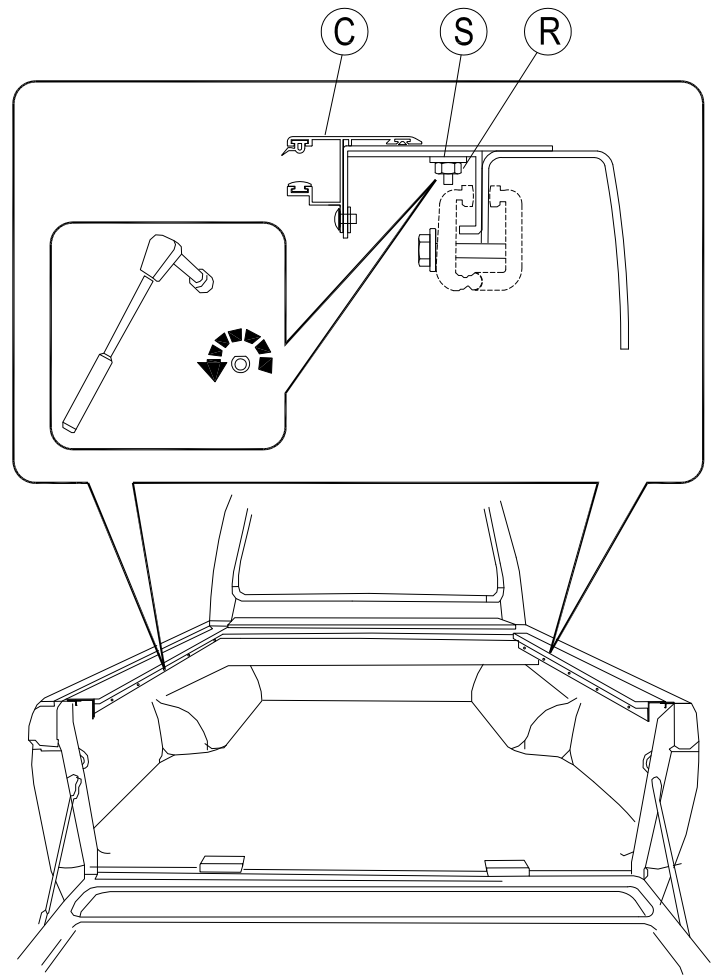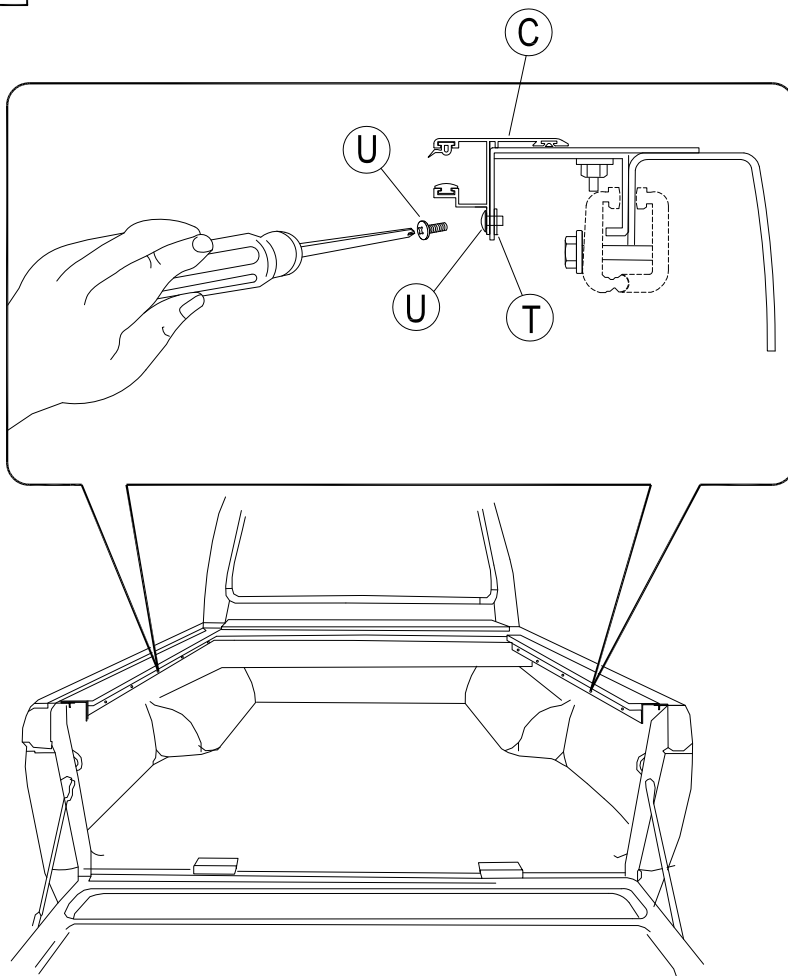

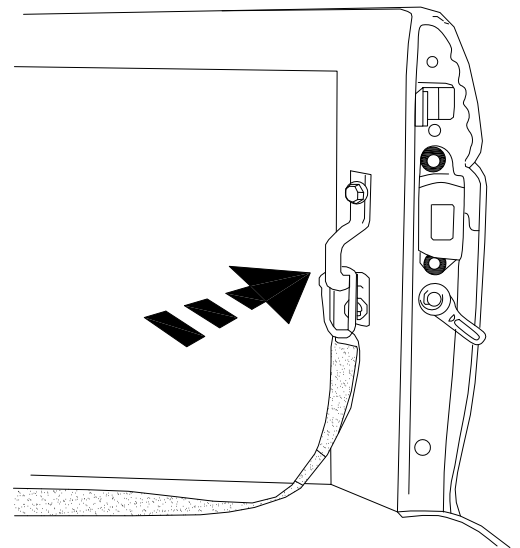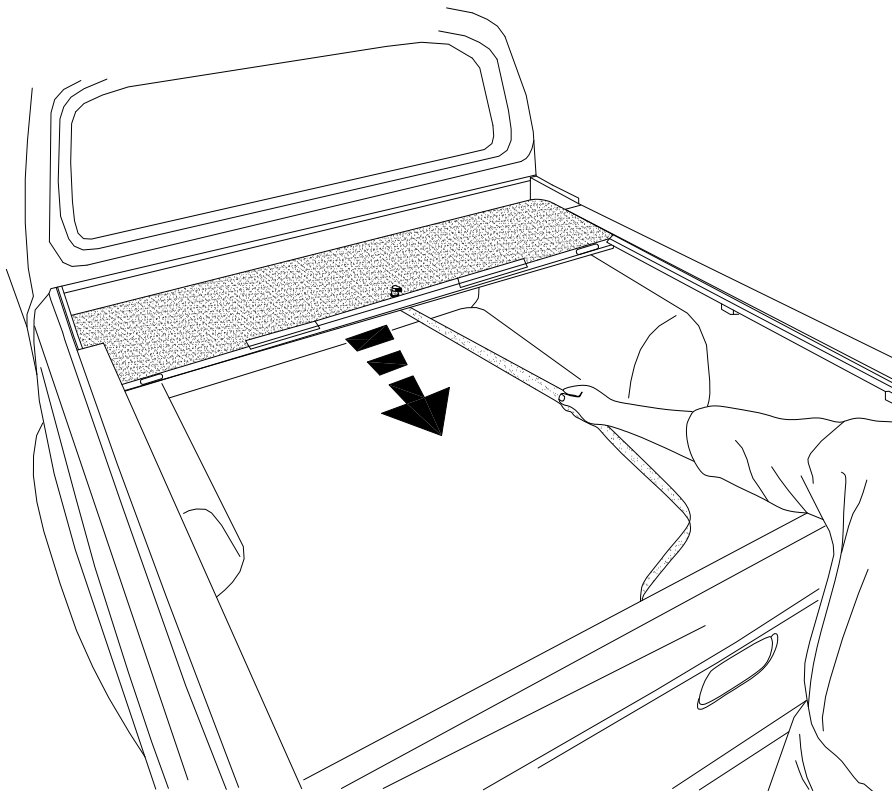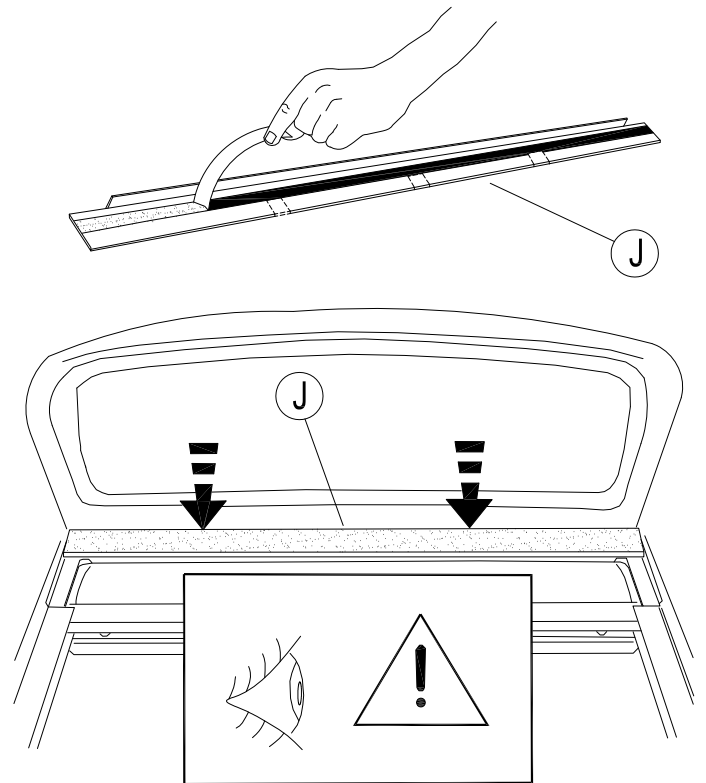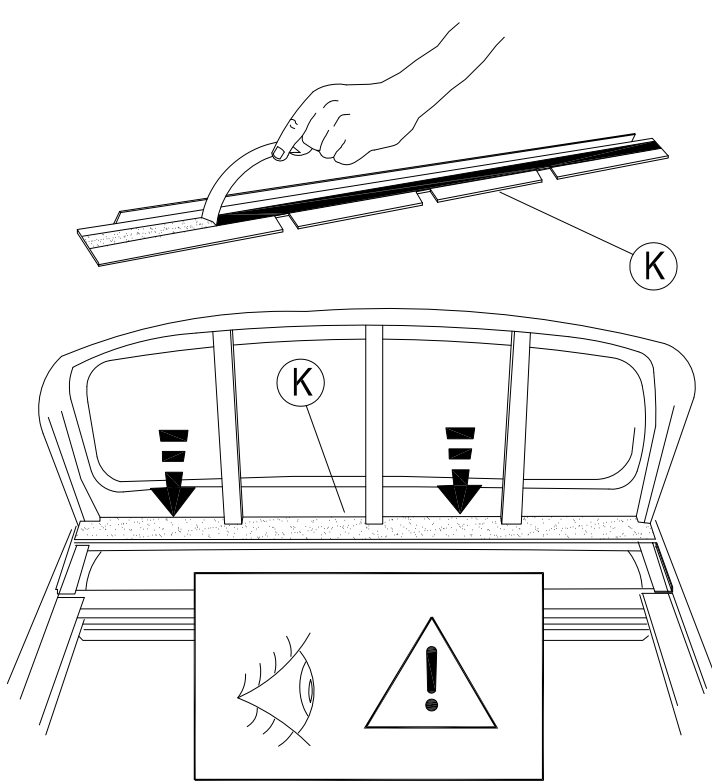

15

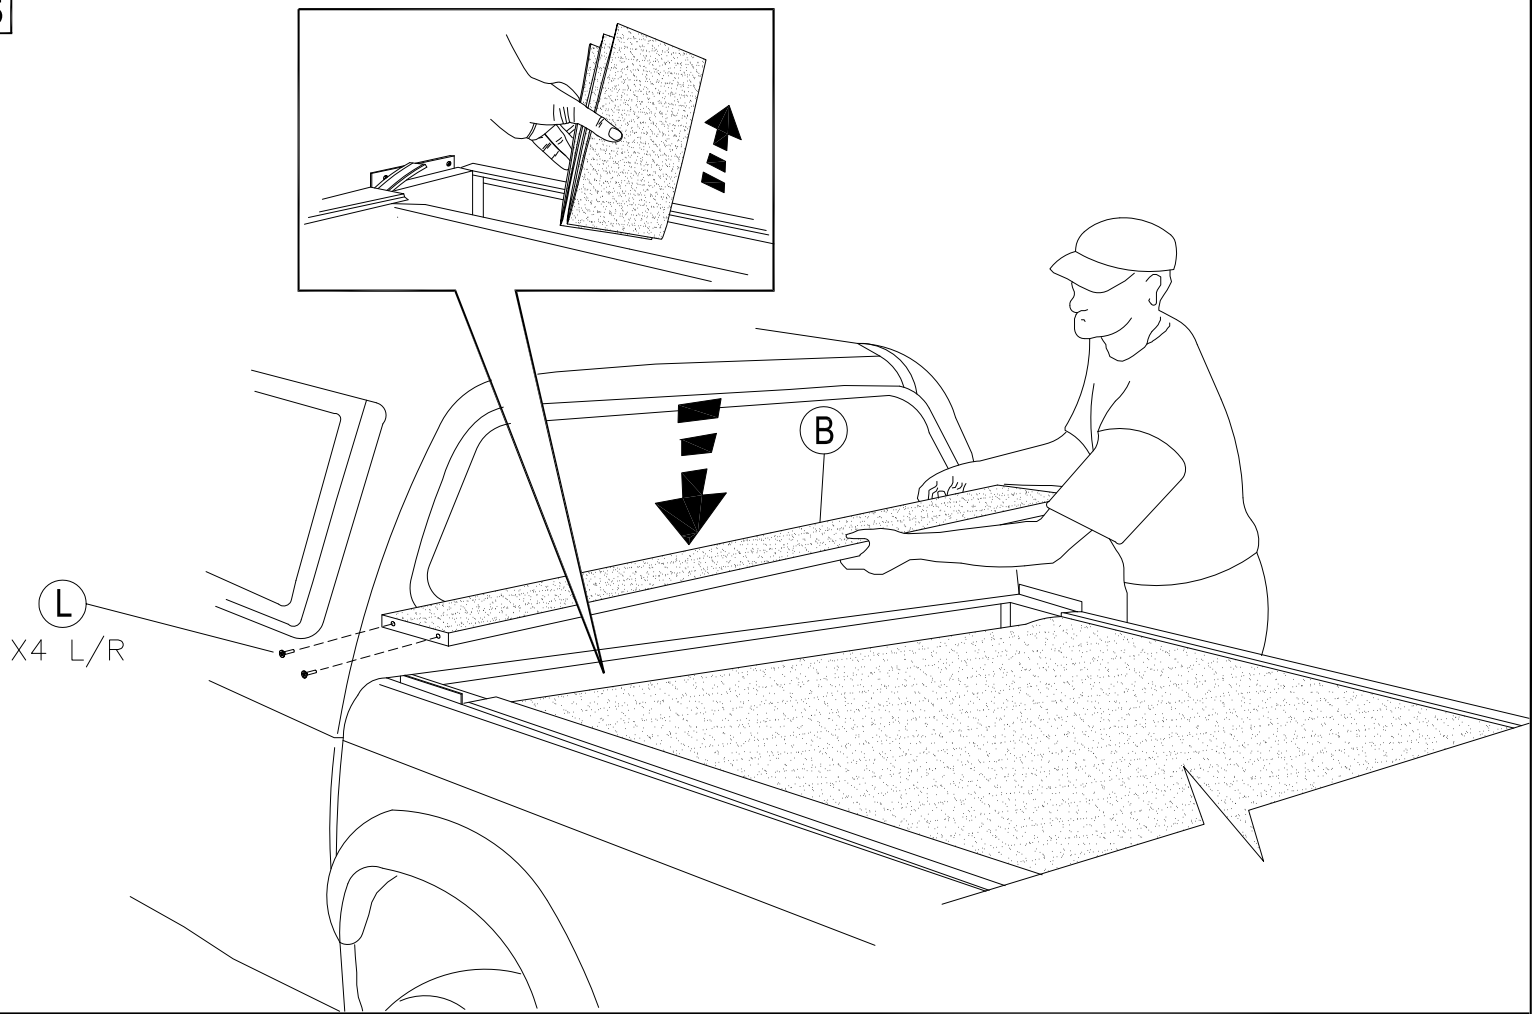

16

