


1 TRIM BASE PADS.


Remove (4) base pads and mark a line 3/8" up from the bottom of the long fin as shown. Cut along the line from end to end.

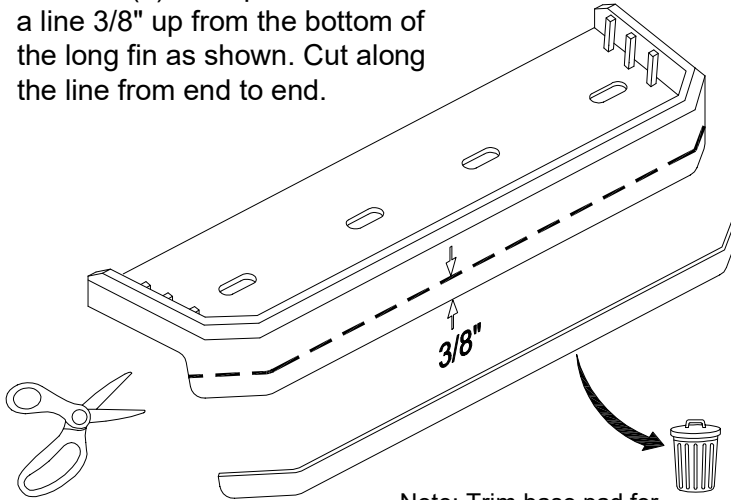

Note: Trim base pad for Roll-N-Lock M / A & E Series.

2 POSITION BASE PLATES.

Peel paper backing from foam tape and place (4) base plates over the t-bolts. Place base plate with foam tape facing down on tracks and angled corners to the outside of tracks.

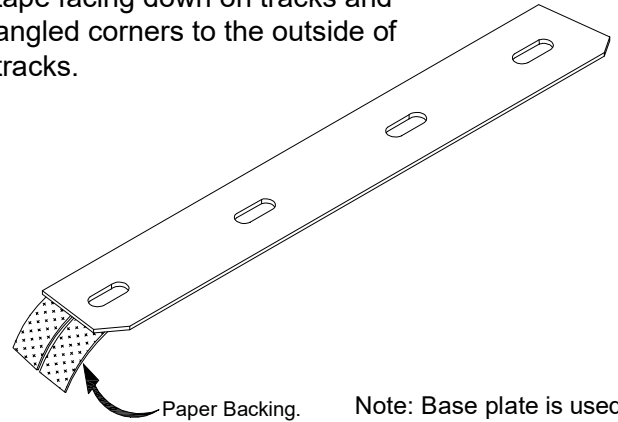

Paper Backing.

Note: Base plate is used on M & A Roll-N-Lock Series only.

3 PLACE BASE PADS AND TOWERS.

Continue with Yakima OverHaul HD Installation Guide.

