



Installation Instructions


Part No. 3035
Product: Rear Door Step
Application:
MB Sprinter 2007+
Level of Difficulty: 1 2 3 4 5
Installation Time: 60 min

REV 2 07/15/21

Hardware	Torque Specifications
M6 Bolt	3 ft-lbs.
M8 Bolt	7 ft-lbs.
M10 Bolt	16 ft-lbs.
M12 Bolt	28 ft-lbs.

ATTENTION: Use correct torque settings to avoid damaging the running boards and or mounting brackets. Failure to do so will void your warranty.

If you have any questions please contact our technical team at 1-866-717-6645

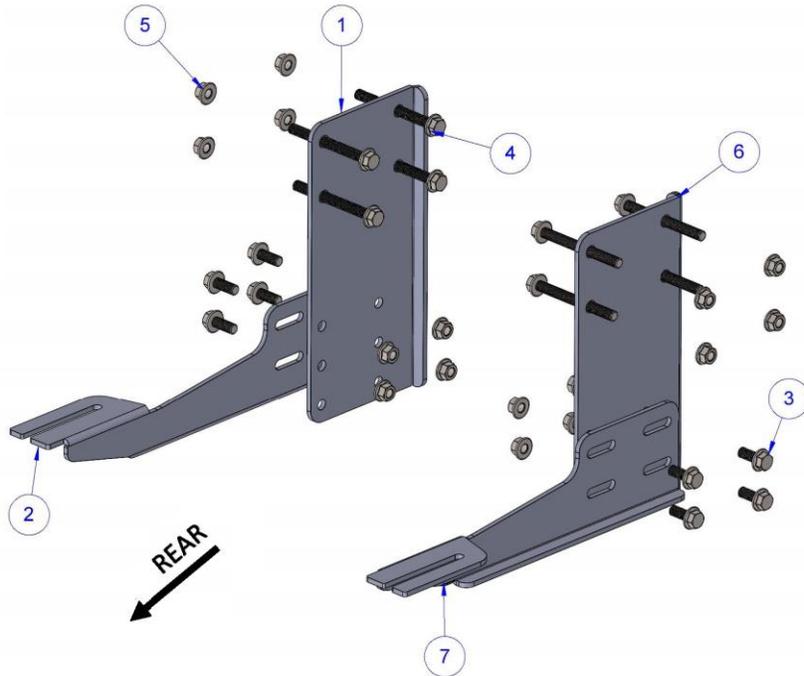


ITEM NO.	PART NUMBER	QTY.
1	3037781F1B	1
2	3037781F0B	1
3	M10 X 25 Flange Bolt	8
4	M10 X 100 Flange Bolt	8
5	M10 Flange Nut	16
6	Mirror3037781F1B	1
7	Mirror3037781F0B	1

Installation Instructions 3035 Bracket Kit

NOTE: If the vehicle is equipped with a tow hitch receiver **STOP** these products will not fit.

Step 1: Locate mounting positions on rear subframe we will be using 4 open holes per side.

Step 2: Insert provided M10 x100 bolts through side plate and onto chassis as shown on Figure 1. Do not tighten.

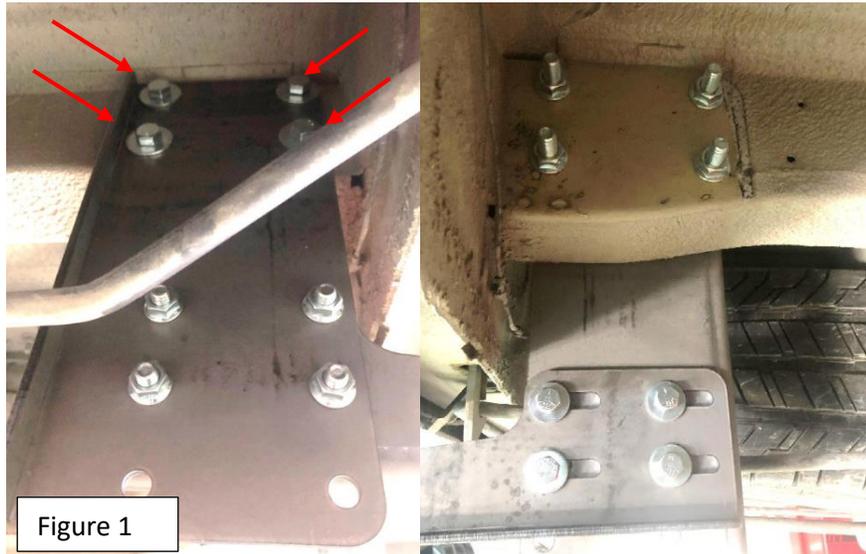

Step 3: Install lower portion #7 and #2 as shown figure 2. There are 3 positions choose the one that fits your needs. Higher is closer to the bumper. Do not tighten.



Step 4: Proceed to last page of this manual for rear running board install instructions and torque values
For Technical support please call our team at 1-866-717-6645 and one of our experts will assist you with this installation.

Thank you for choosing Romik.

Installation Instructions Running Boards

NOTE: Use of power tools will damage the bottom of the running board and void your warranty.

Step 1: loosen the M8 hardware on back of the running boards.

Step 2: Slide running board onto brackets

Step 3: Tighten hardware to 7 ft lbs.




ROF/RPD/ROB Running boards

Step 1: Place clamping plate on top of running board as shown below. Make sure clamping plate sits correctly on running board surface.

Step 2: Install carriage bolts and plastic retaining clips as shown below.

Step 3: Install and tighten hardware to 7 ft lbs.

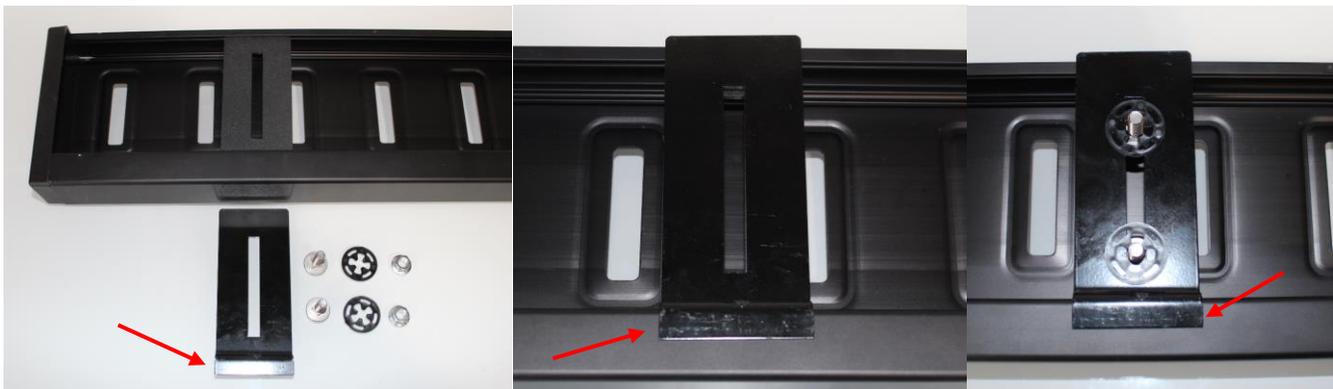

Product Registration and Warranty Information

- Register your Romik products at <https://romik.com/productregistration>
- Warranty information at <http://www.romik.com/warranty>



Cleaning and maintaining your Romik Running boards

Cleaning and maintaining your running boards is important, apply a light coat of a quality carnauba wax at least 2X per year. Wash often with mild soap and make sure to remove all soap residue. Many car automatic carwashes use a strong soap, make sure to use enough water to remove all residue.

For video instructions on how to clean your Romik products please click here <https://romik.com/cleaning>