

## JK Billet Aluminum Transfer Case Shift Knob 07-10

Contents: Shift Knob (1)




PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE YOU BEGIN.

Step 1. Removing the factory transfer case shift knob. Set the emergency brake. Start the vehicle and place the transfer case into the neutral position. Turn vehicle off. Apply upward pulling force to disengage knob from shaft.



Step 2. Install the new shift knob onto the post. Ensure the shift pattern is orientated correctly.

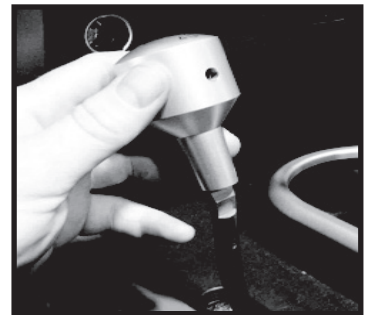

Step 3. Tighten the set screw. Start the vehicle and cycle transfer case into all modes to verify a tight fit. Place transfer case into normal operating position. Test handle to ensure proper function before operating vehicle.



For Technical Assistance Contact:  
Omix-Ada Tech Support  
Phone: 1-800-449-6649  
Email: [techsupport@omix-ada.com](mailto:techsupport@omix-ada.com)  
Web: [www.Omix-Ada.com](http://www.Omix-Ada.com)

Copyright Omix-Ada 2011