


## JK Billet Aluminum Grab Bar Handle 07-10

Contents: Grab Handle (1)  
Spacers (2)  
M8 screws (2)




PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE YOU BEGIN.


Step 1. Remove the factory grab handle. Remove both end covers by sliding the out away from the grab handle.

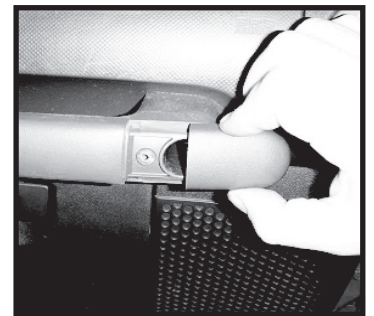

Step 2. Remove the hex head screws on both sides of the grab handle. Remove the handle.

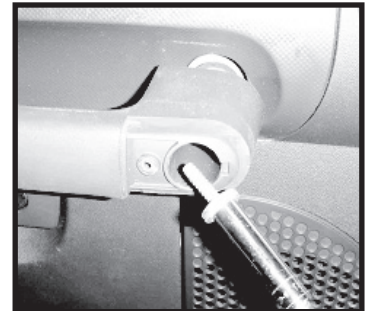

Step 3. Insert the supplied hex bolt thru the handle. Insert a spacer between the handle and the dash. Start the screw. Do not tighten. Repeat for opposite side. Once both screws have been started tighten both screws.

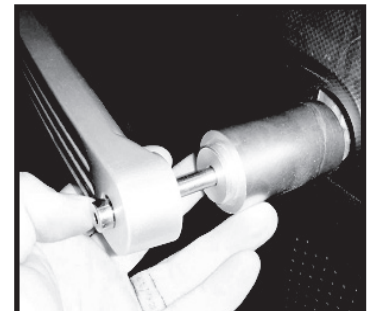

For Technical Assistance Contact:  
OMIX-ADA Tech Support  
Phone: 1-800-449-6649  
Email: [techsupport@omix-ada.com](mailto:techsupport@omix-ada.com)  
Web: [www.Omix-Ada.com](http://www.Omix-Ada.com)

Copyright Omix-Ada 2011