




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Part #11594.01

# '11-16 Jeep Grand Cherokee Bonneville Running Boards

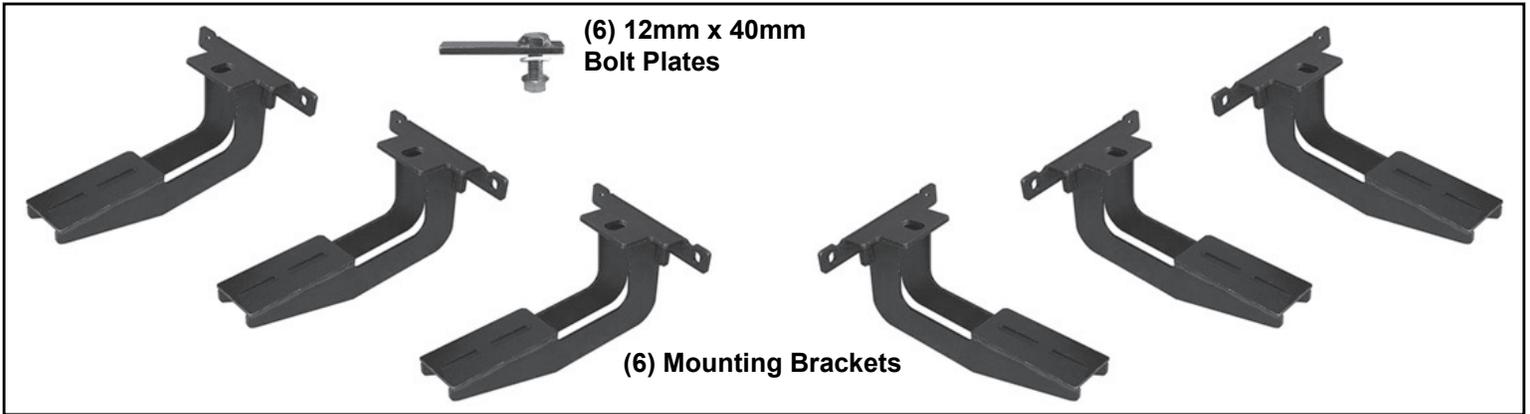

## Components

- |                                     |      |  |      |
|-------------------------------------|------|--|------|
| 1. Running Boards                   | 2)   | 8. 6-1mm x 25mm Hex Bolts                | (12) |
| 2. Mounting Brackets                | (6)  | 9. 6mm x 22mm x 2mm Large Flat Washers   | (24) |
| 3. 12-1.75mm x 40mm Bolt Plates     | (6)  | 10. 6mm x 18mm x 1.6mm Std. Flat Washers | (12) |
| 4. 12mm Serrated Flange Nuts        | (6)  | 11. 6mm Lock Washers                     | (12) |
| 5. 12mm x 24mm x 2.5mm Flat Washers | (6)  | 12. 6mm Hex Nuts                         | (12) |
| 6. 12mm Plastic Retainers           | (6)  | 13. 6mm Lock Nuts                        | (12) |
| 7. 6mm "T" Bolts                    | (12) |  |      |

**OMIX-ADA® TECHNICAL SUPPORT**

**PHONE:** M-F 8am - 5pm EST 1-800-449-6649 | **EMAIL:** techsupport@omix-ada.com

**FOR WARRANTY INFORMATION VISIT:** [www.Omix-Ada.com](http://www.Omix-Ada.com)



OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## '11-16 Jeep Grand Cherokee Bonneville Running Boards

Remove contents from box. Verify all parts are present. Read instructions carefully before starting installation. Assistance is highly recommended. Running Boards are not compatible with "Rock Rail" Rocker Panel Guards. Excludes SRT and Trailhawk.

1. If wiring harness attached behind the pinch weld is present on passenger side of vehicle, remove hex nuts and drop harness down.



2. Starting on driver side, locate factory holes in pinch weld. Near front pair, remove rubber plug filling oval hole in bottom of rocker panel in front of two holes.



3. Partially thread 12mm Plastic Retainer onto 12mm Bolt Plate.

4. Insert Bolt Plate into hole and rotate 90-degrees to go across slot. Thread Plastic Retainer rest of way through Bolt Plate and fully tighten.

**NOTICE** Plastic Retainer is designed to prevent Bolt Plate from pushing up into body panel and to aid in Bracket installation.






OMIX-ADA, Inc.


460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## '11-16 Jeep Grand Cherokee Bonneville Running Boards

5. Secure Mounting Bracket to Bolt Plate with 12mm x 24mm Flat Washer and 12mm Serrated Flange Nut. Do not fully tighten.

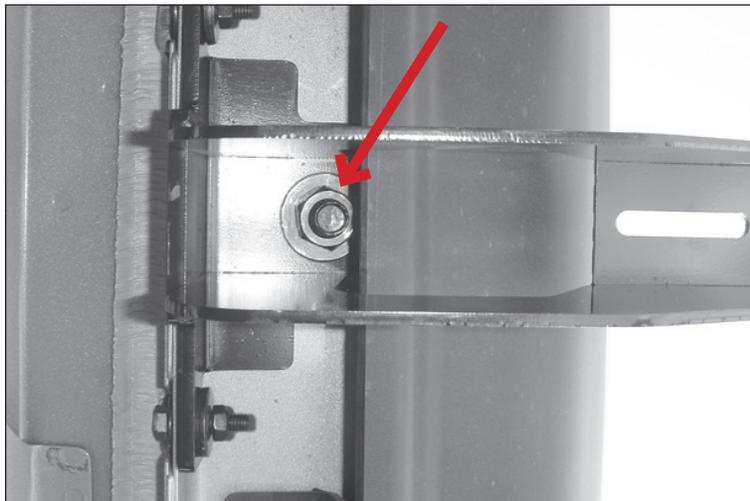

6. Align small slots in Mounting Bracket with holes in pinch weld. Place 6mm x 25mm Hex Bolt with 6mm x 18mm Std. Flat Washer through back of pinch weld and Bracket. Secure with 6mm x 22mm Large Flat Washer and 6mm Nylon Lock Nut. Do not fully tighten. Repeat for remaining mounting hole in Bracket and pinch weld.

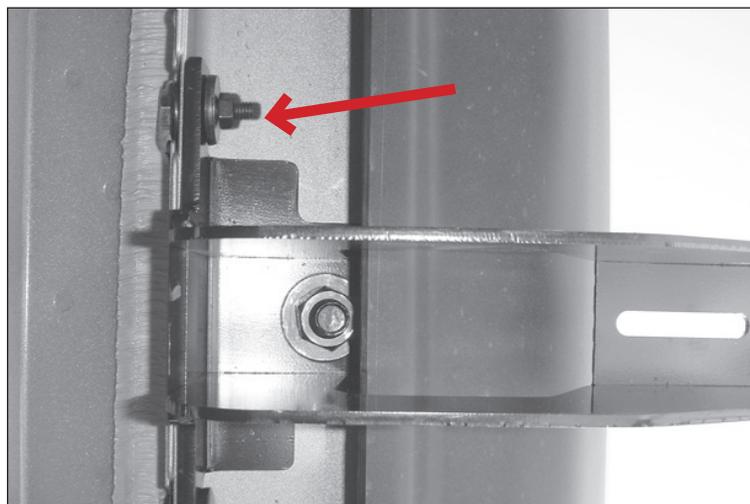

7. Repeat steps 2-6 for Center and Rear Brackets.

8. Insert 6mm T-Bolts into open ends of Running Board channels, (3 T-Bolts per channel), in bottom of Running Board, (Figure 10).

9. Slide T-Bolts into approximate position in line with the Mounting Brackets. Place Running Board in position on top of the Brackets. Align T-Bolts to drop into slots on Brackets.

**NOTICE** It may be necessary to lower Brackets to insert Running Board between Brackets and vehicle. Loosen hardware as necessary.





OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## '11-16 Jeep Grand Cherokee Bonneville Running Boards

10. Secure Running Board to Brackets with 6mm x 22mm Large Flat Washers, 6mm Lock Washers, and 6mm Hex Nuts, (Figure 11). Do not fully tighten.

11. Adjust and level Running Board and fully tighten all hardware.



12. Repeat Steps 2-11 for passenger/right Running Board installation.

13. Do periodic inspections to installation to ensure all hardware is secure and tight.



To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Boards.

**For gloss black finishes:** Mild soap may be used to clean Running Boards.