


# 1911X

07-12 CHEVY  
SILVERADO



# 1911X

07-12 CHEVY  
SILVERADO

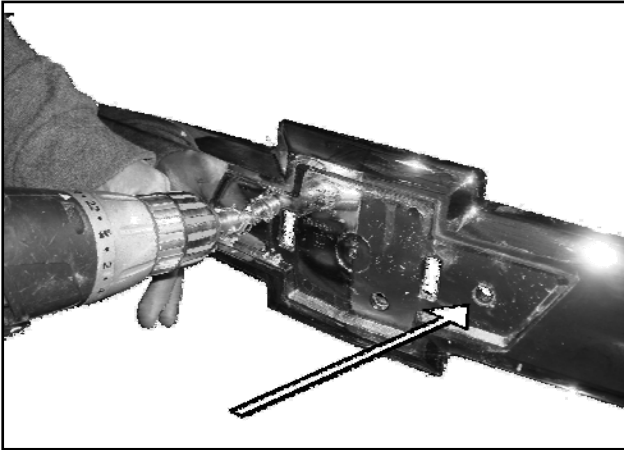

Bowtie is larger than OE bowtie  
Install mounting studs on bowtie  
Center bowtie on grille (mounting studs center close to OE holes but will not fit)  
Mark the area needed for mounting holes  
Use a drill bit to enlarge / drill holes in bowtie area (see arrow in picture)  
Center bowtie onto grille shell (slide studs into mounting holes)  
Install washers and nuts from behind shell