25211-25211B

2015 GMC Sierra 2500/3500 HD



25211-25211B

2015 GMC Sierra 2500/3500 HD

2015 GMC Sierra 2500/ 3500 HD

Billet Bumper Grille Insert

TOOLS REQUIRED:

Phillips Screwdriver Drill

PARTS LIST

- 2- Mounting bracket hooks
- 4- #8 u-nuts
- 4-#8 1" 6 Head screws
- 2-3/4" self drilling screw
- 2-#8 flat nut



NOTE:

- We recommend painting all areas exposed behind grille black prior to installing for best results.

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.


<u>Step 1</u>

Attach the two U Nuts to each side of the mounting brackets. (Fig 1)



Step 2

Place the bracket on the inside of the bumper opening. Drill a 3/16" hole thru the plastic using the bracket as a guide. Secure on the back of the plastic with the flat nut and screw bract into place with the #10 screws. (Fig 2)

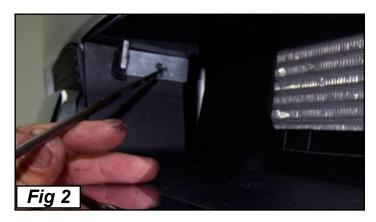

25211-25211B

2015 GMC Sierra 2500/3500 HD



25211-25211B

2015 GMC Sierra 2500/3500 HD

Step 3

Insert grille assembly into bumper opening. Secure with the four #8 screws into the U Nuts. (Fig 3)



Step 4

Your installation is now complete. (Fig 4)

