

<u>1 PC BILLET BUMPER</u>

Recommended Tools:


Parts List / Hardware:

Phillips Screw Drivers

- 1 Billet Inserts
- 4 #8 6 Head X 1 ¼" Screws
- 4 #8 U Nuts
- 4 1" J-Hooks

Read and understand instructions before attempting installation

<u>STEP 1</u>: Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the T-REX grille to the vehicles factory openings. You are now ready for the install:

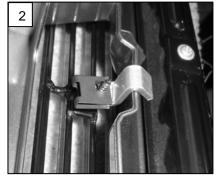

STEP 2: Open the hood of the vehicle. Insert the new grille into the factory bumper opening. With the grille centered; place the provided screws from the front side of the grille into the provided J-Hook (2).

Thank you for purchasing your T-Rex billet grille. 03-24-08