

**45452  
47452  
2013 - 2014  
DODGE RAM  
2500/3500 HD**



**45452  
47452  
2013 - 2014  
DODGE RAM  
2500/3500 HD**

## **2013 DODGE RAM HD** **Mesh Bumper**

### **TOOLS REQUIRED:**

Flat/Phillips Screwdrivers  
Socket Set

### **PARTS LIST**


(3) 1/4" Lock Washers  
(3) 1/4" Hex bolts  
(1) Dodge Ram 2500 3500 Custom L Brackets  
(1) Bumper Mesh Grille



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at [tech@trexbillet.com](mailto:tech@trexbillet.com) to verify fitment or assist with tech questions. All other inquires can be directed to [info@trexbillet.com](mailto:info@trexbillet.com). In the event you do not have internet access please call 1-800-287-5900.

### **Step 1 Grille Removal**

Remove four plastic pop clips from the top of the plastic radiator cover (Fig 1). Remove the radiator cover. Remove four 10mm bolts from the top of the factory grille where it attached to the core support (Fig 2). Pull the factory grille from the bottom corner edges up and forward, there are several clips along the bottom of the factory grille that must release. Remove the factory grille.

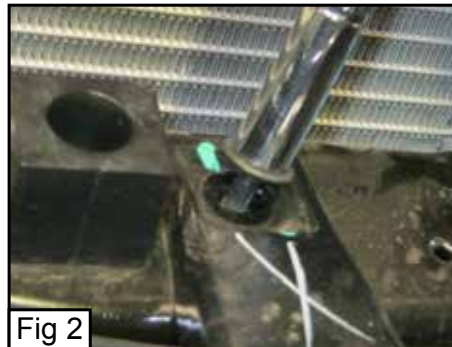

### **Step 2 Bumper Mesh Installation**

On the back edge of the factory bumper there are holes. Take the three bolts and washers and insert them through the holes in the bumper with the threads facing forward. Place the mesh grille in the back of the bumper up against the opening. Take the three brackets, place them on the inside of the bumper with the L facing forward and insert the threaded end of the bolts into the bracket where the threaded holes are and tighten. The brackets will hold tension on the mesh and keep it secure on the back of the bumper. Reinstall the factory grille. Installation complete.