55515 05-09 FORD **MUSTANG LX**



55515 05-09 FORD **MUSTANG LX**

05-09 Ford Mustang LX

Upper Class Bumper Grille

TOOLS REQUIRED: 8mm Socket & Ratchet

PARTS LIST:

- (6) 6/32" Nylon Lock Nuts
- (2) 1/2" L Brackets
- (2) Bone Brackets
- (1) Upper Class Bumper Grille

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE

INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.












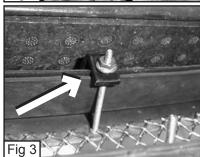

Step 1

Insert the bumper grille into the factory bumper opening. The six threaded studs will go through the slots in the black plastic of the factory bumper. (Fig 1)

Step 2

From underneath the vehicle install the bone brackets on the upper and lower threaded studs on the two sides of the grille. Put a 6/32" nylon lock nut on each of the threaded studs and tighten. (Fig 2) The two threaded studs in the center of the grille will need a 1/2" L bracket installed onto them with the bent part latched over the edge of the factory bumper. Install a 6/32" nylon lock nut on top of the L bracket and tighten. (Fig 3) Installation complete.