



### **PARTS INCLUDED**

(1) Torch Grille - Main

Black - Part #6317851 OR Stealth - Part #6317851-BR

### **HARDWARE INCLUDED**

(1) Logo Mount Backing Plate

- (1) Logo Mount w/ Camera Backing Plate
- (6) #8 x 3/4" (Black) Screws
- (4) #6-32 Flange Nuts
- (2) #8 U-Nut / Speed Nuts
- (2) #8 Flat Nuts
- (2) #10 1" Screws
- (2) #10 Flat Nuts
- (2) Retainer Strips
- (2) 3/4" Brackets
- (2) 1" L Brackets
- (1) Grille Bracket A
- (1) Grille Bracket B

### **TOOLS REQUIRED**

- Drill & Drill Bit Set
- Screwdriver set (Flat Head)
- Socket Set
- Ratchet Tool
- 1/2" Plastic Spatula
- Flash Light

### **GRILLE REMOVAL & GRILLE INSTALLATION GUIDE**

**TORCH MAIN GRILLE** 

MAIN GRILLE - #6317851 / # 6317851-BR

**2016 NISSAN TITAN** 

#### START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment and assist with technical questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

\* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS. \* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR GRILL.

#### STEP 1

1) Turn off engine and chalk tires. Open Hood. Disconnect Battery

### PRO TIP:

Before you begin, use "3M Painters Tape" to apply a protective guard around the work areas. Attend to the fender and bumper valance. This will help protect the paint and finish of your vehicle.

SEE FIGURES 1 & 2

#### STEP 2

2) The grille will need to come off and be fully disassembled.

It will be removed as one piece as seen in Figure #2.



### **GRILLE REMOVAL - CONTINUED**

## **TORCH MAIN GRILLE** MAIN GRILLE - #6317851 / # 6317851-BR **2016 NISSAN TITAN**







#### STEP 3

SEE FIGURES 3 - 5

STEP 4

3) Begin by slipping off the top plastic shroud away and free from the tab fasteners.

4) Be careful as all panels and clips may be fragile. Use finesse rather than force.



#### STEP 5

#### SEE FIGURES 6 - 8

5) Identify and remove the screws that secure the OEM Factor Grille Structure to the front of the vehicle.

#### STEP 6

SEE FIGURES 9 - 14

6) With the Grille Structure somewhat loose, you will need to identify and pull free a number of tab fastener retaining clips that hold the bottom of the Grille Structure in place.

#### STEP 7

7) Check for any sensors, plugs, or wires that may be still connected depending on your vehicle model. The headlight plastic body panel should now loose. You may need to coax the Grille Shell off the catch tabs to remove completely.

### **GRILLE REMOVAL PROCESS COMPLETE**





### **FREE UP TAB FASTENERS**



### **GRILLE DISASSEMBLY - START**

# **TORCH MAIN GRILLE**

#### MAIN GRILLE - #6317851 / # 631 '851-BR 20



#### SEE FIGURE 12 - 13

FIG 13 **FIG 14** 

#### **STEP 9**

SEE FIGURES 12 - 14

8) The Grille Structure should now be totally free from all mounts and





**FIG 16** 

#### STEPS 10 - 11

**STEP 8** 

SEE FIGURES 15 - 16

10) Set Factory Grille aside and place it face down on a flat cushioned surface.

11) It is now time to disassemble the Grille from the Grille Shell.

SEE FIGURES 17 - 20







SEE FIGURES 17 - 20

12) Identify the inner Grille Shell Skeleton Frame. Remove all the screws and set aside.



**REMOVE INNER GRILLE FRAME** 





### **CONTINUE GRILLE DISASSEMBLY**

### **GRILLE DISASSEMBLY - CONTINUED**

# **TORCH MAIN GRILLE**

#### MAIN GRILLE - #6317851 / # 6317851-BR 2016 NISS

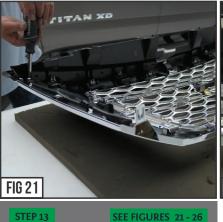



15) At this point, you will begin the steps

to separate the Factory Grille Insert from

the OEM Grille Shell.





SEE FIGURES 21 - 26

#### STEP 14

14) There are multiple screws and also small tabs that secure the Plastic Shroud to the Grille Shell Structure. As seen in Figures # 24 & #25, carefully pop free the tabs and set aside the Plastic Shroud to be re-installed later.







#### STEP 16

16) Identify and remove the screws that secure and fasten the Grille Insert to the Shell.

### **CONTINUE GRILLE DISASSEMBLY**

### **GRILLE DISASSEMBLY - CONTINUED**

## **TORCH MAIN GRILLE** MAIN GRILLE - #6317851 / # 6317851-BR

# **2016 NISSAN TITAN**



STEP 17

17) Identify the tabs that clip into the Grille Shell Frame.

SEE FIGURES 30 - 31



**BUMPER FRONT FASCIA - GRILLE INSTALLATION** STEP 18

**FIG 32** 

**SEE FIGURE 32** 

18) Once the tabs are popped free, the Grille should now be free to be removed from the Grille Shell. Set aside Grille Insert and continue disassembling the Grille Shell.









### **REMOVE OEM LOGO BADGE**

#### STEP 20

SEE FIGURES 37 - 38

20) Your new T-REX Grille requires use of the Factory Logo Badge. Turn back to the removed Grille Insert and begin removing the Logo Badge.

**BUMPER FRONT FASCIA - GRILLE INSTALLATION** STEP 19

SEE FIGURES 33 - 35

19) Turn to the OEM Factory Grille Shell Side opening's Rear Covers. Remove the Screws and pop the Tabs Free.

The Grille Shell should now be completely stripped down.

**SEE FIGURE 36** 





### **CONTINUE GRILLE DISASSEMBLY**

### **BADGE INSTALL - START**

# **TORCH MAIN GRILLE**

### MAIN GRILLE - #6317851 / # 6317851-BR 2016 NISSAN TITAN



21) Using a broad flat head screw driver, Pop the lower tab clip from the Grille Pattern.

**SEE FIGURE 39** 

STEP 21



#### STEP 22

FIG 41 SEE FIGURES 40 - 41

22) From the front side, pull the OEM Logo Badge from the Logo Badge Mount while pushing the tabs through from the backside.





#### STEP 24

#### SEE FIGURES 44 - 47

24) Place the Factory Logo Badge onto the face of the new T-REX Grille Insert. From the backside place the provided Retainer Strip and press them onto the Logo Badge Mounting Tabs. Secure it somewhat tight by using a pair of pliers and pressing firmly down.







#### STEP 23

#### SEE FIGURES 42 - 43

23) Determine if your vehicle model is equipped with a Forward Facing Camera. If your vehicle model is equipped, then you will select the provided T-REX Logo Badge Backing Plate that features the camera lens cutout (as seen in Figures #42 & #43).

If your vehicle model is not equipped with a forward facing camera, then you will select the provided T-REX Logo Badge Backing Plate without the camera lens cutout.

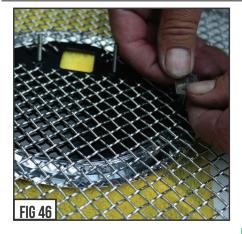

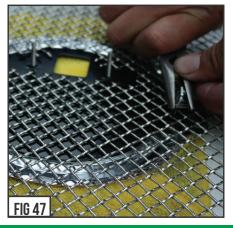

### **BADGE INSTALL - COMPLETE**

### **GRILLE ASSEMBLY - START**

# **TORCH MAIN GRILLE**

### MAIN GRILLE - #6317851 / # 6317851-BR 2016 NISSAN TITAN





25) It is now time to put into place the new T-REX Insert. Carefully position it square and center with the OEM Grille Shell Frame.

STEP 25

**SEE FIGURE 48** 

STEP 26

26) Align the Factory Grille Shell mounts so that they accept and line up with the T-REX Grille Frame's Cutout Tabs and mounts as seen in Figure #29.







#### SEE FIGURES 50 - 52

SEE FIGURE 49

27) With the T-REX Grille properly aligned, put into place the provided screws where the pre-determined mounting tabs locate to the OEM Grille Shell. Fix the screws and secure them in place by using the provided Flat Nuts.





### **GRILLE ASSEMBLY - CONTINUED**



#### **STEP 28**

#### SEE FIGURES 53 - 55

28) Turn to the top of the T-REX Grille, and take the provided 1" L Brackets and secure them into place as seen in Figures #53-55 with the (2) 1" Screws.

### **GRILLE ASSEMBLY - CONTINUED**

### **TORCH MAIN GRILLE** MAIN GRILLE - #6317851 / # 6317851-BR 2016 NISSAN TITAN



STEP 30



SEE FIGURES 56 - 57

29) It is now time to re-install the Factory Plastic Top Shroud Cover.

30) Align the factory mounting holes so that the OEM Factory Grille Shell Tabs protrude through the openings as seen in Figure #57.





**STEP 33** 

SEE FIGURE 62 - 63

33) T-REX Grille Side unit fitted in place, position the provided Grille Brackets so that it will pinch the mesh grille into position and secure bracket with a single screw and a second screw in Step 35.





PREP AND MOUNT BRACKETS TO PLASTIC SHROUD STEPS 31 - 32

SEE FIGURES 58 - 60

31) Using the U-Nuts as a gauge to measure approximately where to drill. Use a 1/8" Drill Bit and drill a hole through the Plastic Shroud but do not drill deeper as to not penetrate the OEM Grille Shell. **SEE FIGURE 61** 

Put into place the U-Nut as seen in Figure #60.





### **GRILLE ASSEMBLY - CONTINUED**

### **GRILLE ASSEMBLY - CONTINUED**

## **TORCH MAIN GRILLE** MAIN GRILLE - #6317851 / # 6317851-BR **2016 NISSAN TITAN**




SEE FIGURES 64 - 66

**STEP 34** 

34) Secure the bottom side of the side mesh grille with the Black 3/4" L Bracket. Use the Bracket to Gauge the drill hole. Use a 1/8" Drill Bit and drill through the OEM Plastic Grille Shell.



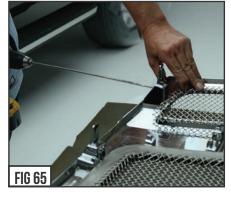



#### STEP 35





#### SEE FIGURES 67 - 69

35) Secure the Bracket into position by slipping a screw into position and tighten down with a Flat Nut on the backside.

With the Side Mesh positioned and aligned, Go back to Step 33 and reference Figures #62 & #63 and secure a second Screw so the bracket is pinned and will not slip out of place.

### **REPEAT SIDE GRILLE MOUNTING PROCESS ON OPPOSITE SIDE**

### **REMOVE CLIPS FROM FRONT OF VEHICLE**







#### STEP 36

SEE FIGURES 70 - 72

36) Before you begin mounting the Grille to the nose of the vehicle, you will need to turn back to the front of the truck and remove the plastic clips fixed along the sides of the grille opening. There are (10) total, (6) on the top, and (2) on the each side.

Carefully remove them without damaging the clips.

### **GRILLE ASSEMBLY - CONTINUED**

### **GRILLE ASSEMBLY - CONTINUED**


## TORCH MAIN GRILLE MAIN GRILLE - #6317851 / # 6317851-BR 2016 NISSAN TITAN



STEP 37

SEE FIGURES 73 - 75

37) It is now time to re-install the side pocket shrouds. Put them into place and using the removed hardware secure the plastic shrouds into place fix the mounting tabs back into position.

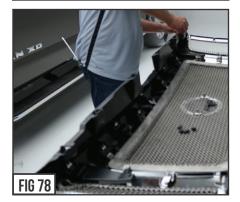

### **GRILLE INSTALL START**





#### STEP 38





#### SEE FIGURES 76 - 78

38) Use the (8) Plastic Clips that were removed from the nose of the truck. Insert each Plastic Clip onto the assembled Grille Shell mounting points. They will be put into place, (6) across the top, and (2) on each side.

Inspect the new T-REX Grille alignment with the Grille Shell. Check for proper gaps and alignment along all edges.







#### STEP 39

SEE FIGURES 79 - 81

39) It is now time to mount the fully assembled Grille and align the mounting points to be received onto the nose of the front of the vehicle. Starting out the bottom first and using the reverse order of Grille Removal, carefully put back into place around the head lamp area making sure to align with tab fasteners and then firmly press into place. Plug any sensor connections and wiring looms that were disconnected. Place plastic radiator shroud cover over core support and fix Tabs into position.

### **GRILLE INSTALL - COMPLETE**

## **TORCH MAIN GRILLE** MAIN GRILLE - #6317851 / # 6317851-BR **2016 NISSAN TITAN**

### **INSPECT YOUR WORK**





#### STEP 40

#### SEE FIGURES 82 - 84

40) At this point you want to look over your work and examine the gap alignments around all edges and in between the new T-REX Grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. If adjustment is needed, you can remove grille and shift side to side or up & down to achieve proper look.

### **INSTALLATION COMPLETE**



### T-REX GRILLES PRODUCT WARRANT

#### **T-REX GRILLES PRODUCT WARRANTY**

T-REX Truck Products warrants its grille products to be free from defects in material and workmanship for the lifetime of the grille. T-REX Truck Products warrants the finish of its grille products for a 3 year period beginning at the time of sale to the end user. These warranties are limited warranties and do not cover abuse, modification or improper installation nor do they cover finish failure caused by caustic cleaning agents, road salts or other chemicals. T-REX Truck Products reserves the right to repair or replace a defective product at its sole discretion. Any T-REX product must be returned to T-REX for warranty consideration and must be returned at the customer's expense. In the event that the product is deemed to be defective, the repaired or replaced item will be returned via a surface shipping method to the customer at T-REX Truck Products expense. No provision is made for any labor, rental car or other costs incurred by the failure of its products.

#### LED LIGHTING EQUIPMENT INSTALLATION / DISCLAIMER

#### WARNING

PLEASE CONSULT YOUR LOCAL AUTOMOTIVE ELECTRICAL PROFESSIONAL FOR INSTALLATION SERVICES AND ADVICE. T-REX IS ONLY EQUIPPED TO PROVIDE BASIC TECHNICAL ASSISTANCE DUE TO THE DIVERSITY OF VEHICLES, VEHICLE OPTIONS & MODIFICATIONS AND LIGHTING CONFIGURATION OPTIONS AVAILABLE. T-REX Truck Products cannot be held liable due to improper component installation and / or faulty wiring.

#### GENERAL GUIDELINES

LED Lights & LED Light Bars operate at relatively high currents and should only be installed by qualified personnel with experience in switched / relayed high draw DC Circuits.

- Light Bars are designed for use only with standard 12v DC power systems
- Light Bars are for OFF-ROAD USE ONLY. Check your local laws & regulations regarding vehicle mounted lights.
- Some Light Bars are equipped with waterproof connectors while others are simply pig-tailed Red Wires = POSITIVE | Black Wires = NEGATIVE
- ALWAYS install your lights on a fused circuit. Basic fusing guidelines: maximum 5A for every 10" of LED Light Bar.

#### GENERAL USE, INSTALL AND ADJUSTMENT TIPS

NOTE 1: T-REX Torch Series Grilles (with LED Light Bars installed), and LED Light Bars themselves are for OFF-ROAD USE ONLY. NOTE 2: Light Bars in Torch Series Grilles are installed flush with the grille from the factory. This may or may not be the ideal angle for each light depending on the configuration of your vehicle and its options and/or modifications. To adjust the angle of your light bars simply loosen the mounting hardware on either side of each Light Bar, rotate the Light Bar to adjust the angle, then tighten the hardware once the desired angle is achieved (please be careful not to over-tighten the mounting hardware or scratch the protective powder-coat finish). It is best to adjust the angle with the vehicle on level ground with the lights facing a wall, garage door or other solid barrier at a distance of approximately 25-30 feet. NOTE 3: Please consult a qualified automotive electrical professional for light bar wiring installation.

NOTE 4: An optional universal wiring harness (part# 639HAR1) is also available that includes high-heat & oil/fuel resistant wires, waterproof connector, 12v relay, 12v rocker switch, inline fuse holder. Our universal wiring harness significantly expedites the installation process but is not a vehicles specific "Plug & Play" product and does not eliminate the need for a professional installation.

Please contact your local T-REX dealer for more information or visit www.trexbillet.com.

### GRILLE CARE INFORMATION

#### **GRILLE CARE INFORMATION**

T-REX grilles are finest in the industry but do require normal care. Wash regularly as you would when caring for your vehicles. Never use dish soap.

#### POLISHED FINISH

T-REX polished grilles should be waxed at the same time that you wax the vehicle and can be cleaned with soap and water. A polished finish can be cared for in the same fashion that would care for your vehicles factory chrome. Never leave wet water spots as that may leave a blemish.

#### MATTE BLACK FINISH

Paint warranty applies to defects in material and / or workmanship, it does not cover the matte finish surface appearance.

To enjoy the matte appearance for many years to come, please follow these owner care and maintenance tips. Get a no-shine matte car wash soap that uses no fillers, no silicone, and won't strip your matte paint of its layer of protection.

Do not use wax, detail spray, armorall®, or any products made for normal paint. Use only products specifically developed for matte finish paint. Do not use products that are even mildly abrasive, such as polishes, glazes, or rubbing compounds. do not use mechanical cleaners or polishers. Do not use terrycloth, cloth, or paper towels. Do not rub the finish vigorously, this will burnish the paint finish, causing a permanent shiny spot. Shiny spots cannot be removed.

Do not use commercial car wash facilities or their shine enhancement products. Most car wash brushes, large mechanized "towels," and shine enhancement products can damage matte paint.

Remove foreign substances such as insect remains, tar, and road debris using a soft applicator and a mild solvent; saturate and soak area before cleaning-rub lightly.

Hand-wash with a soft wash mitt and mild cleaning product safe for matte paint. Use microfiber cleaning cloths with alcohol-based window cleaner for basic surface clean-up.

#### **GLOSS BLACK FINISH**

T-REX Grilles with Gloss Black Powder Coated Finish may be washed regularly as you would when caring for your vehicles finish using soap and water. T-REX grilles should be waxed at the same time that you wax the vehicle. As a general rule, anything you use to clean your vehicles painted surfaces can be used to clean and maintain your T-REX grille. A Gloss powder Coated Finish can be cared for in the same fashion that you would care for your vehicles factory paint job. Never leave wet water spots as that may leave a blemish.