

T-REX

GRILLES



X-METAL MAIN GRILLE

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR

2016 NISSAN TITAN

PARTS INCLUDED

- (1) X-Metal Grille - Main Polished - Part #6717850 OR Black - Part #6717851 OR Stealth - Part #6717851-BR

HARDWARE INCLUDED

- (1) Logo Mount Backing Plate
- (1) Logo Mount w/ Camera Backing Plate
- (6) #8 x 3/4" (Black) Screws
- (4) #6-32 Flange Nuts
- (2) #8 U-Nut / Speed Nuts
- (2) #8 Flat Nuts
- (2) #10 1" Screws
- (2) #10 Flat Nuts
- (2) Retainer Strips
- (2) 3/4" Brackets
- (2) 1" L Brackets
- (1) Grille Bracket A
- (1) Grille Bracket B

TOOLS REQUIRED

- Drill & Drill Bit Set
- Screwdriver set (Flat Head)
- Socket Set
- Ratchet Tool
- 1/2" Plastic Spatula
- Flash Light

GRILLE REMOVAL & GRILLE INSTALLATION GUIDE

START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment and assist with technical questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS.
* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR GRILL.

STEP 1

- 1) Turn off engine and chalk tires. Open Hood. Disconnect Battery

PRO TIP:

Before you begin, use "3M Painters Tape" to apply a protective guard around the work areas. Attend to the fender and bumper valance. This will help protect the paint and finish of your vehicle.

STEP 2

SEE FIGURES 1 & 2

- 2) The grille will need to come off and be fully disassembled.

It will be removed as one piece as seen in Figure #2.



FIG 1



FIG 2

X-METAL MAIN GRILLE

GRILLE REMOVAL - CONTINUED

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR
2016 NISSAN TITAN




STEP 3

SEE FIGURES 3 - 5

3) Begin by slipping off the top plastic shroud away and free from the tab fasteners.

STEP 4

4) Be careful as all panels and clips may be fragile. Use finesse rather than force.

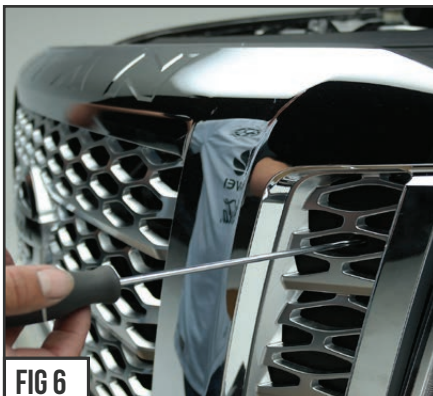

STEP 5

SEE FIGURES 6 - 8

5) Identify and remove the screws that secure the OEM Factor Grille Structure to the front of the vehicle.

STEP 6


SEE FIGURES 9 - 14

6) With the Grille Structure somewhat loose, you will need to identify and pull free a number of tab fastener retaining clips that hold the bottom of the Grille Structure in place.

STEP 7

7) Check for any sensors, plugs, or wires that may be still connected depending on your vehicle model. The headlight plastic body panel should now loose. You may need to coax the Grille Shell off the catch tabs to remove completely.

FREE UP TAB FASTENERS

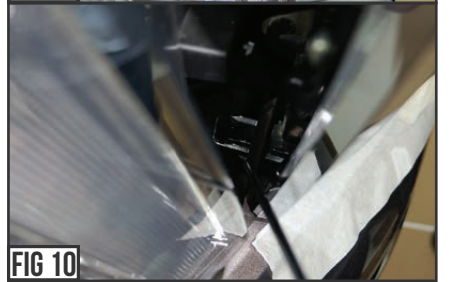

GRILLE REMOVAL PROCESS COMPLETE

X-METAL MAIN GRILLE

GRILLE DISASSEMBLY - START

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR

2016 NISSAN TITAN



STEP 8

SEE FIGURE 12 - 13

8) The Grille Structure should now be totally free from all mounts and fasteners.



STEP 9

SEE FIGURES 12 - 14

9) With a firm grasp pop the Grille Shell off and remove from the nose of the vehicle.



STEPS 10 - 11

SEE FIGURES 15 - 16

10) Set Factory Grille aside and place it face down on a flat cushioned surface.

11) It is now time to disassemble the Grille from the Grille Shell.

SEE FIGURES 17 - 20

REMOVE INNER GRILLE FRAME



STEP 12

SEE FIGURES 17 - 20

12) Identify the inner Grille Shell Skeleton Frame. Remove all the screws and set aside.

CONTINUE GRILLE DISASSEMBLY

X-METAL MAIN GRILLE

GRILLE DISASSEMBLY - CONTINUED

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR
2016 NISSAN TITAN

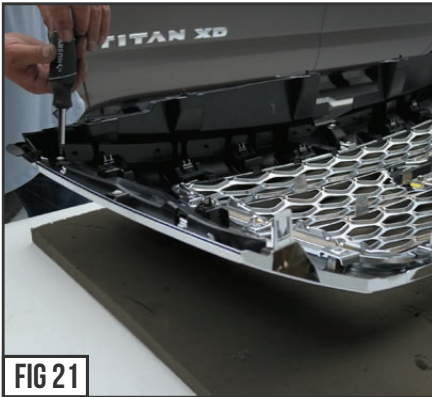


FIG 21

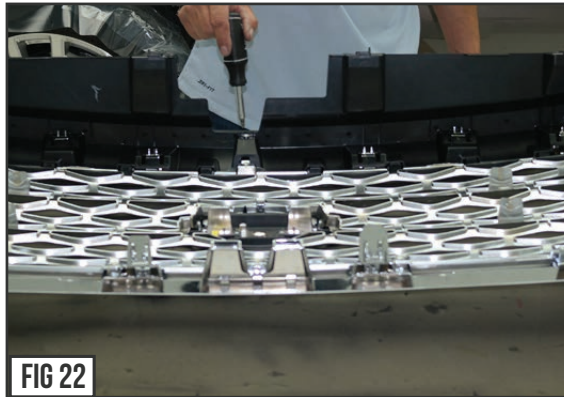


FIG 22



FIG 23

STEP 13

SEE FIGURES 21 - 26

13) It is now time to remove the top plastic cover shroud.

STEP 14

SEE FIGURES 21 - 26

14) There are multiple screws and also small tabs that secure the Plastic Shroud to the Grille Shell Structure. As seen in Figures # 24 & #25, carefully pop free the tabs and set aside the Plastic Shroud to be re-installed later.



FIG 24



FIG 25

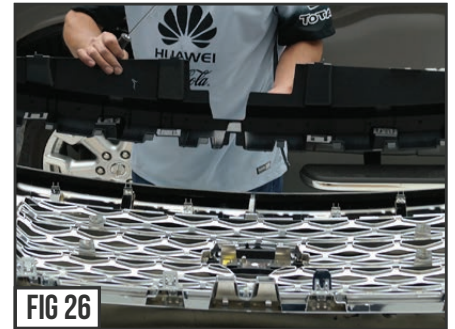


FIG 26

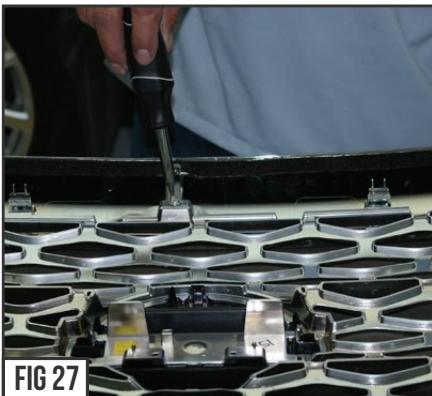


FIG 27



FIG 28



FIG 29

STEP 15

SEE FIGURES 27 - 29

15) At this point, you will begin the steps to separate the Factory Grille Insert from the OEM Grille Shell.

STEP 16

SEE FIGURES 28 - 29

16) Identify and remove the screws that secure and fasten the Grille Insert to the Shell.

CONTINUE GRILLE DISASSEMBLY

X-METAL MAIN GRILLE

GRILLE DISASSEMBLY - CONTINUED

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR
2016 NISSAN TITAN



FIG 30

STEP 17

SEE FIGURES 30 - 31

17) Identify the tabs that clip into the Grille Shell Frame.



FIG 31

STEP 18

SEE FIGURE 32

18) Once the tabs are popped free, the Grille should now be free to be removed from the Grille Shell. Set aside Grille Insert and continue disassembling the Grille Shell.



FIG 32



FIG 33

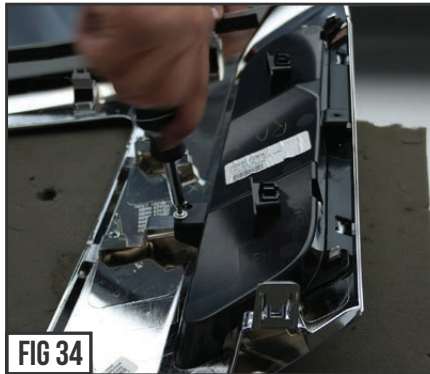


FIG 34



FIG 35



FIG 36

STEP 19

SEE FIGURES 33 - 35

19) Turn to the OEM Factory Grille Shell Side opening's Rear Covers. Remove the Screws and pop the Tabs Free.

The Grille Shell should now be completely stripped down.

SEE FIGURE 36

REMOVE OEM LOGO BADGE

STEP 20

SEE FIGURES 37 - 38

20) Your new T-REX Grille requires use of the Factory Logo Badge. Turn back to the removed Grille Insert and begin removing the Logo Badge.



FIG 37



FIG 38

CONTINUE GRILLE DISASSEMBLY

X-METAL MAIN GRILLE

BADGE INSTALL - START

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR
2016 NISSAN TITAN



FIG 39

STEP 21

SEE FIGURE 39

21) Using a broad flat head screw driver, Pop the lower tab clip from the Grille Pattern.

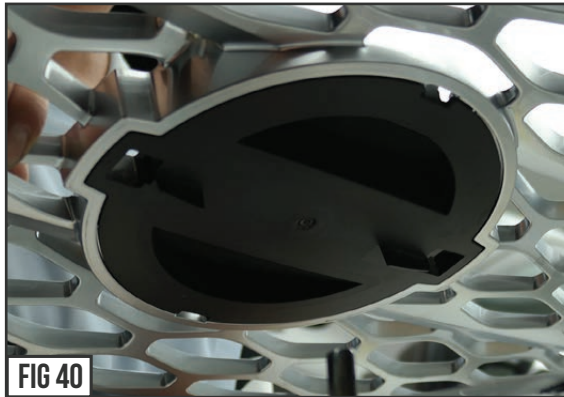


FIG 40

STEP 22

BUMPER FRONT FASCIA - GRILLE INSTALLATION

SEE FIGURES 40 - 41

22) From the front side, pull the OEM Logo Badge from the Logo Badge Mount while pushing the tabs through from the backside.

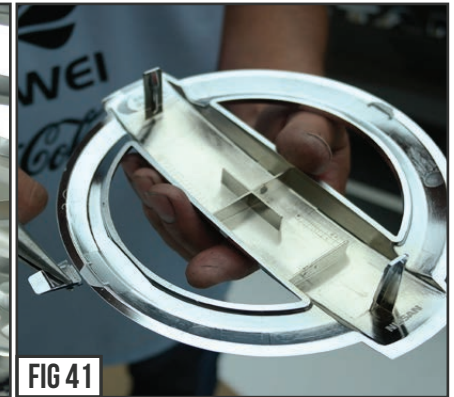


FIG 41



FIG 42



FIG 43



FIG 44

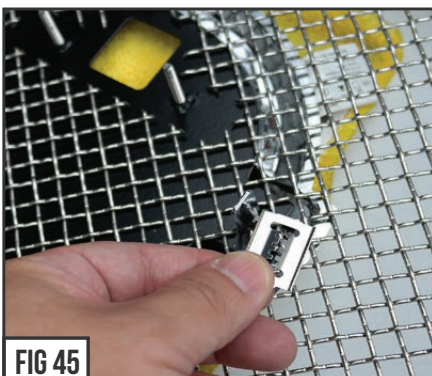


FIG 45

STEP 24

SEE FIGURES 44 - 47

24) Place the Factory Logo Badge onto the face of the new T-REX Grille Insert. From the backside place the provided Retainer Strip and press them onto the Logo Badge Mounting Tabs. Secure it somewhat tight by using a pair of pliers and pressing firmly down.

STEP 23

BUMPER FRONT FASCIA - GRILLE INSTALLATION

SEE FIGURES 42 - 43

23) Determine if your vehicle model is equipped with a Forward Facing Camera. If your vehicle model is equipped, then you will select the provided T-REX Logo Badge Backing Plate that features the camera lens cutout (as seen in Figures #42 & #43).

If your vehicle model is not equipped with a forward facing camera, then you will select the provided T-REX Logo Badge Backing Plate without the camera lens cutout.

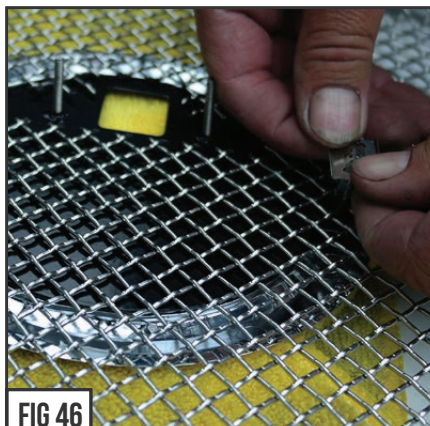


FIG 46

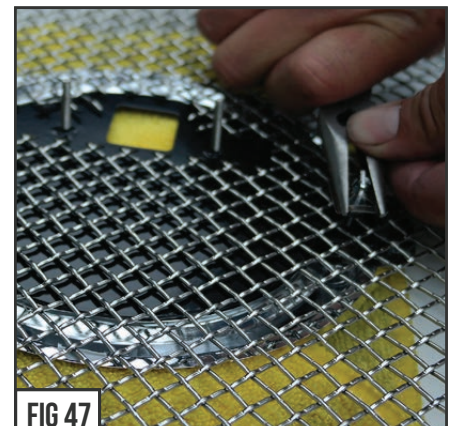


FIG 47

BADGE INSTALL - COMPLETE

X-METAL MAIN GRILLE

GRILLE ASSEMBLY - START

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR
2016 NISSAN TITAN



FIG 48

STEP 25

SEE FIGURE 48

25) It is now time to put into place the new T-REX Insert. Carefully position it square and center with the OEM Grille Shell Frame.

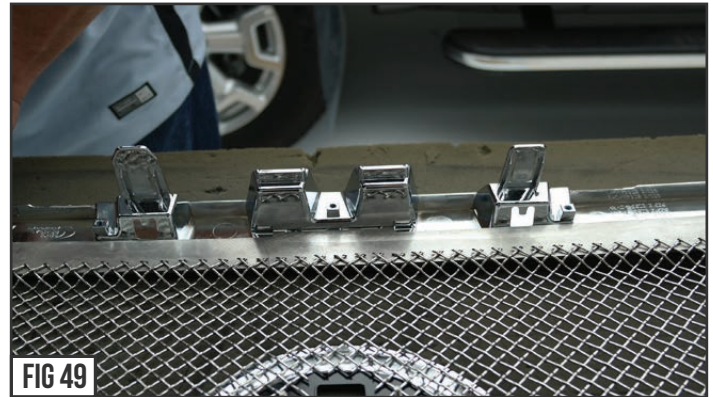


FIG 49

STEP 26

ALIGN THE T-REX GRILLE FRAME CUTOUT TABS

SEE FIGURE 49

26) Align the Factory Grille Shell mounts so that they accept and line up with the T-REX Grille Frame's Cutout Tabs and mounts as seen in Figure #29.



FIG 50



FIG 51



FIG 52



FIG 53

STEP 27

SEE FIGURES 50 - 52

27) With the T-REX Grille properly aligned, put into place the provided screws where the pre-determined mounting tabs locate to the OEM Grille Shell. Fix the screws and secure them in place by using the provided Flat Nuts.

STEP 28

SEE FIGURES 53 - 55

28) Turn to the top of the T-REX Grille, and take the provided 1" L Brackets and secure them into place as seen in Figures #53-55 with the (2) 1" Screws.



FIG 54





FIG 55

GRILLE ASSEMBLY - CONTINUED

X-METAL MAIN GRILLE

GRILLE ASSEMBLY - CONTINUED

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR
2016 NISSAN TITAN

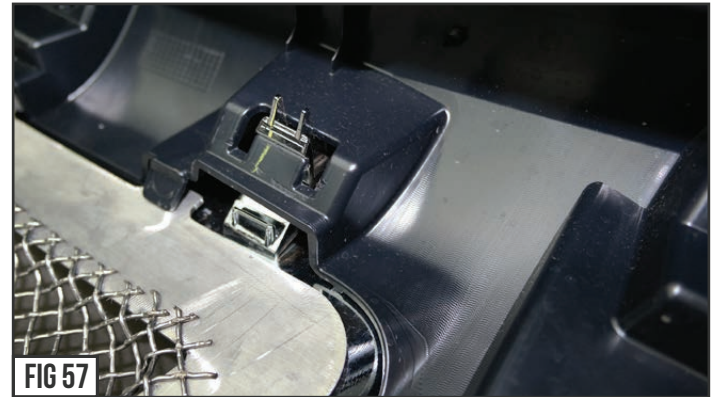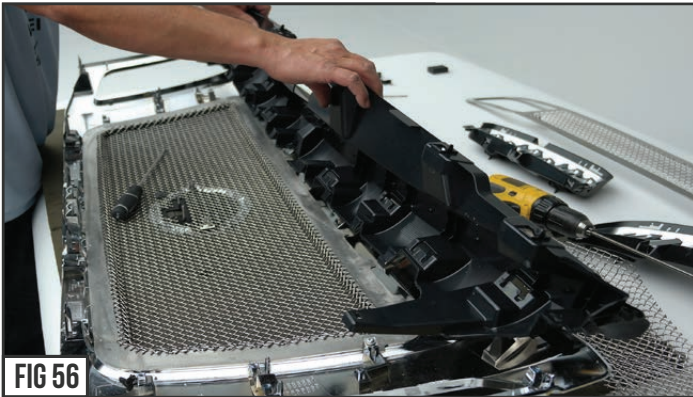

STEP 29


SEE FIGURES 56

29) It is now time to re-install the Factory Plastic Top Shroud Cover.

STEP 30

SEE FIGURES 56 - 57

30) Align the factory mounting holes so that the OEM Factory Grille Shell Tabs protrude through the openings as seen in Figure #57.

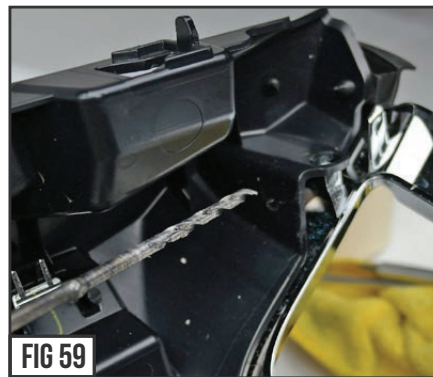

STEPS 31 - 32

PREP AND MOUNT BRACKETS TO PLASTIC SHROUD

SEE FIGURES 58 - 60

31) Using the U-Nuts as a gauge to measure approximately where to drill. Use a 1/8" Drill Bit and drill a hole through the Plastic Shroud but do not drill deeper as to not penetrate the OEM Grille Shell.

SEE FIGURE 61



Put into place the U-Nut as seen in Figure #60.

32) Put into place the provided T-REX Grille Side unit. Make sure the Driver Side and Passenger Side

STEP 33

SEE FIGURE 62 - 63

33) T-REX Grille Side unit fitted in place, position the provided Grille Brackets so that it will pinch the mesh grille into position and secure bracket with a single screw and a second screw in Step 35.

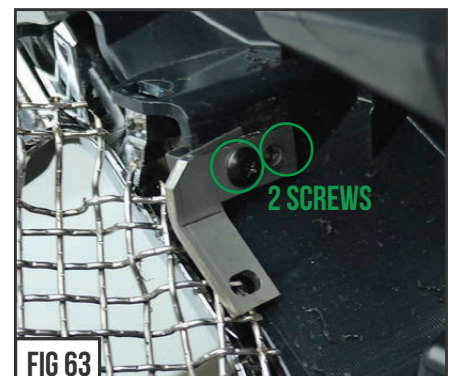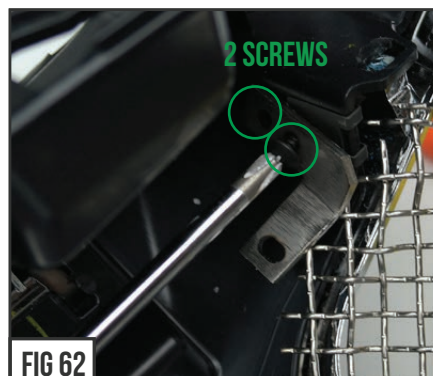


GRILLE ASSEMBLY - CONTINUED

X-METAL MAIN GRILLE

GRILLE ASSEMBLY - CONTINUED



MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR
2016 NISSAN TITAN

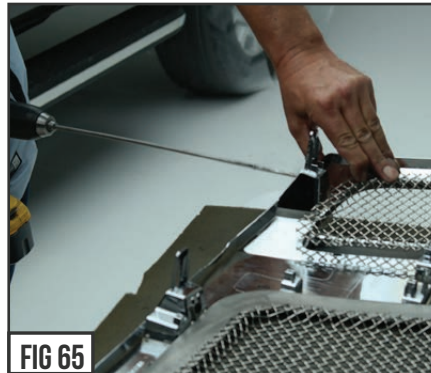

STEP 34

SEE FIGURES 64 - 66

34) Secure the bottom side of the side mesh grille with the Black 3/4" L Bracket. Use the Bracket to gauge the drill hole. Use a 1/8" Drill Bit and drill through the OEM Plastic Grille Shell.

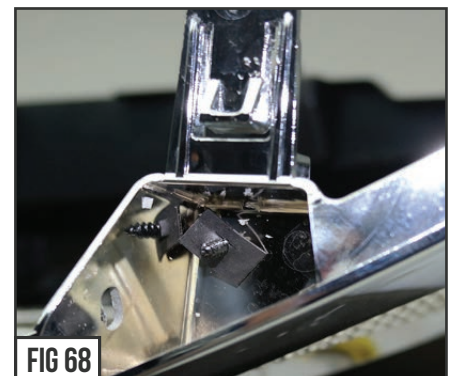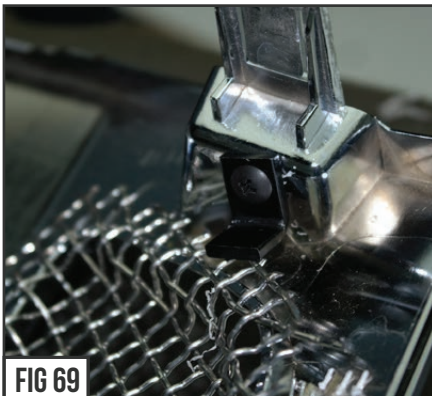

STEP 35


SEE FIGURES 67 - 69

35) Secure the Bracket into position by slipping a screw into position and tighten down with a Flat Nut on the backside.

With the Side Mesh positioned and aligned, Go back to Step 33 and reference Figures #62 & #63 and secure a second Screw so the bracket is pinned and will not slip out of place.

REPEAT SIDE GRILLE MOUNTING PROCESS ON OPPOSITE SIDE

REMOVE CLIPS FROM FRONT OF VEHICLE

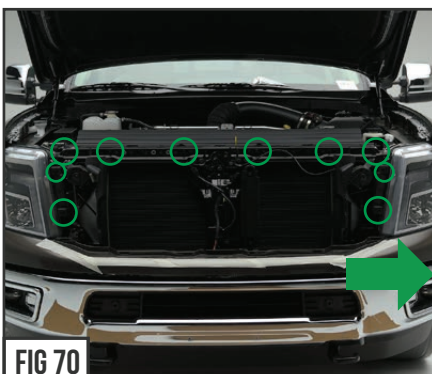

STEP 36

SEE FIGURES 70 - 72

36) Before you begin mounting the Grille to the nose of the vehicle, you will need to turn back to the front of the truck and remove the plastic clips fixed along the sides of the grille opening. There are (10) total, (6) on the top, and (2) on the each side.

Carefully remove them without damaging the clips.

X-METAL MAIN GRILLE

GRILLE ASSEMBLY - CONTINUED

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR
2016 NISSAN TITAN



FIG 73



FIG 74



FIG 75

STEP 37

SEE FIGURES 73 - 75

37) It is now time to re-install the side pocket shrouds. Put them into place and using the removed hardware secure the plastic shrouds into place fix the mounting tabs back into position.



FIG 76



FIG 77

STEP 38

SEE FIGURES 76 - 78

38) Use the (8) Plastic Clips that were removed from the nose of the truck. Insert each Plastic Clip onto the assembled Grille Shell mounting points. They will be put into place, (6) across the top, and (2) on each side.

Inspect the new T-REX Grille alignment with the Grille Shell. Check for proper gaps and alignment along all edges.

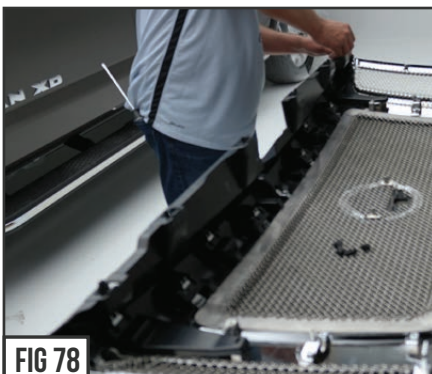


FIG 78

GRILLE INSTALL START



FIG 79



FIG 80



FIG 81

STEP 39

SEE FIGURES 79 - 81

39) It is now time to mount the fully assembled Grille and align the mounting points to be received onto the nose of the front of the vehicle. Starting out the bottom first and using the reverse order of Grille Removal, carefully put back into place around the head lamp area making sure to align with tab fasteners and then firmly press into place. Plug any sensor connections and wiring looms that were disconnected. Place plastic radiator shroud cover over core support and fix Tabs into position.

X-METAL MAIN GRILLE

INSPECT YOUR WORK

MAIN GRILLE - #6717850 / #6717851 / # 6717851-BR

2016 NISSAN TITAN



STEP 40

SEE FIGURES 82 - 84

40) At this point you want to look over your work and examine the gap alignments around all edges and in between the new T-REX Grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. If adjustment is needed, you can remove grille and shift side to side or up & down to achieve proper look.

INSTALLATION COMPLETE



T-REX GRILLES PRODUCT WARRANTY

T-REX GRILLES PRODUCT WARRANTY

T-REX Truck Products warrants its grille products to be free from defects in material and workmanship for the lifetime of the grille. T-REX Truck Products warrants the finish of its grille products for a 3 year period beginning at the time of sale to the end user. These warranties are limited warranties and do not cover abuse, modification or improper installation nor do they cover finish failure caused by caustic cleaning agents, road salts or other chemicals. T-REX Truck Products reserves the right to repair or replace a defective product at its sole discretion. Any T-REX product must be returned to T-REX for warranty consideration and must be returned at the customer's expense. In the event that the product is deemed to be defective, the repaired or replaced item will be returned via a surface shipping method to the customer at T-REX Truck Products expense. No provision is made for any labor, rental car or other costs incurred by the failure of its products.

LED LIGHTING EQUIPMENT INSTALLATION / DISCLAIMER

WARNING

PLEASE CONSULT YOUR LOCAL AUTOMOTIVE ELECTRICAL PROFESSIONAL FOR INSTALLATION SERVICES AND ADVICE. T-REX IS ONLY EQUIPPED TO PROVIDE BASIC TECHNICAL ASSISTANCE DUE TO THE DIVERSITY OF VEHICLES, VEHICLE OPTIONS & MODIFICATIONS AND LIGHTING CONFIGURATION OPTIONS AVAILABLE. T-REX Truck Products cannot be held liable due to improper component installation and / or faulty wiring.

GENERAL GUIDELINES

LED Lights & LED Light Bars operate at relatively high currents and should only be installed by qualified personnel with experience in switched / relayed high draw DC Circuits.

- Light Bars are designed for use only with standard 12v DC power systems
- Light Bars are for OFF-ROAD USE ONLY. Check your local laws & regulations regarding vehicle mounted lights.
- Some Light Bars are equipped with waterproof connectors while others are simply pig-tailed
- Red Wires = POSITIVE | Black Wires = NEGATIVE
- ALWAYS install your lights on a fused circuit. Basic fusing guidelines: maximum 5A for every 10" of LED Light Bar.

GENERAL USE, INSTALL AND ADJUSTMENT TIPS

NOTE 1: T-REX Torch Series Grilles (with LED Light Bars installed), and LED Light Bars themselves are for OFF-ROAD USE ONLY.

NOTE 2: Light Bars in Torch Series Grilles are installed flush with the grille from the factory. This may or may not be the ideal angle for each light depending on the configuration of your vehicle and its options and/or modifications. To adjust the angle of your light bars simply loosen the mounting hardware on either side of each Light Bar, rotate the Light Bar to adjust the angle, then tighten the hardware once the desired angle is achieved (please be careful not to over-tighten the mounting hardware or scratch the protective powder-coat finish). It is best to adjust the angle with the vehicle on level ground with the lights facing a wall, garage door or other solid barrier at a distance of approximately 25-30 feet.

NOTE 3: Please consult a qualified automotive electrical professional for light bar wiring installation.

NOTE 4: An optional universal wiring harness (part# 639HAR1) is also available that includes high-heat & oil/fuel resistant wires, waterproof connector, 12v relay, 12v rocker switch, inline fuse holder. Our universal wiring harness significantly expedites the installation process but is not a vehicles specific "Plug & Play" product and does not eliminate the need for a professional installation.

Please contact your local T-REX dealer for more information or visit www.trexbilliet.com.

GRILLE CARE INFORMATION

GRILLE CARE INFORMATION

T-REX grilles are finest in the industry but do require normal care. Wash regularly as you would when caring for your vehicles. Never use dish soap.

POLISHED FINISH

T-REX polished grilles should be waxed at the same time that you wax the vehicle and can be cleaned with soap and water. A polished finish can be cared for in the same fashion that would care for your vehicles factory chrome. Never leave wet water spots as that may leave a blemish.

MATTE BLACK FINISH

Paint warranty applies to defects in material and / or workmanship, it does not cover the matte finish surface appearance.

To enjoy the matte appearance for many years to come, please follow these owner care and maintenance tips.

Get a no-shine matte car wash soap that uses no fillers, no silicone, and won't strip your matte paint of its layer of protection.

Do not use wax, detail spray, armorall®, or any products made for normal paint. Use only products specifically developed for matte finish paint. Do not use products that are even mildly abrasive, such as polishes, glazes, or rubbing compounds. Do not use mechanical cleaners or polishers. Do not use terrycloth, cloth, or paper towels. Do not rub the finish vigorously, this will burnish the paint finish, causing a permanent shiny spot. Shiny spots cannot be removed.

Do not use commercial car wash facilities or their shine enhancement products. Most car wash brushes, large mechanized "towels," and shine enhancement products can damage matte paint.

Remove foreign substances such as insect remains, tar, and road debris using a soft applicator and a mild solvent; saturate and soak area before cleaning—rub lightly.

Hand-wash with a soft wash mitt and mild cleaning product safe for matte paint. Use microfiber cleaning cloths with alcohol-based window cleaner for basic surface clean-up.

GLOSS BLACK FINISH

T-REX Grilles with Gloss Black Powder Coated Finish may be washed regularly as you would when caring for your vehicles finish using soap and water. T-REX grilles should be waxed at the same time that you wax the vehicle. As a general rule, anything you use to clean your vehicles painted surfaces can be used to clean and maintain your T-REX grille. A Gloss powder Coated Finish can be cared for in the same fashion that you would care for your vehicles factory paint job. Never leave wet water spots as that may leave a blemish.