

## Guardian Comfort and Guardian Impact Jeep Liner

Congratulations on choosing the finest interior flooring kit available for your Jeep. The Comfort/Impact material is mold and mildew resistant, easily cleaned with water & household cleaning chemicals and extremely resistant to most chemicals.

- **Kit Contents:** Driver side front floor, passenger side front floor, rear passenger floor, heat shield material, hook fasteners, and instruction sheet.
- **Tools needed:** Phillips screwdriver, utility knife, soap, water, and rubbing alcohol.

**WARNING:** The use of front floor mats is not recommended with Comfort or Impact floor kits. If floor mats are used, it is imperative to re-use the removable retention hooks from the factory carpet, installed to the manufacturers specifications. Do not use floor mats or liners with Impact Kits, do not use floor mats or liners with Comfort Kits without retention hooks. **\*\*Please retain these instructions for future reference in your vehicles glove box\*\***

**DON'T REMOVE YOUR SEATS!** Our kits and your factory carpet are precut to make removing your seats unnecessary.



## Guardian Comfort and Guardian Impact Jeep Liner

### PREPARATION

1. Read all instructions before beginning installation.
2. Remove old Jeep flooring material (if equipped).
3. Wash and dry the floor pan areas thoroughly.
4. Place hook fasteners on each piece of loop sewn on the back side of the Comfot/Impact.
5. Pre-install provided heat shields on underside of the two front pieces in areas using locator marks.

**Note:** Passenger side heat shields is the larger of the two pieces.

**IMPORTANT:** Jeep floor should be at least 68°F (20°C) for maximum adhesion. Clean all areas with rubbing alcohol before applying tape. When removing backing, do not touch adhesive. If both front and rear kits were purchased be sure to install the rear cargo area first.



### INSTALLING FRONT FLOOR PIECES


6. Adjust the front seats to the rear most position to allow maximum clearance for installation. Place front floor pieces into place. Tuck under console and around seat brackets as shown.

(**Tip:** removing bolts from rear and/or front cup holders will allow console to lift up and position liner underneath easily – Reference picture on Step 8)



## Guardian Comfort and Guardian Impact Jeep Liner

7. Once properly aligned, pull back part to access the two pieces of hook fastener. Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment. Repeat for other front floor piece.

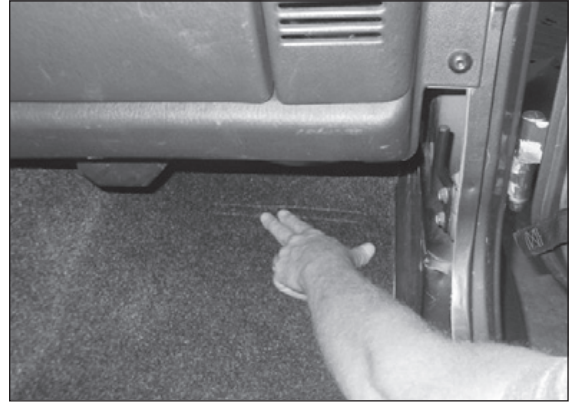

---

### INSTALLING REAR FLOOR PIECES

8. Adjust the front seats to the fully forward and tilted up (passenger entry) position. Loosen the two screws located in the bottom of the cup holders on the rear of the console if equipped. Next place the rear floor piece into place.



## Guardian Comfort and Guardian Impact Jeep Liner

9. Tuck the part under the console and around the front seat brackets as shown.



10. Next lift the floor piece from the outside of the vehicle toward the center to access the hook fastener. Clean surface with alcohol then remove the film backing from both pieces and roll the floor back into place. Firmly press the top surface to ensure adhesive attachment.

11. Now fit and tuck part around seat brackets, roll bar, and seat belt mounts. Repeat for opposite side of vehicle.

12. Retighten the two console screws located in the bottom of the cup holder.



## Guardian Comfort and Guardian Impact Jeep Liner

### CLEANING INFORMATION

The mildew resistant Bed Mat foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your Bed Mat will remain serviceable for as long as you own your truck.

**Cleaning your Bed Mat is easy:**

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch, etc. Due to the fact that water will not harm the Bed Mat, pressure washing is also an effective way to clean a soiled Bed Mat.
2. Although most acids will not harm the Bed Mat, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your Bed Mat use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The Bed Mat polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

Retain this cleaning information with your vehicle owner's manual for future reference.

## Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

www.huskyliners.com  
Phone: 800-344-8759  
Email: customerservice@huskyliners.com



**GUARANTEED...FOR LIFE.**