

## **MODEL SPECIFIC GUIDE** Hidden Hinge Version

Model 2086 Ford F150 Ext/Crew Cab 5.5' Short Bed 2004-2008




Form # AS2086II Created March 2012 For Warranty Issues, Contact UnderCover Directly (866) 900-8800 www.undercoverinfo.com



## RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 39 3/4" from the back side of the bulkhead to the front edge of the bracket.

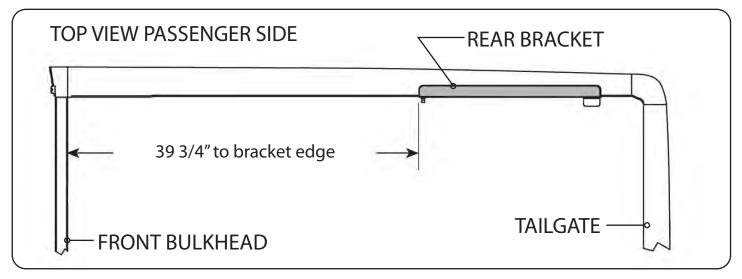

## **RE: Step 3 on the Quick Start Guide**

Measurement for the front mounting bracket is 17 1/8" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

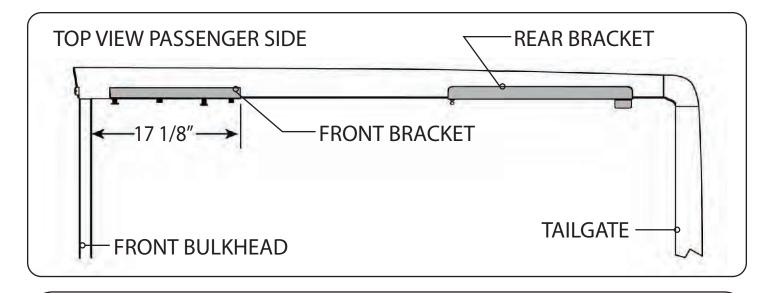

UnderCover, Inc. P.O. Box 620 Rogersville, MO 65742 (417) 753-8000 (866) 900-8800

www.undercoverinfo.com sales@undercoverinfo.com