

Sharp Boards LLC  
840 NW 24<sup>th</sup> Court  
Ocala, FL 34475  
1-352-840-9696

**SBR240**


1995-2001 Ford Explorer

Package includes

8 Brackets

1 Bolt pack

1. You will need to make marks along the pinch weld where you drill holes to attach the bracket to the vehicle. (The marks should be equally spaced.)
2. Hand tighten the 5/16 Hex bolt through the holes that you just drilled.
3. Tek screw the top of each bracket to the sidewall using two tek screws per bracket.

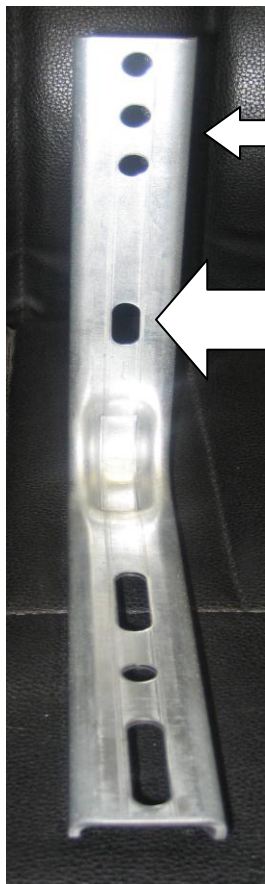

Step #3 Use tek screws in two of the three holes shown here

Step #2  
5/16" hex bolt