

Sharp Boards LLC

840 NW 24th Ct. Ocala, FL 34475

Toll Free 877-864-0644

www.sharpboards.com

INSTALLATION PACKAGE

Installation Instructions	1
Bracket	8

Necessary Tools

Measuring Tape
Ratchet wrench with 1/2" socket
Combination wrench
Variable speed drill w/ 3/8" hex head drive
Safety glasses

STEP One : Determine proper bracket placement

Fig A

- 1) Equally space brackets so they can support the weight.
- 2) Mark and drill holes into the pinchweld.



STEP Two : Loosely bolt brackets to vehicles

Fig B

- 1) Bolt the brackets on by hand tightening the bolt through the pinchweld and into the lower hole in the bracket.
- 2) Place the running board on the brackets with the support Bolts falling thru the slots in the foot of the bracket
- 3) Hand tighten the board to the brackets using 5/16" lock nuts
- 4) Slide board in or out to desired location
- 5) Tighten down lock nuts under running board

STEP Three : Tighten brackets

- 1) Push board tight against vehicle and tighten bolts Fig C
- 2) Drive self-tapping screw through top of bracket and into sidewall of truck to keep bracket in place.
- 3) Check that all brackets are tight before stepping on boards.

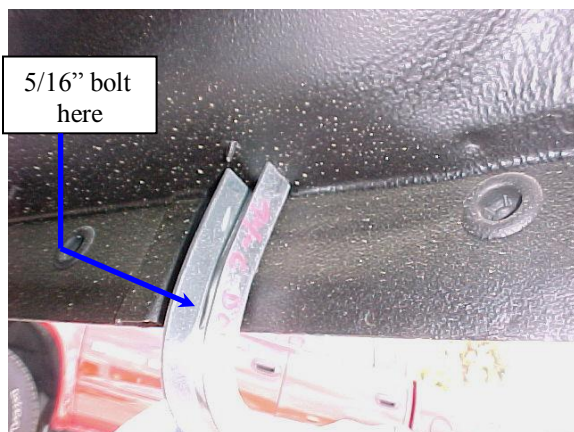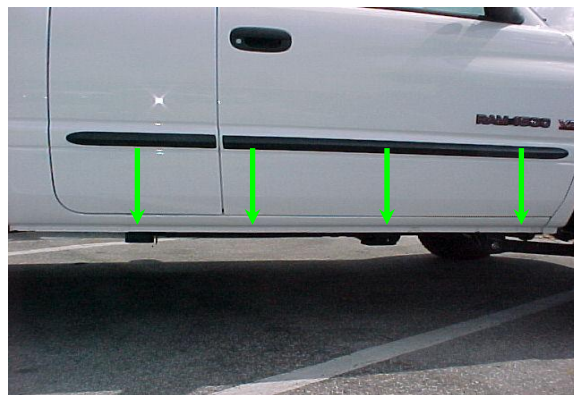

SBR310
94-01
Dodge Ram