



840 NW 24th Court, Ocala, FL 34475
877-864-0644 - www.sharpboards.com

DODGE Durango 98-03 SBR320

Installation Package	
Installation Instructions	1
Bracket	8
Bolt Pack	1

Necessary Tools	
Measuring Tape	
Ratchet wrench with 1/2" socket	
Combination wrench 1/2"	
10mm Socket with extension	
Safety Glasses	
5/16" Drill Bit	

STEP ONE: Mount hanger brackets (Fig B)

- 1) You must equally space hanger brackets apart.
- 2) Position hanger bracket, and tec screw to vehicle
- 3) Now drill out holes thru pinch weld
- 4) Thread a 5/16" x 1" hex bolt through the pinchweld and tighten a 5/16" nut to plate. (Fig B)

STEP TWO: Loosely bolt brackets to vehicles

- 1) Bolt the brackets on by inserting a 5/16"x1" hex bolt through the top hole in the hanger bracket and thru the 1" slot in the bracket, hand tighten a 5/16" nut to secure. (Fig C)
- 2) Hand tighten the board to the brackets using 5/16" lock nuts
- 3) Slide board in or out to desired location
- 4) Tighten down lock nuts under running board

STEP THREE: Tighten Brackets Fig C

- 1) Push board tight against vehicle and tighten bolts.
- 2) Drive tec screw thru bracket and into sidewall To keep bracket tight in place.
- 3) Check that all brackets are tight before stepping on boards.

Fig B

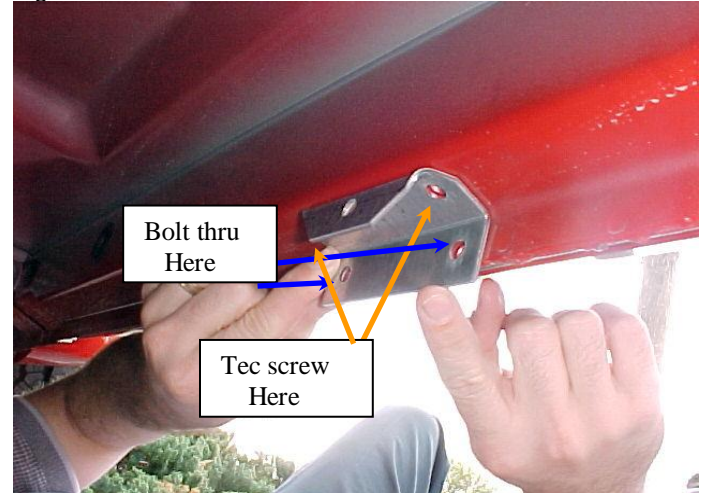


Fig C

