



**B & V PRODUCTS 2015-20 F-150/ 2014-2020 RAPTOR/2017-
2020 F253,F350 SUPERDUTY
LOCKING CONSOLE LID
PART # 7045-2000-15**

***NOT COMPATIBLE WITH FOLD DOWN CENTER CONSOLES, ONLY FIXED ANF FULL CENTER CONSOLES**

www.bvnproducts.com




MADE IN THE USA

TOOLS REQUIRED: 3/8",5/16"socketsandratchet, cordlessdrill, 5/32" drillbit.


10/2/23

Notes to the Technician/Installer:

Do not attempt the installation of any B&V product without first reading the detailed instructions. **B&V will not warrant damaged parts or the vehicle due to altered installation procedures.**

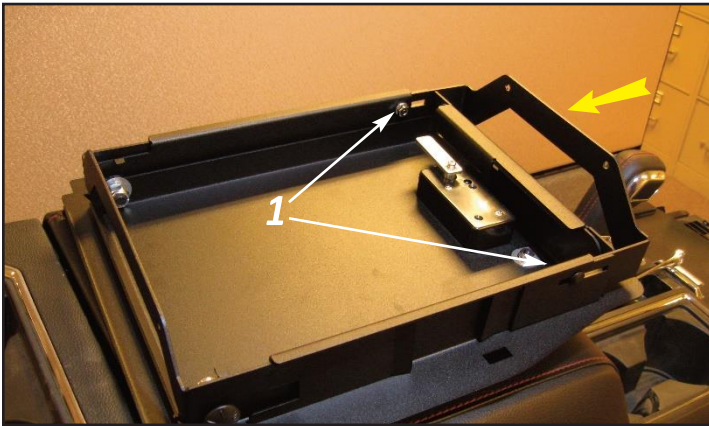

1. Cover the seats with a protective cover prior to beginning the console installation. Make sure that the preinstalled serrated hex nuts are loose in order to side the front portion of the security door mounting frame towards the rear.

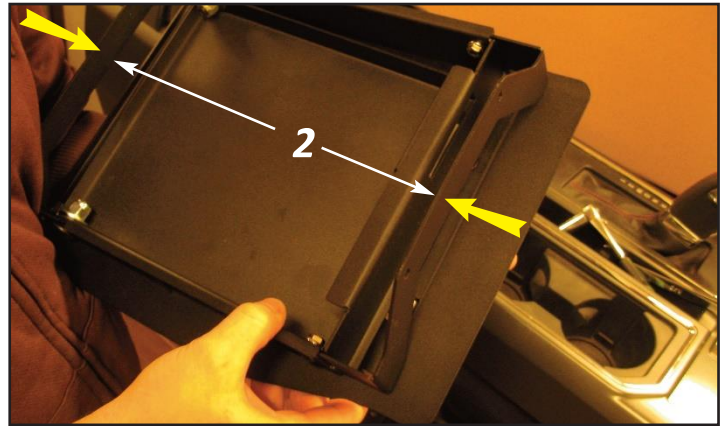


2. With the door in the open position, push the front and rear portions of the security door mounting frame in as far as they will go.




3. Hold the security door assembly at an angle and begin aligning it into the console well as shown.




4. Finished alignment.

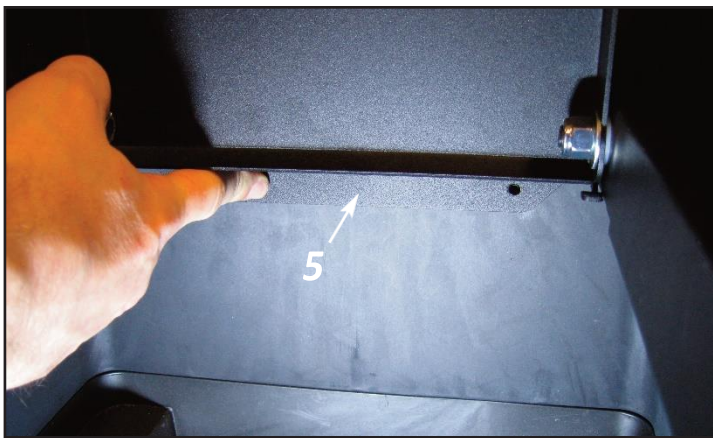

5. Push the rear mounting bracket back until it makes contact with the console well.

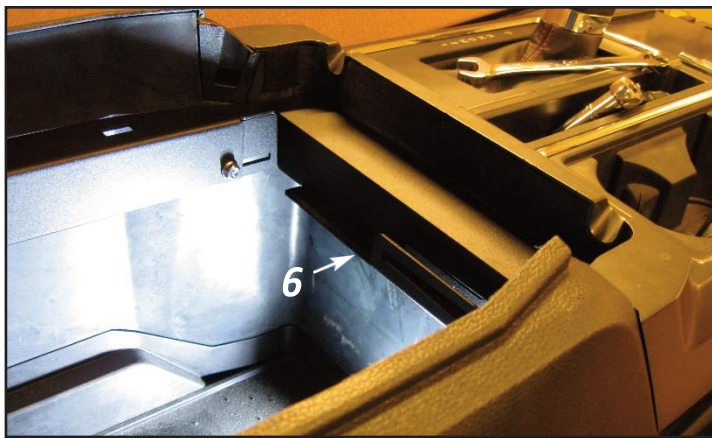


6. Push the front mounting bracket forward until it makes contact with the console well.

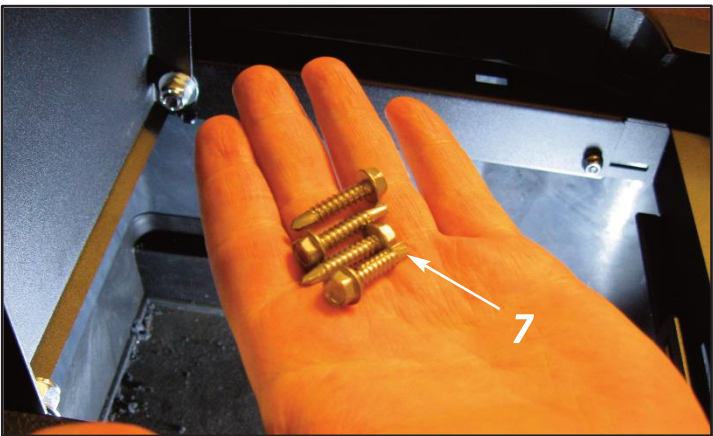

7. Locate the self-tapping screws supplied in the hardware kit. Use a 5/32" drill bit to drill through the existing holes in the front and rear mounting brackets and through the console well.



8. Install the self-tapping screws into the four holes drilled in the previous step and tighten until the brackets are secure. **Do not over tighten or you could strip out the mounting holes.**

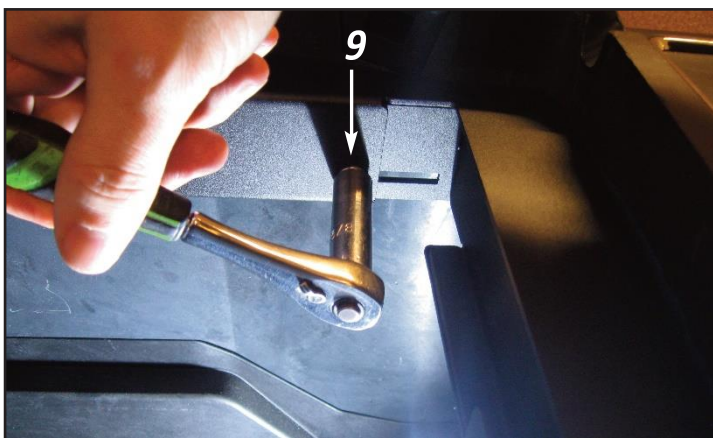


9. Tighten the preinstalled serrated hex nuts at this time with a 3/8" socket or wrench.



10. Use a 9/16" or 14mm wrench to tighten the security door enough that it will not close on its own, but rather require slight pressure to close.



11. Finished installation.

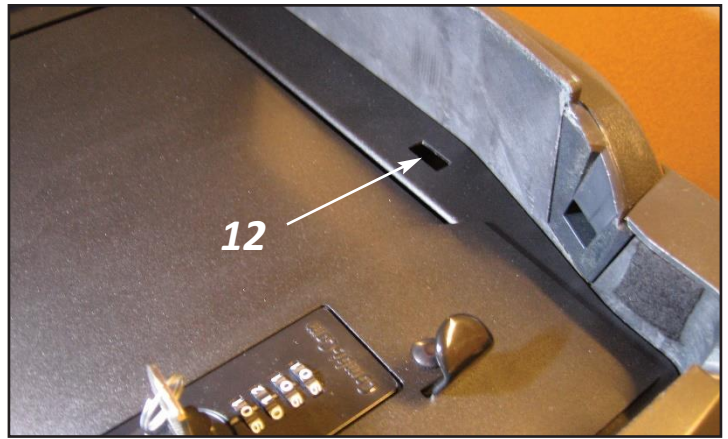

12. Closeup showing the USB access opening location.

For the owner: Follow the supplied detailed instructions shown below and choose your lock combination.

Warranty. B & V products (Manufactured by Fralo Industries) are warranted against defects in workmanship for a period of one (1) year from the date of purchase. Fralo's liability under this warranty is limited to the repair or replacement, at the option of Fralo, of the products or parts thereof covered by this Warranty, provided that Buyer provides all necessary materials. Fralo's obligation under this warranty shall not arise unless written notice of a warranty claim is made to Fralo. Fralo may require that the product in question be delivered for inspection, freight prepaid, at Fralo's office in Erie, Pennsylvania, or some other location designated by Fralo. THE REPAIR OR REPLACEMENT WARRANTY HEREIN SET FORTH IS THE EXCLUSIVE WARRANTY GIVEN BY FRALO FOR ITS GOODS. THIS WARRANTY IS GIVEN IN LIEU OF ANY OTHER WARRANTIES, WHETHER WRITTEN OR ORAL, EXPRESS OR IMPLIED. ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE ARE HEREBY EXPRESSLY EXCLUDED BY FRALO. FRALO NEITHER ASSUMES, NOR DOES IT AUTHORIZE ANY OTHER PERSON TO ASSUME ON ITS BEHALF, ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF ITS GOODS

Part #7045-2000 -15

Quantity:	Description:	Part Number:
1	Console Security Door Complete	7045-2100-15
1	Installation Hardware Kit	7045-2902-15
4	Self-Tapping Screws	1999-0341-00
1	Lock Key	7999-7700-00



Setting your own combination: The opening combination code is preset to 0-0-0-0.

1. Turn the knob clockwise 90 degrees to the open position. The indicator in the window above the knob will turn from red to green.
2. Turn change screw on back of lock to "R" position.
3. Set your own desired combination.
4. Return the change screw back to the "F" position. The lock is now set to open using the desired fixed combination.

