

Installation Instructions for IB14DJI5

by APS Auto Parts Specialist Inc.

Application: FOR 2005-2018 Nissan Frontier Crew Cab
Estimated Time: 1 to 2 hours



Disclaimer: Instructions intended for persons aged 18+ please do not attempt without adult supervision. Instructions are not intended to replace professional installation. Damage from improper installation, misuse or modification to the product voids the manufacturer's warranty.

PARTS LIST:

Item	QTY	Description	Item	QTY	Description
#01	2	Running Board(use for left or right)	#06	12	8mm Hex Nuts
#02	3	Driver Front Mounting Brackets(DF/C/RM)	#07	12	M6 Nylon Lock Nuts
#03	3	Passenger Front Mounting Brackets(PF/C/RM)	#08	12	M6X1.0 - 20mm T-Bolts
#04	12	8mm x 24mm x 2mm Flat Washers	#09	12	M6 Flat Washers
#05	12	8mm Lock Washers			



DFM/DCM/DRM



PFM/PCM/PRM


PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- On the passenger/right side, if equipped, remove the existing running board by removing the four nuts holding mount to inside of body. Install the two mounting brackets with the removed stock nuts, leave nuts loose for now. **NOTE:** Holes in brackets are off set, install with holes towards front of truck, passenger/right side shown.
- If not equipped with factory running boards – then use the four supplied 8mm nuts, washers & lock washers to install mounting brackets to truck.
- Once all (3) Brackets have been installed, Select a Running Board. Slip (6) M6 T-Bolts into each bottom channel (**Figure 2**). Carefully position the Running Board onto the Mounting Brackets. Attach the Running Board to the Mounting Brackets with (2) M6 T-bolts, (2) M6 flat washers and (2) M6 nylon lock nuts, (**Figure 3**). Do not tighten hardware at this time.
- Repeat procedures 2 & 4 for driver/left side.
- Level and adjust Running Board as desired and tighten. **NOTE: Torque all M6 nylon lock nuts to 7 lb-ft.**
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For Polished Finishes: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.


For black finishes: Mild soap may be used to clean the Running Board.

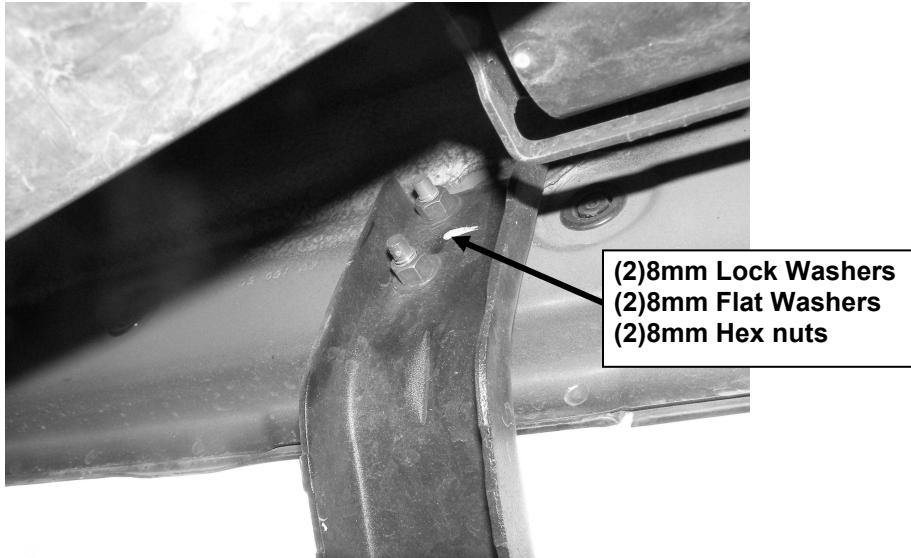

(Fig 1) Passenger side Bracket(example only)



(Fig 2) Slip 6mm T-bolts into the bottom channel

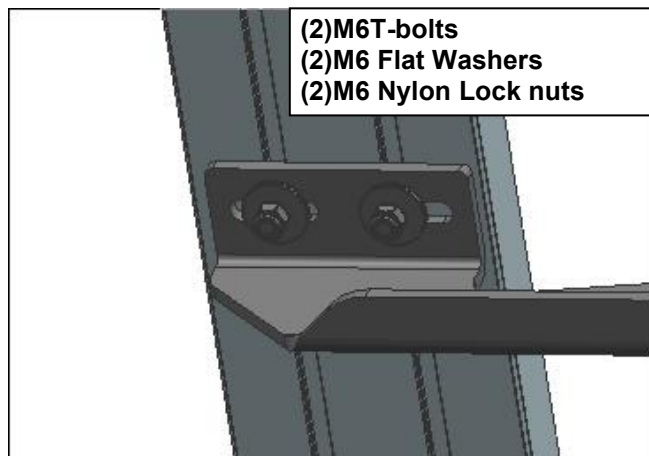

(Fig 3) Bracket Installation