


PUTCO®

MOLLE PANELS

- MODULAR LIGHTWEIGHT LOAD CARRYING EQUIPMENT -

INSTRUCTION GUIDE

CHEVROLET

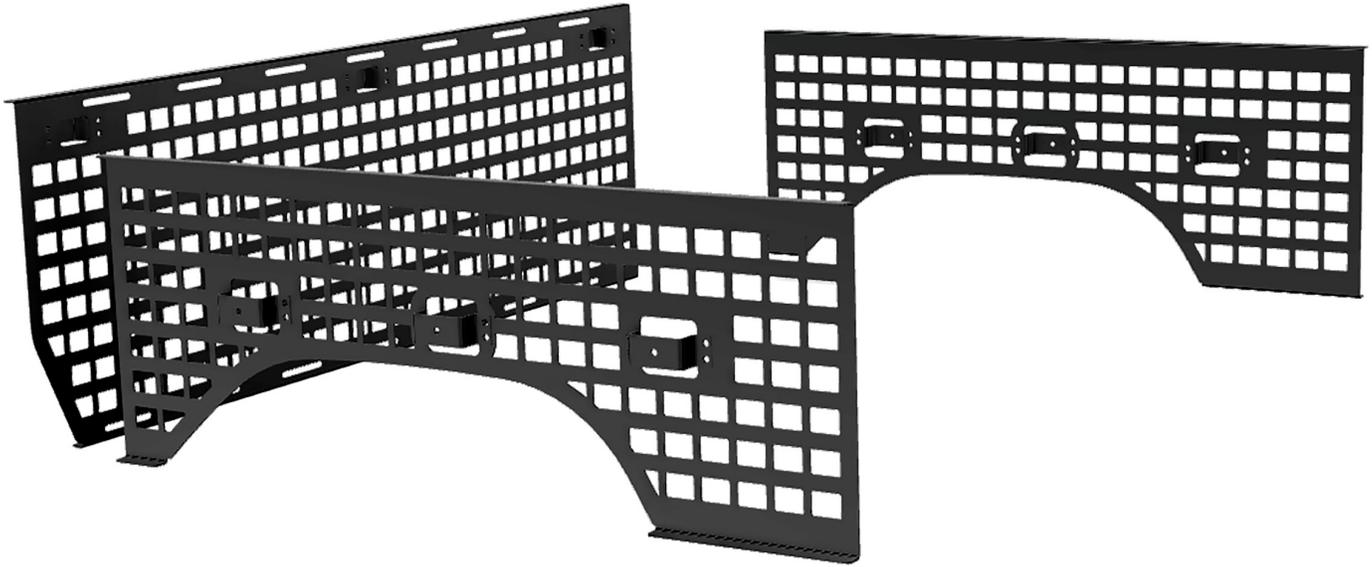

Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

REQUIRED TOOLS

3/16" HEX KEY



T30 TORX DRIVE



10MM WRENCH



FLATHEAD SCREWDRIVER




CONTENT LIST

DESCRIPTION	QTY
Molle Front Plate	1
Molle Side Plates	2
Brackets	9
M6 Bolts	36
Tabbed Washer	9
5/16-18 X 2" Button Head Bolt	9
Threaded Nut Plate	9
Rubber feet	4
Jam nuts	4



INSTALLATION INSTRUCTIONS

- 1** Begin by locating and removing the plastic oval covers from the bed using a small flat-head screwdriver.
- 2** Next, loosely assemble a 5/16 bolt, tabbed washer, and nut plate to each bracket as shown.
- 3** Grab one of the assembled brackets and insert the nut plate into one of the required bed slots. The nut plate will have to be inserted at an angle in order to fit. During this process, use caution so you do not loosen the nut plate and drop it behind the slot! Next, orient the nut plate so that it is perpendicular and centered behind the slot, then push the tabbed washer against the bed side so that the tabs fit into the slot. If aligned correctly, the tabs should prevent the nut plate from spinning. While keeping the tabbed washer in the slot pull back on the bolt and begin to tighten. Do not fully tighten, as the position of the bracket may need to be adjusted. Repeat this process for the rest of the required slots in the bed.

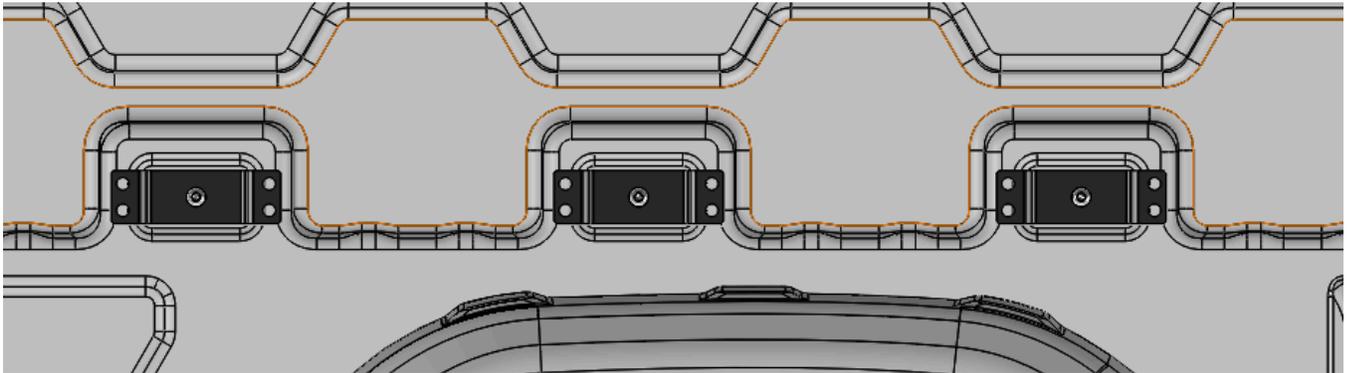


- 4** Attach the side plates to the brackets using the included M6 bolts. The brackets may have to be adjusted to make get the holes to line up. The installed side plate should look like the figure below.





- 5** Next, loosely assemble to front plate. Begin by loosely screwing a jam nut onto each of the rubber feet, then loosely screw the rubber feet into the riv-nuts in the bottom bend of the front plate.
- 6** Fasten the front plate onto the brackets using M6 bolts.
- 7** Once the front plate is secured to the brackets, adjust the rubber feet so that they sit tight to the bed of the truck. This helps prevent vibration while driving. Once the feet are in the correct position, tighten the jam nuts to secure them in place. The fully installed front plate should look like the figure below.

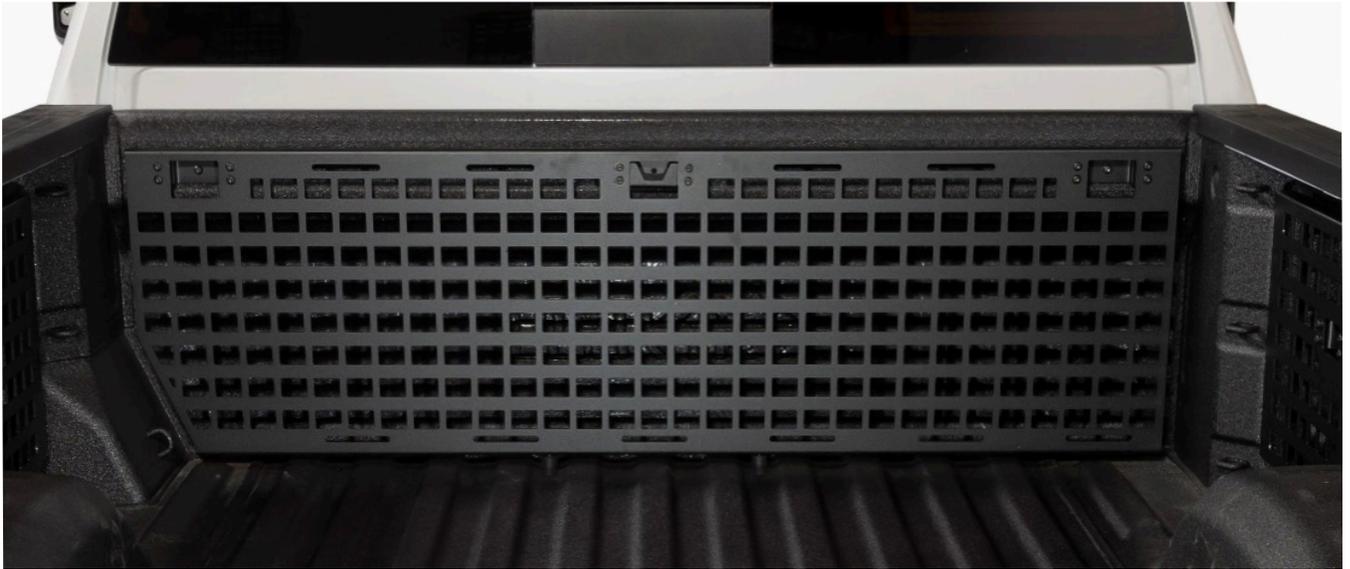

- 8** After all the plates are in place, go back and make sure that all the bolts are tight, including the ones in the center of the bracket. All the bolts should be snug, but do no overtighten!

Your new MOLLE Panels are now successfully installed on your vehicle!